

ROTATING/REPLACING SQUEEGEE BLADES

FOR SAFETY: Before working on machine, park machine on level surface, turn off machine and remove key. Each squeegee blade has four wiping edges. When blades become worn, simply rotate the blade end-for-end or top-to-bottom. Replace blades if all four edges are worn.

A. To remove blades, fully loosen the two outside knobs. This will separate the spring loaded blade retainer from the squeegee frame.

Tip: To loosen knobs quickly, squeeze the blade retainer and squeegee frame together as shown.

B. Rotate blade to a new wiping edge.

