



CONTROL BOARD REPLACEMENT BATTERY SELECT MODE

Model: T5, T7



Replacement control board must be programmed to accommodate battery type discharge rate. Failure to properly program new control board may result in battery damage. Perform the Battery Select Mode procedure as described below:

BATTERY SELECT MODE:

Setup Time: 2 minutes

TOOLS REQUIRED: None

Battery Select Mode Procedure

1. To enter the battery select mode, press and hold the solution flow increase button (+) while turning key switch ON. Release the solution flow increase button when one of the LED's on the battery discharge indicator begins to blink.
2. Refer to the battery selection settings as shown below.
3. To select proper battery, press the solution flow decrease button (-) to advance selection.
4. Turn key switch OFF to save setting.

T5 Model

Solution Flow Increase Button

Solution Flow decrease Button

Battery Discharge Indicator LED's

Blinking LED	Region/Battery Type
Green	Global/GEL
Green	TNV/WET
Yellow	Europe/WET
Red	Global/WET (default)

T7 Model

Solution Flow Increase Button

Solution Flow decrease Button

Battery Discharge Indicator LED's

Blinking LED	Region/Battery Type
Green	Global/GEL
Green	TNV/WET
Yellow	Europe/WET
Red	Global/WET (default)