



No: 1945

Machine: 265

Published: 3-78

INSTRUCTION BULLETIN

INSTALLATION INSTRUCTIONS FOR COIL STRAP REPLACEMENT KIT NO. SK1945

It is recommended that the ignition coil be relocated to the left rear corner panel, where it will be better protected from heat.

This kit provides all parts and hardware to replace the coil strap and high tension coil wire.

See Fig. 1 for drilling holes in left rear corner panel.

REMOVAL


1. Disconnect battery.
2. Remove wires from coil (make sure to mark each wire either + or - posts).
3. Remove old coil strap from engine and discard.

INSTALLATION

1. Install coil in new coil strap and tighten in place.
2. Mount strap to left rear corner panel where new holes were drilled.
3. Connect wires to proper posts and tighten.
4. Replace coil wire (coil to distributor cap).
5. Connect battery.

TENNANT COMPANY
P.O. Box 1452
Minneapolis, Minnesota 55440

Printed in U.S.A.

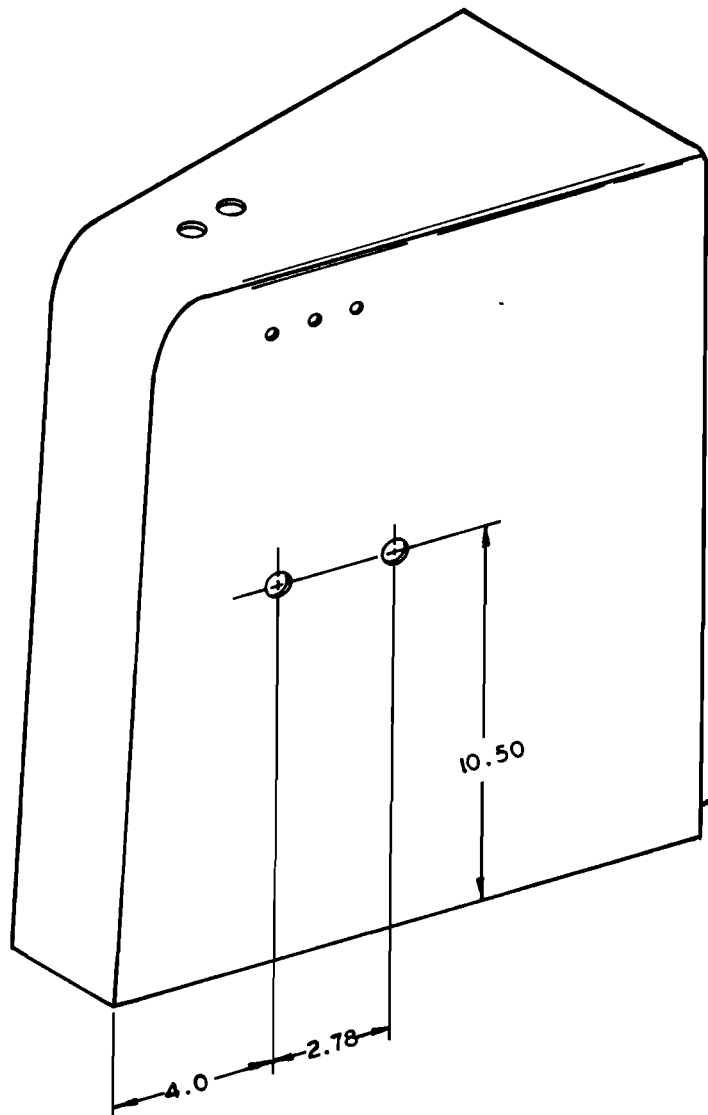

Drill two $13/32$ " dia. holes in the left rear corner panel as shown here.
Mount the new coil strap #54911-30 and coil in this location.