

## INSTRUCTION BULLETIN

No. 2106 Machines: 140 Gas, 140E Published: 2-84

Installation Instructions for Filter Box Seal Replacement Kit SK 2106.


This kit contains four strips of seal to replace seal 41584 on the front filter box cover. Please follow the step-by-step directions.

PROCEDURE:

1. Turn off the engine or motor.

CAUTION: Always turn off the engine or motor when working on the machine.

- 2. Remove the filter box front cover. Remove the one-piece seal from the cover.
- 3. Carefully clean the seal mounting surfaces.
- 4. The new seal is in four parts and has a self adhesive backing. Peel off the tape and press the new seal pieces into place on the filter box cover.
- 5. Check to make sure the seals are seated properly when the filter box cover is installed.

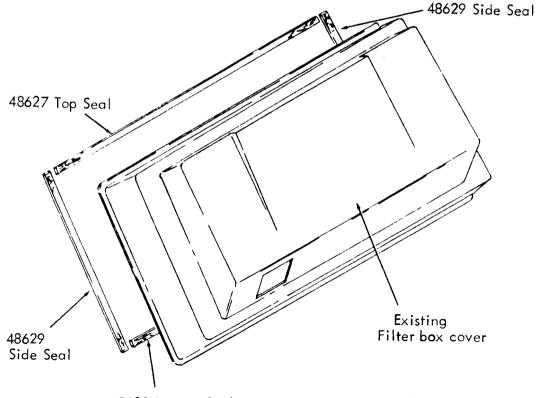

48628 Bottom Seal Fig. 1 - REPLACEMENT SEALS FOR FILTER BOX COVER

IB 2106(2-84) LITHO IN U.S.A.

page 1

## BILL OF MATERIAL FOR SK 2106

TENNANT Part No.	Description	Qty.
48627 48628	SEAL, Foam, self adhesive SEAL, Foam, self adhesive	1
48629	SEAL, Foam, SELF ADHESIVE	2

TENNANT COMPANY P. O. Box 1452 Minneapolis, MN 55440 (612)540-1200

IB2106(2-84)LITHO IN U.S.A.

•