



TECHNICAL SERVICE BULLETIN

No. 03800-024
Machine: 800/810
System: Gas / Lp fuel
system 3.0 GM eng.

Zeems fuel system component parts list. Fuel injector troubleshooting. 04/03

PRODUCT CHANGE DESCRIPTION: There has been some confusion and misprints in the 800/810 parts manuals and fiche pertaining to the gas and Lp fuel system components.

Field reports indicate some LPG injectors have stuck either open (leaking Lp fuel hissing sound) or closed (no fuel delivery). Do not tap test the injector. Replace the injector and then contact the Warranty department for a return authorization number. We need the erratic injectors returned in order to receive credit. The 3.0 Gm engine assemblies will change to a different gas and Lp injector when supplies become available.

Use the following parts list when ordering fuel system components.

DESCRIPTION	800/810 GASOLINE ENGINE	800/810 LP ENGINE
ECU, with mounting screws	371901, closed loop 391890	371892, closed loop 391891
Injector	371899	371893
Injector o-rings, lp only	na.	371665
Map Sensor	371654	371654
Air Temp Sensor	371653	371653
Throttle body w/Ecu	371896	371894
Throttle body wo/Ecu	371897	371895
Throttle body w/actuator only	371902	371669
Regulator / secondary	na.	371750
Vaporizer / Primary	na.	371749
Gasket set	371898	371647
Coolant Temp sensor	393991 (old), 371764 (new)	393991 (old), 371764 (new)
Wiring harness	371921	371921
O2 Sensor	391892	391892
O-rings, gas regulator and injector	371649	na.
Pressure Regulator, gasoline with hose and screws	371908	na.
Gasoline filter	371662	na.
Fuel pump, gas with fittings	371661	na.
Gas connector air temp sensor	371715	371715
Connector coolant temp sensor	371714	371714
Connector lp, injector	na.	371717

Connector gasoline, injector	371716	na.
Connector, governor	371718	371718
Connector MAP sensor	371713	371713
Plate injector mtg. w/screws	371651	371651

FOR SAFETY: Before leaving or servicing machine, stop on level surface and set parking brake. Then turn off machine and remove key.