


Technical Service Bulletin

MODEL(S) AFFECTED:	Strive, 265XP
SUBJECT:	Throttle Potentiometer Set Screw. If you have experienced any abnormalities with the machine's throttle, inspect the potentiometer's set screw. The screw should be seated against the flat side of the shaft (see photo below). If the set screw is not properly seated and becomes loose it may create a condition where the machine may move on its own.
PURPOSE:	To achieve proper machine operation.
NOTES:	Use blue Loctite 242 to secure the set screw. If the potentiometer shaft does not have a flat side, it must be replaced (order p/n 609982). If the set screw is properly seated and the throttle continues to operate incorrectly, the orientation of the potentiometer may need to be adjusted.

Throttle Potentiometer

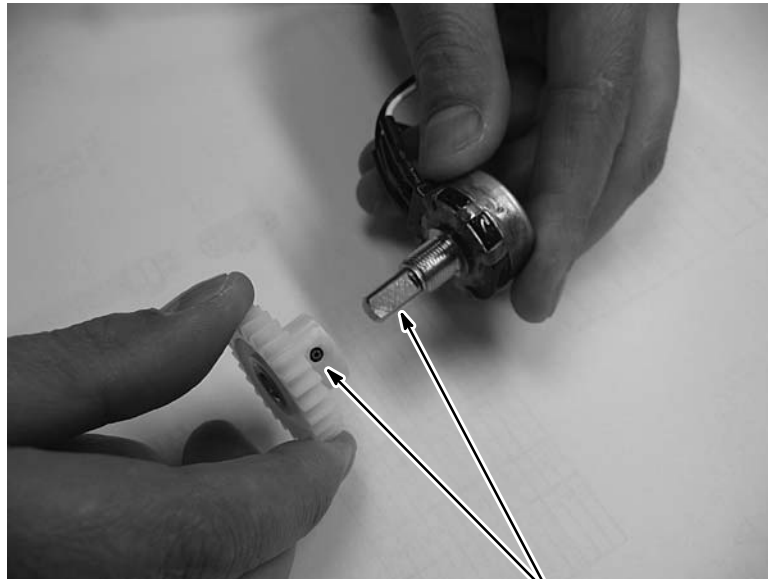

Make sure the set screw is aligned with the flat side of the shaft. Use a 1/16" Allen wrench to tighten set screw.