



1



Connect the battery to the charger and plug in every day after use or when the battery discharge indicator displays red.

⚠ WARNING

Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away. Keep covers open when charging.

⚠ AVERTISSEMENT

Les batteries émettent de l'hydrogène. Ce gaz est susceptible d'exploser ou de s'enflammer. Évitez toute étincelle et toute flamme nue à proximité des batteries. Laissez les capots ouverts pendant la mise en charge.

⚠ ADVERTENCIA

Las baterías emiten hidrógeno gaseoso. Existe peligro de incendio o explosión. Mantenga chispas y llamas alejadas de la máquina. Mantenga las tapas abiertas durante la operación de carga.



Raise the battery cover when charging.

Charge batteries in a well-ventilated area at room temperatures.



Let the battery fully charge before next use.



Leave batteries connected to the charger during weekends, holidays, and other off-days.

NOTE: AGM batteries do not have a memory effect and do not have to be completely drained before charging.

ON-Board

OFF-Board

2



Confirm the charger shows the charge complete flag (green LED) before next use.

3



If the charger goes into any error code (e.g. E02), report it to your Tennant Service Representative.



