



FaST Injector Assembly Conversion Kit

Models: T3 w/ FaST, Speed Scrub 17"-20" w/ FaST



This kit is intended for models manufactured before serial number 10346875, date code July 17, 2007. The purpose of this kit is to upgrade early models with improved FaST Injector Assembly.

INSTALLATION INSTRUCTIONS:

Installation Time: 1/2 Hour

TOOLS REQUIRED: 7mm, 10mm Wrench, Standard Screwdriver and Pliers.

FOR SAFETY: Before installing kit, drain recovery tank, park machine on a level surface and remove key.

1. To allow access for kit installation, the front of the shroud must be raised. To raise shroud follow steps a.) through e.):

a.) If equipped, remove the four screws that mount the shroud to the chassis (Figure 1).



Fig. 1

b.) Remove the two screws that mount the front of the shroud to the solution tank (Figure 2).

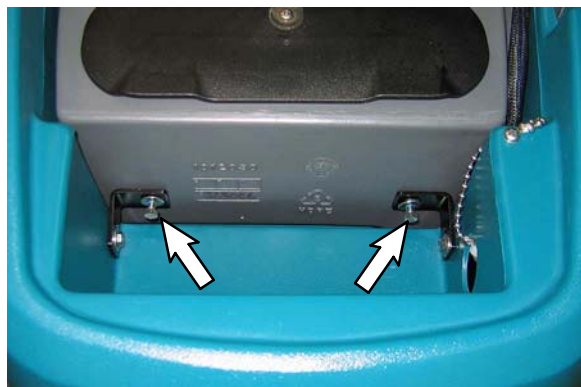


Fig. 2

Kit Contents

Part No.	Description	Qty.
1040001	Injector, Assy, .02 .0065	1
573073	Clip, Grip, Hose, 1.00-1.38, zn	2
1037228	Plate, Mtg, Blk	1
49697	Screw, Pan, Phl, M4x0.70x10, ss	4
339332	Nut, Hex, Lock, M4x0.70, NI, ss	4

- c.) Loosen the four screws that mount the rear of the shroud to the solution tank (Figure 3). DO NOT REMOVE SCREWS.

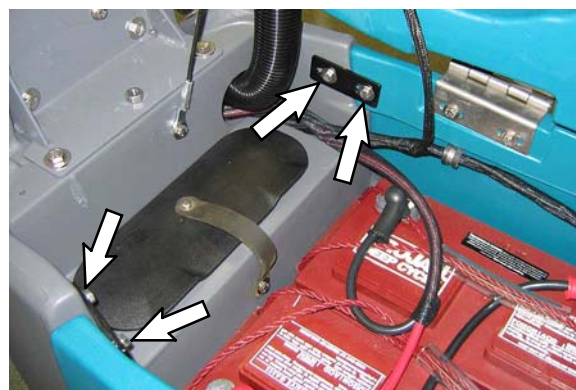


Fig. 3

- d.) Remove the two clamp screws that mount the wire harness to the shroud (Figure 4).

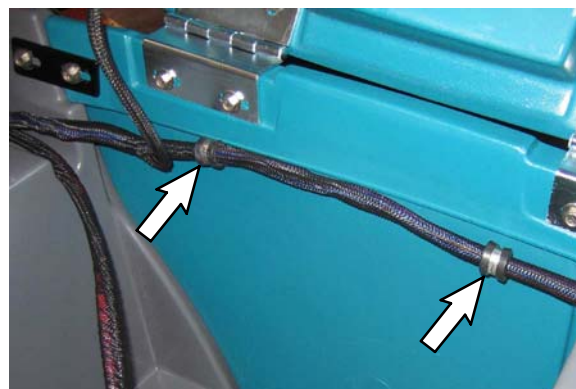


Fig. 4

FaST Injector Assembly Conversion Kit INSTALLATION INSTRUCTIONS - Continued

e.) Lift the front of the shroud to access the FaST injector assembly (Figure 5). For later models, pull shroud forward then lift.

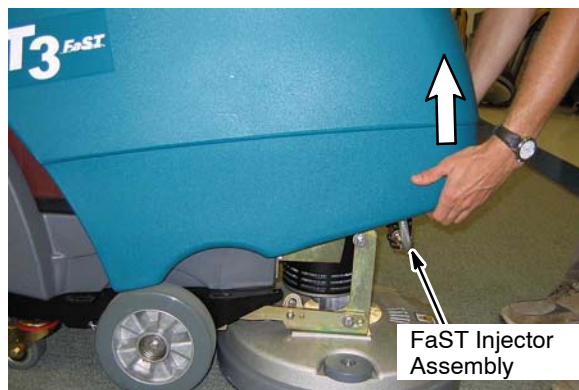


Fig. 5

2. Remove the old FaST Injector Assembly from the machine (Figure 6).

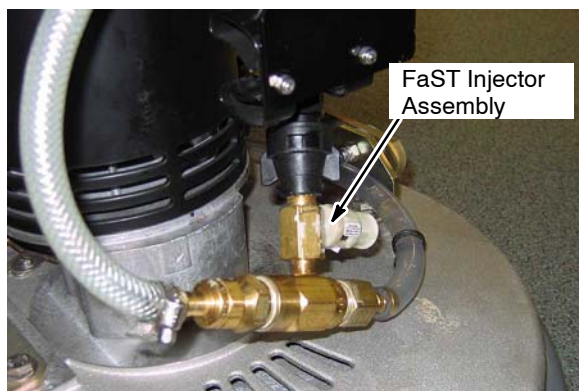


Fig. 6

3. Remove the two clips from the injector mounting bracket (Figure 7).

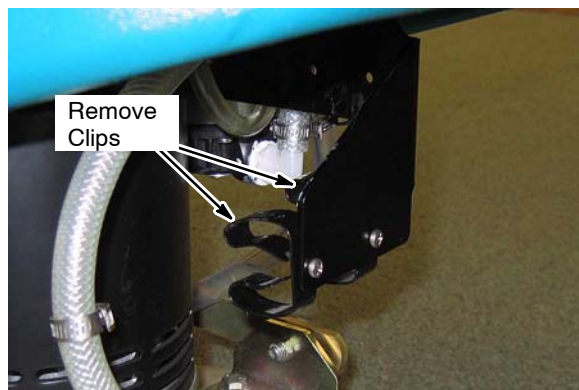


Fig. 7

4. Install the retrofit bracket/clip assembly supplied with kit (Figure 8).

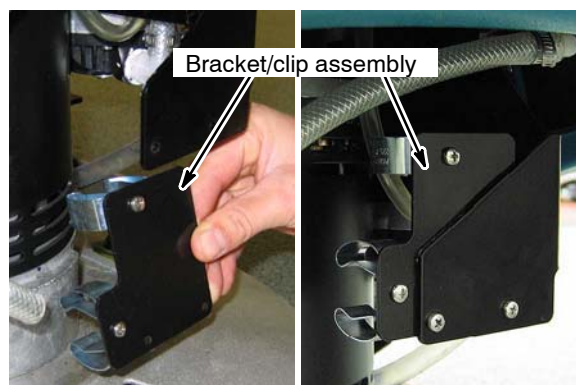


Fig. 8

5. Reconnect to hoses to the new FaST Injector Assembly as shown (Figure 9).

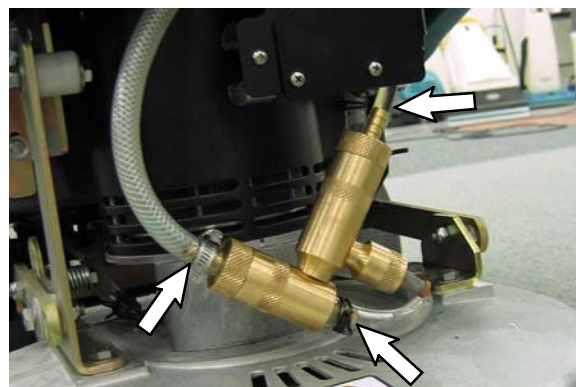


Fig. 9

6. Attach the new FaST Injector Assembly into the clips as shown (Figure 10).



Fig. 10

7. Reinstall the shroud and test the machine for proper FaST scrubbing.