

INSTALLATION INSTRUCTIONS FOR  
S-2500 VACUUM PAPER BAG ADAPTOR KIT (602.162.000)

## Installation Instructions:

1. Open vacuum door, and remove existing cloth bag.
2. Insert inlet assembly (Items 1, ~~2 & 5~~) onto existing hose cuff as shown in figure below.
3. Install paper bag (Item 3) -- NOT supplied in this kit (order part number 039.707.079) -- by forcing cardboard cuff of bag over threaded end of inlet assembly (Item 2).
4. Close vacuum door (change bag when performance becomes unacceptable).

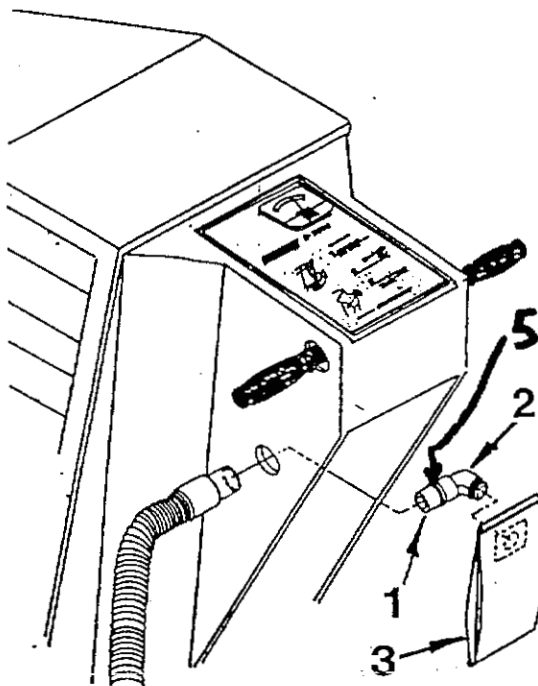


FIGURE 1

<u>Item</u>	<u>Qty.</u>	<u>Part Number</u>	<u>Description</u>
1	1	602.158.000	Pipe, Extension
2	1	602.157.000	Elbow, Street
3	(NOT INCL.)	039.707.079	Paper Bags (Package of 10)
4	1	602.160.000	Instruction Sheet
<b>5</b>	<b>1</b>	<b>28362</b>	<b>O-RING</b>