



POWER CUT-OFF WHEN CHARGING KIT


INSTALLATION INSTRUCTIONS: (Installation Time: 30 min.)

TOOLS REQUIRED: Large Phillips Screwdriver, Small Phillips Screwdriver, 8m wrench, 5.5m wrench, Utility Knife

FOR SAFETY: Before installing kit, disconnect positive (+) battery cable from batteries.

KIT CONTENTS

P/N.	Description	Qty.
600437	Switch, Roller 15A	1
601359	Plate, Switch Backing	1
578403000	Screw, M3x.5x20	4
601127000	Washer, Flat	2
579211	Nut, M3	1
140026	Washer, #6 Flat	4

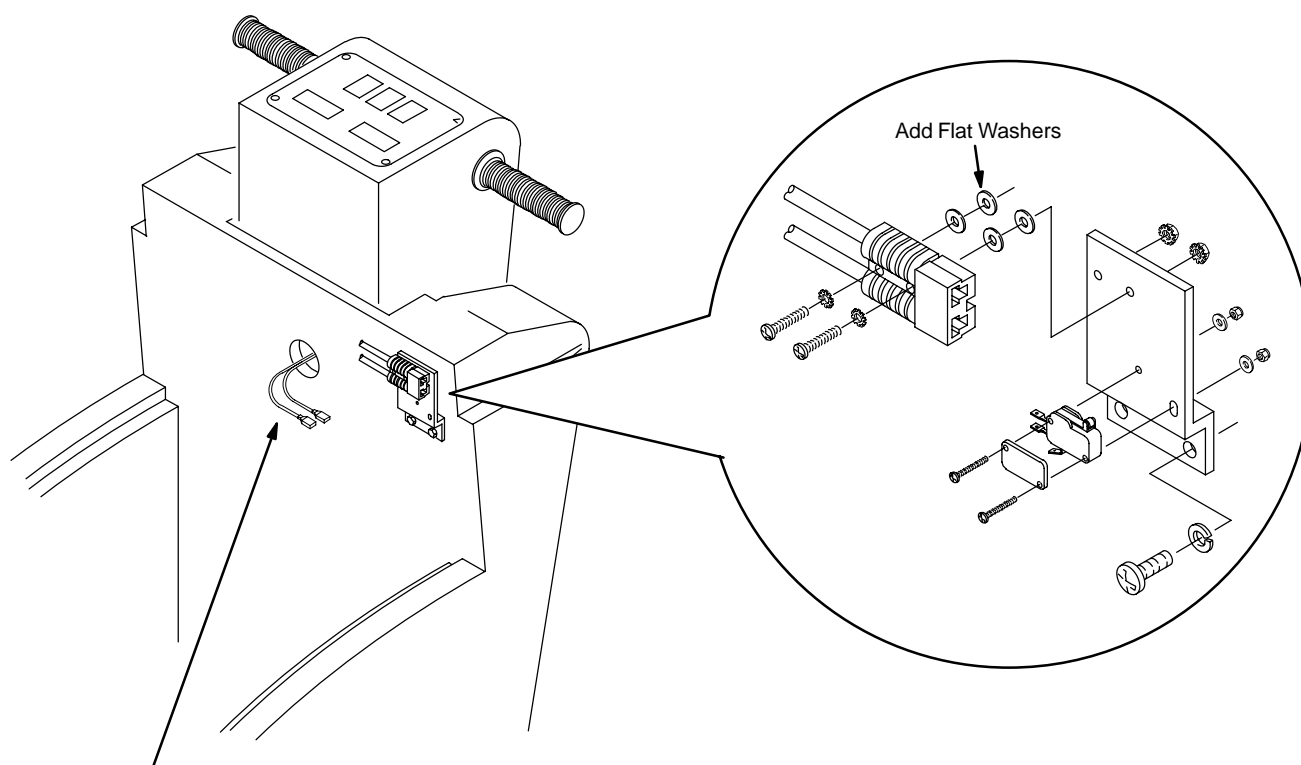

Locate main wire harness below control console, wires are wrapped in black plastic loom. Spread open loom and locate two red wires #10 and #34. They are connected together with a red jumper. Remove jumper and route wires #10 and #34 through hole as illustrated. It may be necessary to cut wire ties to free up wires.

