




GUARD & BATTERY DISCONNECT KIT

INSTALLATION INSTRUCTIONS:

TOOLS REQUIRED: Power Drill w/ 9/64" bit, Crimp Tool, Pop Rivet Gun, Philips Screw Driver & Vice Grips.

STEP 1: Position fan guard as shown. Drill two 9/64" holes into machine shroud as indicated and attach guard with (2) rivets provided.

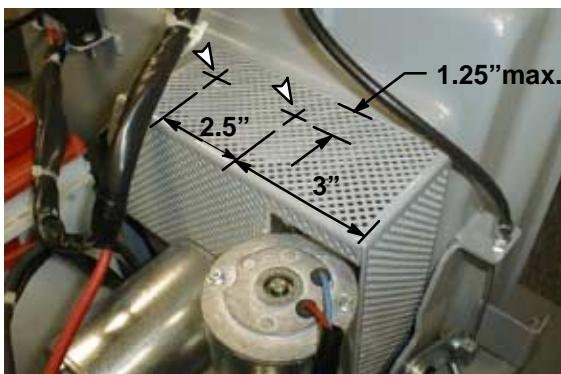

STEP 2: Remove existing belt support pin.



STEP 3: Install new belt support pin and attach belt guard with screw as shown, use a non-permanent thread lock.



Kit Contents:

P/N	Description	Qty.	P/N	Description	Qty.
606427	Fan Guard	1	606429	Cable T80003	1
140706	Rivet, pop 1/8	2	130155	Connector, Gray 50A	1
606428	Belt Guard	1	130142	Connector, Butt (red)	1
606517	Pin, Belt Support	1	130040	Wire-tie	1
579259	Screw, M4x7x12	1			

STEP 4: Cut off existing battery cable connectors and attach quick disconnect plug as shown (crimp tool is required). Attach new battery cables to battery and connect plugs together as shown.



STEP 5: Disconnect wire from safety switch.



STEP 6: Cut off terminals and connect wires together using red butt connector. Secure wire as shown using a wire-tie provided.

