Page 1 of 2



SKIRT AND SHIELD KIT

KIT CONTENTS		
P/N.	Description	Qty.
1005629	Skirt Assembly, Dust Control	1
1005645	Shield, Skirt	1
140350	Screw, #10X1/2 PANPHL	8
069767094	Banding, 67"	1
630613	Strip Skid, 64"	1

INSTALLATION INSTRUCTIONS:

(Installation Time: 30 min.)

TOOLS REQUIRED: Flat Screwdriver or 5/16 Nut Driver, Phillips Screwdriver, Drill with 7/64" Drill Bit

FOR SAFETY: When servicing machine, unplug cord from wall outlet.

- 1. Carefully lay machine on floor and remove old skirt from machine.
- 2. Position metal skirt shield on base as shown, with gap directly behind the front caster (Figure 1).

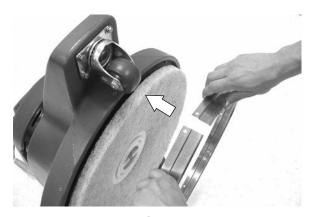


Fig. 1

3. Begining at one end of metal skirt shield, align shield with machine base, as shown. Use hole in metal shield as a template, and drill a 7/64" hole through base (Figure 2).





Fig. 2

4. Use 140350 screw to hold end of skirt shield in place. Do not overtighten screw (Figure 3).



Fig. 3

KIT NO. 613567 Page 2 of 2

INSTALLATION INSTRUCTIONS – Continued

5. Remove slack in metal shield, and continue around perimeter, repeating steps #2 and 3, until shield is completely attached to base (Figure 4).



Fig. 4

6. When shield is completely attached, gap should be directly behind front machine caster, as shown (Figure 5).



Fig. 5

- 7. Add new skirt to machine with (4) notches centered on front of machine as shown (Figure 6).
- 8. Stand machine upright, and adjust skirt height so that it is just touching floor the entire perimiter.

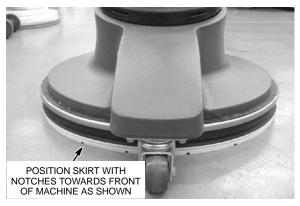


Fig. 6

- Install new band and clamp to secure skirt in place. Position clamp between rear wheels.
- 10. Install skid strip over band.