



# FaST™ WINTERIZE KIT

## PROCEDURE INSTRUCTIONS:

(Procedure Time: 30 min.)

**NEEDED:** RV Antifreeze, Small Cup, Tape

### KIT CONTENTS

P/N.	Description	Qty.
1002856	Coupling	1
63182	Hose, .38 ID x .56 OD x 6.00 LG	1

### WINTERIZE INSTRUCTIONS

1. Disconnect the FaST™ PAK from the system and connect the quick-disconnect fitting, supplied with kit, to the inlet line of the concentrate pump.
2. Using a small cup, drain as much of the FaST™ concentrate from the inlet line as possible. If the concentrate does not flow out of the line, simply squeeze and release the inlet hose several times (Figure 1).



**FIG. 1**

3. Install the hose, supplied with kit, onto the fitting. Using a small cup, pour RV anti-freeze into this hose until inlet line and hose are full. If the antifreeze does not flow through the coupling, squeeze and release the inlet line several times (Figure 2).



**FIG. 2**

4. Tape the inlet hose to the side of the FaST™ PAK holder to keep the hose vertical. Run the machine in the FaST™ mode until there is no foam coming from the machine. This indicates the RV antifreeze has been flushed through the concentrate pump. This step could take anywhere from 5 to 10 minutes depending on how much FaST™ concentrate was left in the inlet line after draining (Figure 3).



**FIG. 3**


5. Drain the solution tank and remove the water strainer cup located under the machine. Leave the cup and strainer off of the machine, and operate the machine in the FaST™ mode for 1–2 minutes. Clean the strainer if needed and reinstall strainer and cup to machine (Figure 4).



**FIG. 4**

## PROCEDURE INSTRUCTIONS – Continued

5. Remove the kit's quick disconnect fitting and hose from the concentrate pump inlet line. Connect the inlet line to the storage fitting on the FaST™ PAK bracket. This will prevent any contaminants from entering concentrate system (Figure 5).

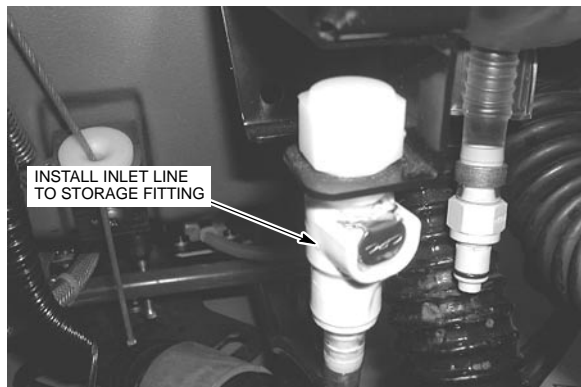

**FIG. 5**

### DE-WINTERIZE INSTRUCTIONS

1. Remove the concentrate line from the storage fitting and install the quick-disconnect fitting, supplied with kit, into the inlet line of the concentrate pump.
2. Drain as much of the excess RV antifreeze as possible. If the antifreeze does not flow out of the line, squeeze and release the inlet hose several times.
3. Install the FaST™ PAK into its holder. Remove the kit fitting from the concentrate line and connect the concentrate line to the FaST™ PAK. If the concentrate does not flow into the line, simply squeeze and release the inlet hose several times (Figure 6).



**FIG. 6**

4. Run the machine in the FaST™ mode for 5 minutes before adding water to the solution tank. Add water to the solution tank and the machine is now ready for service. It may be several minutes until the FaST™ system is back to the optimum operating condition.