

# VACUUM MOTOR WIRE TERMINAL KIT

This kit is intended for machines manufactured before November 1, 2005.

The purpose of the this kit is to prevent the possibility of potential terminal failure.

## INSTALLATION INSTRUCTIONS:

**Installation Time: 1/2 Hour**


**TOOLS REQUIRED: Wire Cutters, Wire Stripper, and Crimper Tool.**

**FOR SAFETY: Disconnect Battery Cables Before Installing Kit.**


KIT CONTENTS		
P/N	DESCRIPTION	QTY.
130101	Terminal, BC, Splice 12-10 GA	3
130100	Terminal, BC, Splice 16-14 GA	3
140300	Clamp, Cable, STL 0.50ID, Insulated	1
08712	Nut, Lock, m6x1.0, ss, nl	1
140000	Washer, Flat, 0.28B 0.62D .04, ss	1
130040	Tie, Wire, Nyl, 06.0L .12W	4

**Models:** 5500, 5520, Speed Scrub 2001HD, 2401, 2601

1. Remove wire loom and dispose.
2. Remove existing vacuum motor terminals.

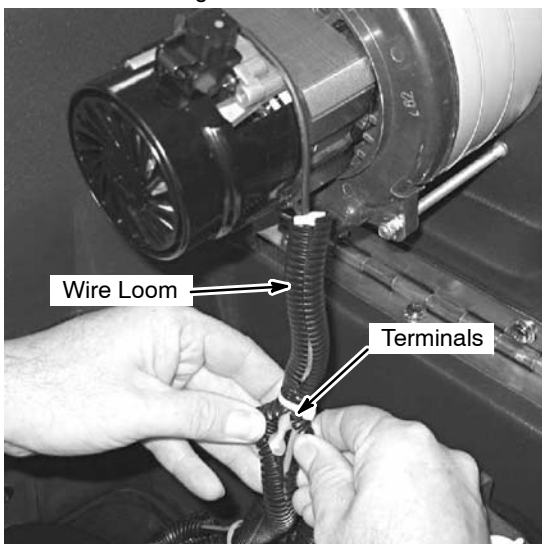


3. Install kit terminals.
4. Secure wires with clamp and wire-ties.

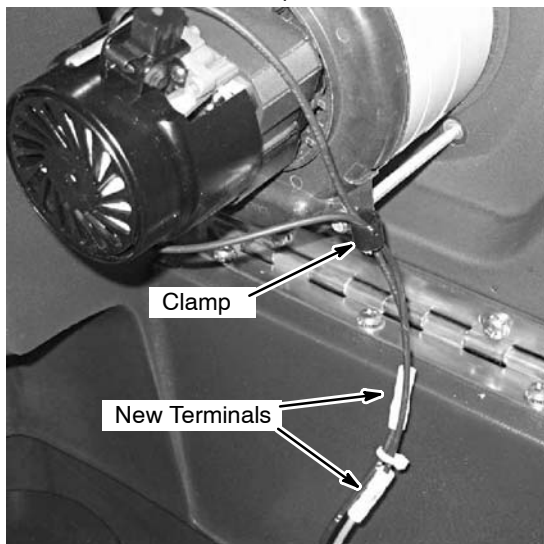

**Models:** 5540, 5560, Speed Scrub 2701, 3301, BlueStar 27"/33" Scrubbers

1. Remove existing vacuum motor terminals.

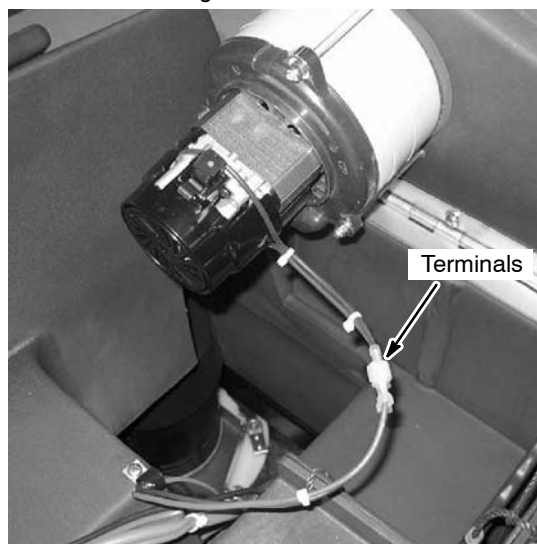

2. Install kit terminals.
3. Secure wires with wire-ties.

