

# FaST Injector Assembly Kit



Models: T5/T5e

This kit is intended for T5/T5e machines that are manufactured without scrub heads installed. The purpose of this kit is to ensure the machine is equipped with the correct FaST injector assembly (see chart below).

## INSTALLATION INSTRUCTIONS:

**Installation Time:** 15 minutes

**TOOLS REQUIRED:** Standard Screwdriver, 10mm Socket Wrench.

**FOR SAFETY:** Before installing kit, stop machine on level surface and remove key.

1. Remove the front shroud from the machine if installed (Figure 1).



Fig. 1

2. Locate the three FaST injector solution hoses at the front of the machine near the FaST injector mounting bracket (Figure 2).



Fig. 2

3. Position the FaST injector assembly as shown and connect the hoses using the two clamps provided (Figure 3).

### FaST Injector Assembly Kit Usage Chart

Scrub Head Size & Type	Kit Req.
24 in/600mm Disk	1025258
26 in/650 Cylindrical	1025258
28 in/700mm Disk	1025266
32 in/800mm Disk	1025266
32 in/800mm Cylindrical	1025266



FaST Injector Kit 1025258 is marked with the No. "26" which represents a .026 orifice.



FaST Injector Kit 1025266 is marked with the No. "31" which represents a .031 orifice.

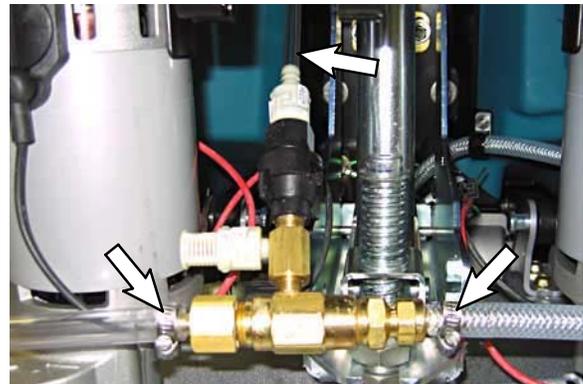


Fig. 3

4. Secure the FaST injector assembly into the mounting bracket (Figure 4).

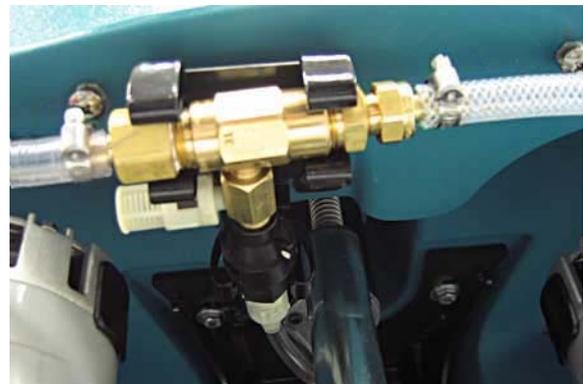


Fig. 4