

ALDI Stores

Bumper Wheel Rework Kit



Models: T5/T5e/Speed Scrub 24-32

This new kit is designed to replace and relocate the factory installed bumper wheels on 700mm disk models manufactured between February 2008 and serial number 10422863 April 2009.

INSTALLATION INSTRUCTIONS:

Installation Time: 1 Hour


TOOLS REQUIRED: Drill with 3/8 or 9 mm bit,
13 mm Wrench and Phillips Screwdriver,

FOR SAFETY: Before installing kit, position the machine on a level surface and remove the key.

Kit Contents

Part No.	Description	Qty.
1023268	Bracket, Roller, Wall, Scb Head, 700mm	1
1022344	Bracket, Roller, Wall, Scb Head, 700mm	1
393135	Screw, Btn, M8 X 1.25 X 20, Blk	4
08713	Nut, Hex, Lock, M8 X 1.25, NL, SS	4
1014918	Wheel, 03.0D 0.88W 0.3B, w/Brushing, Rubber	2
606983	Screw, Trs, M8 X 1.25 X 40, Phl, PL	2
07791	Nut, Hex, Flng, M8 X 1.25	2

1. Remove the old front bumper wheels from the scrub head and discard.
2. Assemble the new bumper wheels as shown.

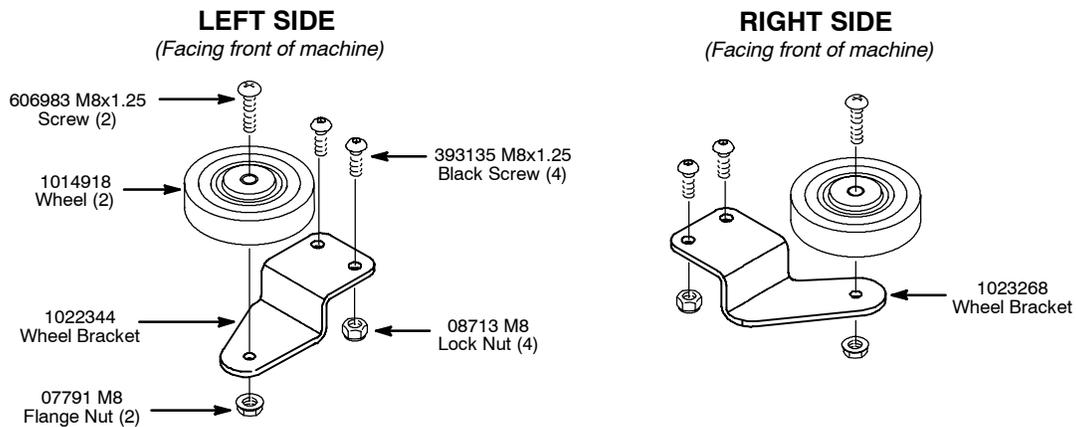

3. Using the below diagram as a template, drill four new 3/8" (9mm) holes in scrub head as described.

TEMPLATE

Use this sheet of paper as a template to locate new holes

