



INSTRUCTION BULLETIN

No. 9018349
Machine: 800
Published: 03-2020
Rev. 00

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.

Installation instructions for **kit number 9018348**


Kit installation must be performed by TennantTrue[®] service or an authorized service provider.

SYNOPSIS:

This kit contains the parts needed to replace the taillights on 800 sweepers.
Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS: NONE

(Estimated time to complete: 1-2 hours)

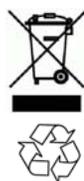

PROTECT THE ENVIRONMENT

Please dispose of packaging materials, used machine components such as batteries and fluids in an environmentally safe way according to local waste disposal regulations.

Always remember to recycle.

PREPARATION:

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, and remove key.

1. Disconnect the battery cables from the battery.



WARNING: Always disconnect battery cables from machine before working on electrical components.


2. Remove the existing taillights from the machine. Set all hardware used to secure the removed taillights to the machine aside. All hardware is needed to install the new taillight (1) onto the machine. Discard the removed taillights. (Fig. 1)

INSTALLATION:

1. Cut the taillight wire harness to the length necessary to install the new taillights (1).
2. Crimp the terminals (2) onto the taillight wire harness.
3. Connect the taillight wire harness to both taillights (1).
4. Use saved hardware to install the new taillights (1) onto the frame of the machine. (Fig. 1)

NOTE: It may be necessary to cut/grind some material from the holes in the frame of the machine where the taillights are installed to allow room for the new taillights to be installed and to drill a hole in the the muffler bracket on Gas/LP machines to allow additional clearance for the new taillight.

5. Reconnect the battery cables to the battery.
6. Start the machine. Operate both taillights to ensure they are functioning properly.

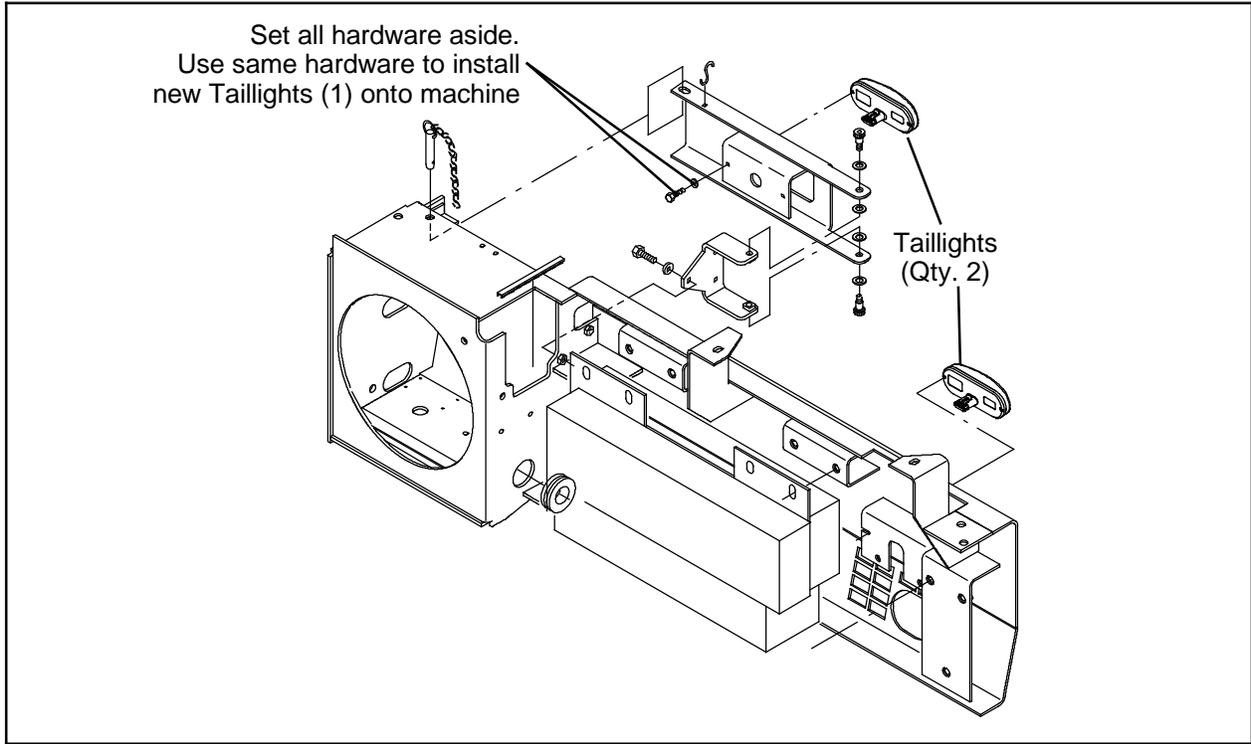

Bill Of Materials For Taillight Kit, LED, Replmt [800] - 9018348

Ref.	Tennant Part No.	Description	Qty.
1	1076507	Taillight, LED, Turn, Stop, Afmkt[800]	2
2	55272	Terminal, Bullet, Mal, .157D, 12GA	4

TENNANT COMPANY
 P. O. Box 1452
 Minneapolis, MN 55440-1452