

## Technical Service Bulletin

**MODEL(S) AFFECTED:** **Tennant T2** (North America Models)  
Models manufactured before serial number 10539697 (September 2011)


**SUBJECT:** Onboard Battery Charger

**PURPOSE:** Check charging profile to ensure battery charger is properly set as described below. Improper setting may prematurely shorten the battery life.

**NOTES:** For questions, contact the Tennant Customer Service Department.  
**Warranty Information:** Standard warranty terms apply.

To verify the current setting, the charger will flash the following at start-up:

- Two Red Flashes = Set for Wet/Lead Acid Batteries
- Two Green Flashes = Set for Gel/Sealed Batteries

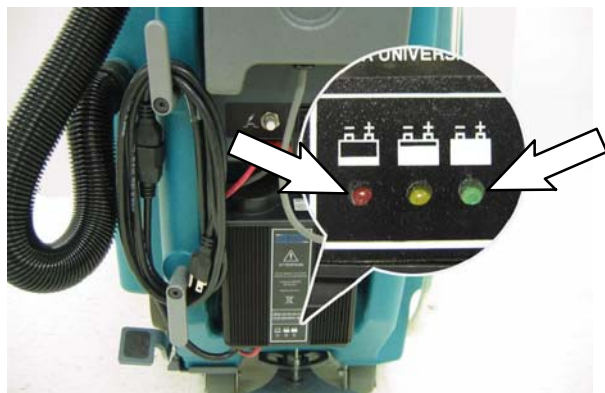

**T2 Scrubber**

To Change the Charging Profile:

1. Remove charger from machine (Figure 1).
2. Remove the round plug from bottom of charger to access profile switches (Figure 2).
3. Set profile switches according to chart. Charger MUST be unplugged when resetting.

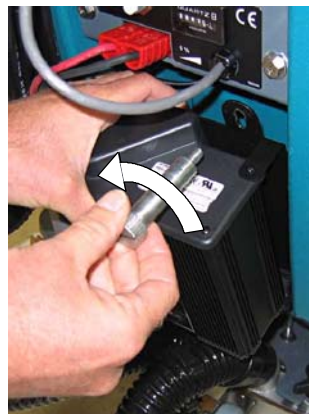


Fig. 1



Fig. 2

Charging Profile Chart

Battery Type	Switch	1	2
Wet / lead acid		ON	OFF
LM Wet / low maintenance		ON	ON
Gel / Sealed		OFF	ON
Exide Gel		OFF	OFF