

Technical Service Bulletin

MODEL(S) AFFECTED: T7 AMR Autonomous Rider Scrubber equipped with Operating System 2.8 - 2.10


SUBJECT: Safety concern - Potential pinch point hazard regarding the automated squeegee lift system when operating machine in manual mode.

PURPOSE: Squeegee lift system behavior - When operator leaves the seat, the squeegee lift system is triggered to automatically raise off the floor. However, the activation has a 25 second delay before the squeegee lift system is raised. There is a risk of a potential pinch hazard if the operator interacts with the squeegee system during this time span.

FOR SAFETY: To prevent a potential pinch point hazard, it is advised to wait until the squeegee lift system is in the raised position before interacting with squeegee system.

NOTES: Subsequent OS software releases will remove the automated squeegee system lift in both autonomous and manual mode.

Squeegee Lift System - When operator leaves the seat during manual mode there is a 25 second delay before squeegee begins to lift.

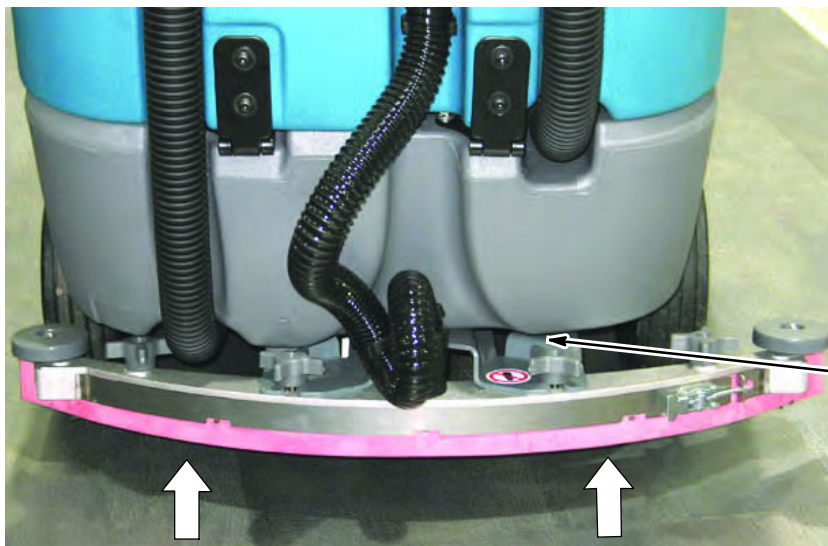

Potential Pinch Point Hazard