



INSTRUCTION BULLETIN

No. 340421
Machine: 7200
Published: 6-00/00
System: OPTIONS

NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in your machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save you the cost of ordering an entire kit.

NOTE: Numbers in parenthesis () are reference numbers for parts listed in Bill of Materials.

Installation instructions for kit number 397649

SYNOPSIS / PROBLEM:

This kit contains the parts needed to replace any of the isolator nuts on the model 7200 scrubber.

Please follow step-by-step instructions.

SPECIAL TOOLS / CONSIDERATIONS: Hand drill, 3/4 in. drill bit

(Estimated time to complete: 1/2 hour)

PREPARATION:

(Refer to FIG. 1 and 2)

FOR SAFETY: Before leaving or servicing machine, stop on level surface and set parking brake. Then turn off machine and remove key.

1. Disconnect battery cables from machine.



WARNING: Always disconnect battery cables from machine before working on electrical components.

INSTALLATION:

(Refer to FIG. 1 and 2)

1. Locate the isolator nuts, screws and washers that need to be replaced. (Refer to FIG. 1 and 2)
2. Remove the old isolator nuts, screws and washers.
3. Drill the old isolator nut locations out with the 3/4 in. drill bit.
4. Replace the old mounting hardware with the new isolator nuts, screws and washers.

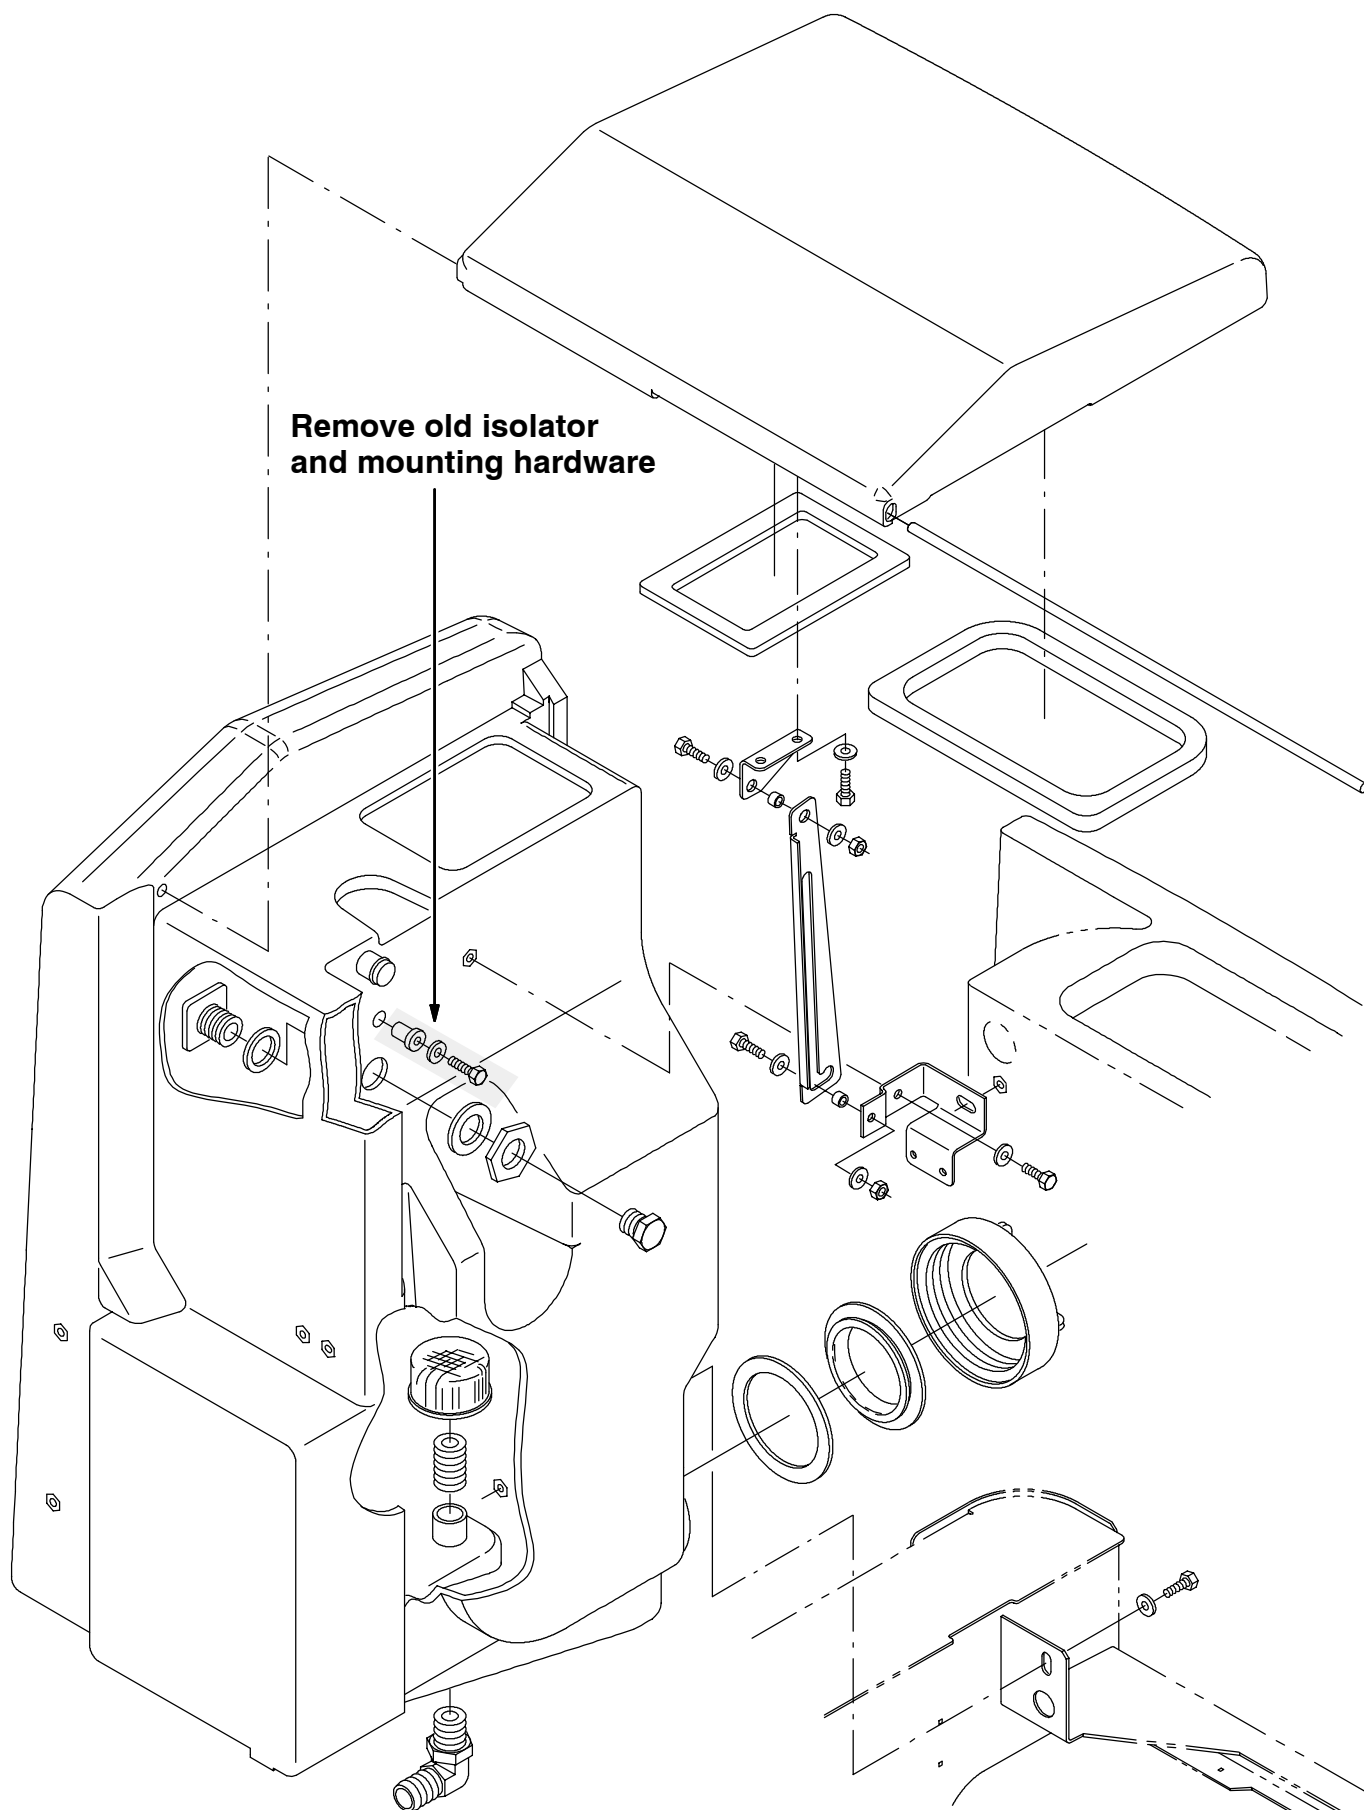


FIG. 1 - SOLUTION TANK ISOLATOR NUT LOCATION

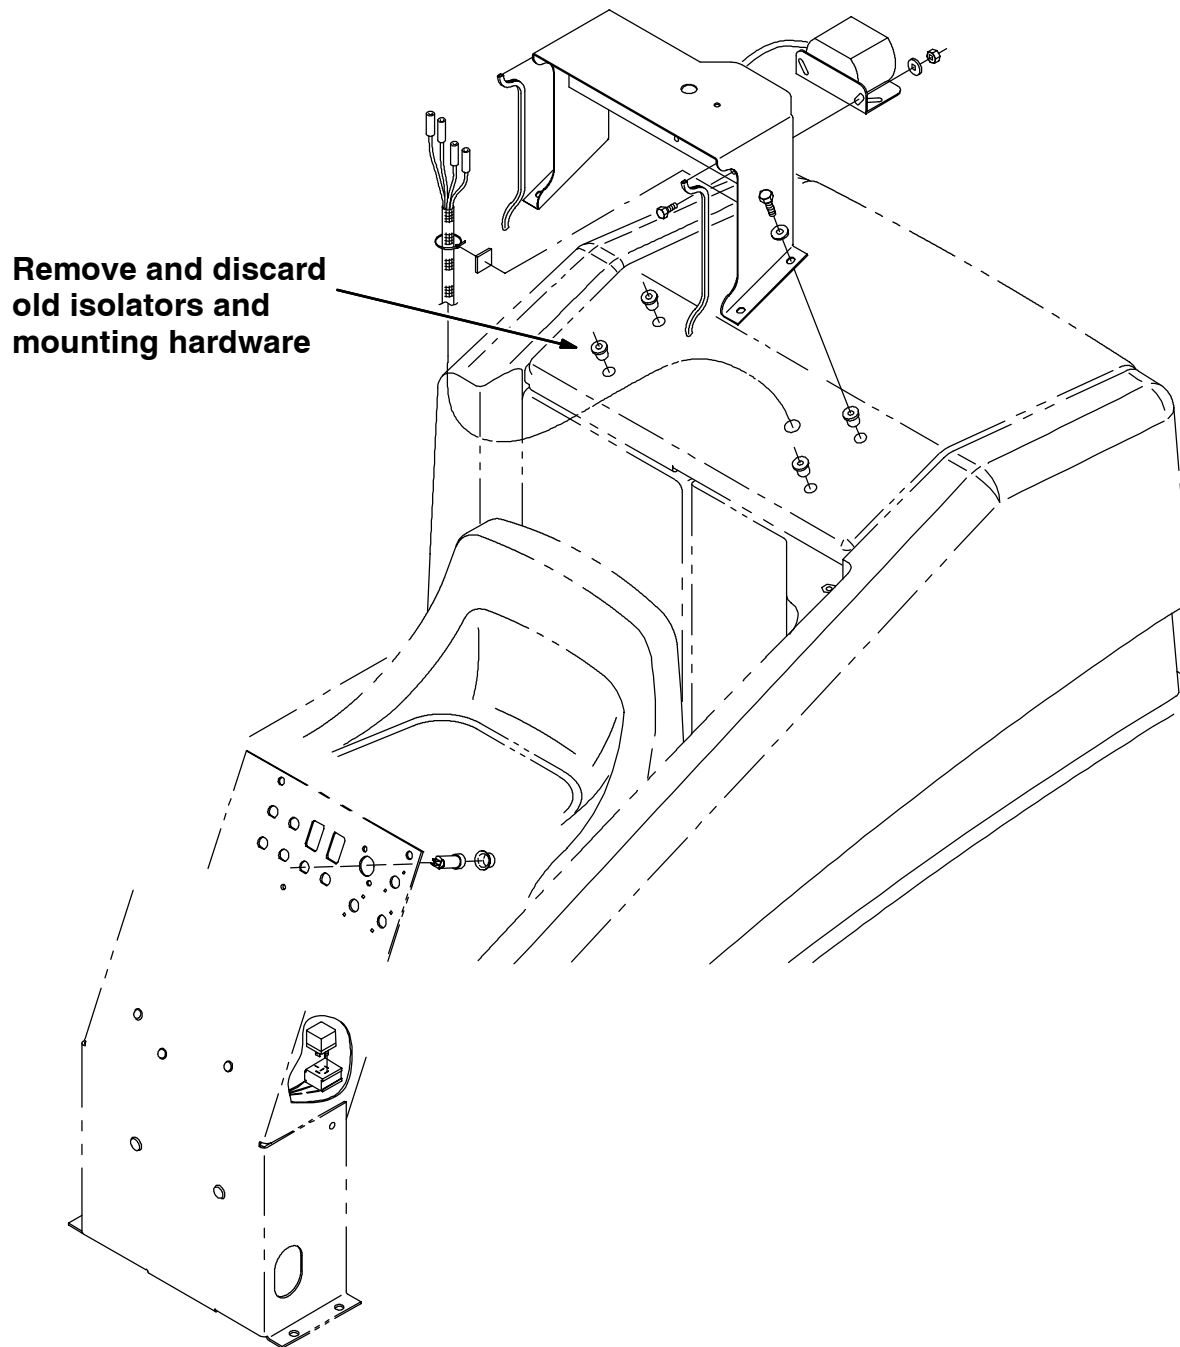


FIG. 2 - MOUNTING BRACKET ISOLATOR NUT LOCATIONS

BILL OF MATERIALS FOR ISOLATOR NUT REPLACEMENT KIT 397649

Ref.	TENNANT Part No.	Description	Qty.
1	397648	Nut, isolator, .38-16 wall thk .015-.437	1
2	36801	Screw, hex, .38-16 X 1.50, fl	1
3	32492	Washer,flt, 0.38 std	1

TENNANT COMPANY
P. O. Box 1452
Minneapolis, MN 55440-1452