




T500

(Battery)

Automatic Floor Scrubber Service Information Manual

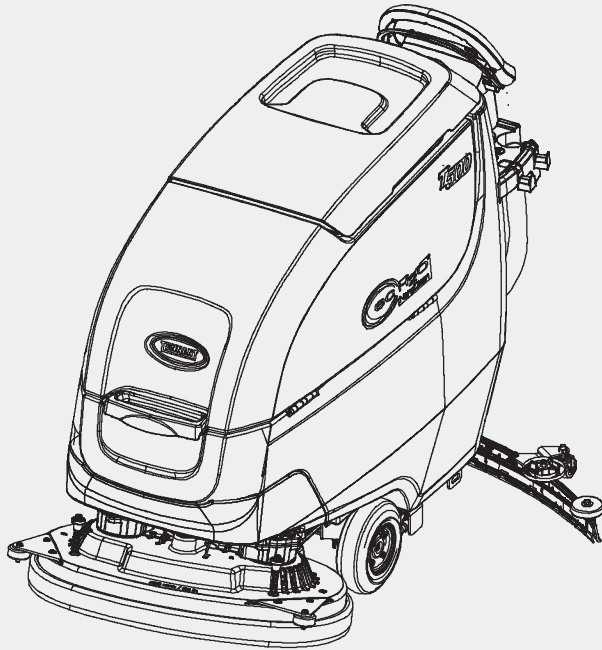

Hygenic® Fully Cleanable Recovery Tank
Tennant True® Parts
IRIS® a Tennant Technology
Pro-Panel™ Controls
Insta-Fit™ Adapter
Smart-Fill™ Automatic Battery Watering



North America / International



For the latest Parts Manuals and other
language Operator Manuals, visit:

www.tennantco.com/manuals

9015504
Rev. 01 (1-2018)



INTRODUCTION

This manual is available for each new model. It provides necessary operation and maintenance instructions.




Read this manual completely and understand the machine before operating or servicing it.

This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly - per the maintenance instructions provided.
- The machine is maintained with manufacturer supplied or equivalent parts.

To view, print or download manuals online visit www.tennantco.com/manuals



PROTECT THE ENVIRONMENT

Please dispose of packaging materials and used machine components such as batteries in an environmentally safe way according to your local waste disposal regulations.

Always remember to recycle.

Tennant Company

PO Box 1452
Minneapolis, MN 55440
Phone: (800) 553-8033
www.tennantco.com

1-STEP, Pro-Membrane, Severe Environment, Zone Settings, and Quiet-Mode are trademarks of Tennant Company.

Trojan® and HydroLINK® are registered trademarks of Trojan Battery Company.

Windows 7® is a registered trademark of the Microsoft Corporation.

This product may contain portions of software that have various 3rd party licenses. More information can be found at:
www.tennantco.com/opensource

Specifications and parts are subject to change without notice.

Original Instructions, copyright 2017 TENNANT Company.

INTENDED USE

The T500 walk-behind floor scrubber is intended for commercial use, for example in hotels, schools, hospitals, factories, shops, offices and rental businesses. It is designed to scrub hard floor surfaces (concrete, tile, stone, synthetic, etc.) in an indoor environment. This machine is not intended for cleaning carpets or sanding wood floors. Use only recommended pads/brushes and commercially available floor cleaning detergents. Do not use this machine other than described in the Operator Manual.

MACHINE DATA

Please fill out at time of installation for future reference.

Model No. - _____

Serial No. - _____

Installation Date - _____

MACHINE SERIAL NUMBER LOCATION



UNCRATING MACHINE

Carefully check machine for signs of damage. Report damages at once to carrier. Contact distributor or Tennant for missing items.

To uncrate the machine, remove straps, wheel blocks and shipping brackets. Using the supplied ramp carefully back the machine off the pallet. Make sure scrub head is in the raised position.

ATTENTION: Do not remove machine from pallet without using ramp, machine damage may occur.

CONTENTS

Contents	3	Squeegee Blade Replacement	38
Important Safety Instructions -		Ec-H2o Water Conditioning Cartridge	
Save These Instructions	6	Replacement	39
For Safety:	6	Machine Jacking	40
Safety Labels - North America	8	Transporting Machine	40
Safety Labels - Eu / Intl	9	Storing Machine	41
General Information	10	Freeze Protection	41
Machine Components	10	Faults And Warnings	43
Scrub Head Types	11	Scrubber Display Faults	51
Electrical Schematics	12	Ec-H2o Nanoclean Icon Faults	52
Schematic Symbols	12	Off-Board Charger Error And Fault	
Operational Matrix	15	Codes	54
Fastener Torque	16	Onboard Battery Charging On	56
Sae (Standard)	16	Batteries Fail To Charge / Reduced	
Metric	16	Run Time (Onboard Charger)	57
General Machine Dimensions/Capacities/		Off Board Battery Charging On	58
Performance (North America / Intl)	17	Batteries Fail To Charge / Reduced	
General Machine Dimensions/Capacities/		Run Time (Off Board Charger)	59
Performance - North America Continued	18	Power Up On	60
General Machine Dimensions/Capacities/		Machine Failed To Power Up	61
Performance (Eu)	19	Propel Subsystem	62
General Machine Dimensions/Capacities/		Machine Failed To Propel	63
Performance - Eu Continued	20	Scrub Motor On	64
Machine Dimensions	21	Scrub Motor Failed To Turn On	65
Dual Disk Model	21	Scrub Head Lift Actuator	66
Maintenance	24	Scrub Head Failed To Lift / Lower	67
Maintenance Chart	24	Vacuum Fan On	68
Machine Maintenance	25	Vacuum Fan Failed To Turn On	69
Yellow Touch Points	25	Solution Control On (Conventional)	70
After Daily Use	25	Solution Control Failed To Turn On	
After Weekly Use	28	(Conventional)	71
After Every 50 Hours Of Use	28	Solution Control On (Ec-H2o)	72
After Every 100 Hours Of Use	29	Solution Control Failed To Turn On	
Electric Motors	29	(Ec-H2o)	73
Belts (Cylindrical Brush Model)	29	Se (Severe Environment) On	74
Batteries	30	Se (Severe Environment) Failed To	
Maintenance-Free Batteries	30	Turn On	75
Flooded (Wet) Lead-Acid Batteries	30	Spray Pump (Option)	76
Checking Connections / Cleaning	30	Spray Pump Failed To Turn On	77
Charging Batteries	31	Abw (Automatic Battery Watering)	
Battery Charger Settings	32	(Option)	78
Changing On-Board Battery Charger		Abw (Automatic Battery Watering)	
Settings (Pro-Membrane Model)	33	System Failed To Turn On	79
Changing On-Board Battery Charger		I-Drive Testing (Universal Schematic)	80
Settings (Pro-Panel Model)	34	I-Drive Testing Procedure	81
Hydrolink® Battery Watering System		Displaying Fault Codes / Warnings	
(Trojan® Battery Option)	35	(Pro-Panel Machines Only)	82
Manual Hand Pump Battery Watering			
System (Tab Batter Option)	36		
Automatic Battery Watering System	37		

Entering The Manual Mode (Membrane Panel Machines Only)	83	Module.....	126
Entering The Manual Mode (Pro-Panel Machines Only)	84	Removing / Installing The Bail Switch, Speed Potentiometer, Or Directional Switch.....	128
Service Diagnostics Tool.....	87	Removing / Installing The On-Board Battery Charger	132
Programming A New Interface Module.....	87	Options.....	134
Reconfiguring Existing Modules.....	90	Abw (Automatic Battery Watering) System Maintenance.....	134
Programming The Drive Module	92	Trojan® Battery Option	134
Reconfiguring The Machine After New Hardware / Option Installation	94	TAB Battery Option	135
Changing The Off-Board Battery Charger Settings.....	96	Abw Pump Not Priming (Air In The System)	136
Cleaning Systems	97	Abw Pump Is Timing Out (1 Minute)	137
Remove / Install The Transaxle Assembly.....	97	Abw Overfills The Batteries.....	138
Removing / Installing The Drive Motor Carbon Brushes	99	Replacing The Abw Liquid Level Sensor	139
Remove / Install The Cylindrical Scrub Head Assembly	100	Removing / Installing The Ec-H2o Pump (Option).....	140
Checking / Adjusting The Cylindrical Scrub Brush Pattern	102	Se (Severe Environment) Group (Option)	142
Removing / Installing The Cylindrical Scrub Head Motor Carbon Brushes ..	104	Removing / Installing The Recovery Tank Rinse Pump (Option)	144
Remove / Install The Disk Scrub Head Assembly.....	105		
Removing / Installing The Disk Scrub Head Motor Carbon Brushes.....	107		
Remove / Install The Orbital Scrub Head Assembly	108		
Removing / Installing The Orbital Scrub Head Motor Carbon Brushes ..	110		
Remove / Install The Lower Orbital Head Isolators	112		
Removing / Installing The Vacuum Fan..	114		
Removing / Replacing The Vacuum Fan Carbon Brushes	115		
Installing Carbon Brushes.....	116		
Removing / Installing The Water Solenoid Valve.....	118		
Connecting Hoses To Ptc (Push-To-Connect) Fittings.....	120		
Disconnect Hoses From Ptc (Push-To-Connect) Fittings.....	121		
Control Modules.....	122		
Removing / Installing The Control Module.....	122		
Removing / Installing The Drive Module.....	124		
Removing / Installing The Interface			

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

The following precautions are used throughout this manual as indicated in their descriptions:



WARNING: To warn of hazards or unsafe practices which could result in severe personal injury or death.

FOR SAFETY: To identify actions that must be followed for safe operation of equipment.

The following information signals potentially dangerous conditions to the operator. Know when these conditions can exist. Locate all safety devices on the machine. Report machine damage or faulty operation immediately.



WARNING: To Reduce the Risk of Fire, Explosion, Electric Shock or Injury:

- Read manual before operating machine.
- Do not use or pick up flammable materials or reactive metals.
- Do not use near flammable liquids, vapors or combustible dusts.
- This machine is not equipped with an explosion proof motor. The electric motor will spark upon start up and during operation which could cause a flash fire or explosion if machine is used in an area where flammable vapors/liquids or combustible dusts are present.
- Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away when charging.
- Disconnect battery cables and charger cord before cleaning and servicing machine.
- Do not charge batteries with damaged cord. Do not modify plug. If the charger supply cord is damaged or broken, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use outdoors. Store indoors.
- Spinning pad/brush, keep hands away.

IRIS Telemetry - This machine may be equipped with technology that automatically communicates over the cellular network. If the machine will be operated where cell phone use is restricted because of concerns related to equipment interference, please contact a Tennant representative for information on how to disable the cellular communication functionality.

FOR SAFETY:

1. Do not operate machine:
 - Unless trained and authorized.
 - Unless operator manual is read and understood.
 - Unless mentally and physically capable of following machine instructions.
 - Under the influence of alcohol or drugs.
 - While using a cell phone or other types of electronic devices.
 - If it is not in proper operating condition.
 - In outdoor areas. This machine is for indoor use only.
 - In areas where flammable vapors/liquids or combustible dusts are present.
 - With pads or accessories not supplied or approved by Tennant. The use of other pads may impair safety.
 - In areas with possible falling objects.
 - In areas that are too dark to safely see the controls or operate the machine.
2. Before operating machine:
 - Check machine for fluid leaks.
 - Make sure all safety devices are in place and operate properly.
3. When operating machine::
 - Use only as described in this manual.
 - Report machine damage or faulty operation immediately.
 - Wear closed-toe, non-slip work shoes.
 - Reduce speed when turning.
 - Go slowly on inclines and slippery surfaces.
 - The machine may only be operated on gradients up to 2%.
 - Follow site safety guidelines concerning wet floors.
 - Follow mixing, handling and disposal instructions on chemical containers.
 - Do not carry passengers on machine.
 - Use care when reversing machine.
 - Keep children and unauthorized persons away from machine.

WARNING: This machine contains chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

- Do not allow machine to be used as a toy.
 - Do not use spray nozzle for off-aisle cleaning, slip hazard may occur.
 - Do not leave machine unattended when filling solution tank with auto-fill feature.
4. Before leaving or servicing machine:
 - Stop on level surface.
 - Set the parking brake, if equipped.
 - Turn off machine and remove key.
 5. When servicing machine:
 - Disconnect battery connection and charger cord before working on machine.
 - All work must be done with sufficient lighting and visibility.
 - All repairs must be performed by trained personnel.
 - Use Tennant supplied or approved replacement parts.
 - Do not modify the machine from its original design.
 - Block machine tires before jacking machine up.
 - Jack machine up at designed locations only. Support machine with jack stands.
 - Use hoist or jack that will support the weight of the machine.
 - Avoid moving parts. Do not wear loose clothing or jewelry and secure long hair.
 - Do not disconnect the off-board charger's DC cord from the machine's receptacle when the charger is operating. Arcing may result. If the charger must be interrupted during charging cycle, disconnect the AC power supply cord first.
 - Do not use incompatible battery chargers as this may damage battery packs and potentially cause a fire hazard.
 - Inspect charger cord regularly for damage.
 - Keep work area well ventilated.
 - Avoid contact with battery acid.
 - Keep all metal objects off batteries.
 - Do not power spray or hose off machine. Electrical malfunction may occur. Use damp cloth.
 - Use a hoist or adequate assistance when lifting batteries.
 - Battery installation must be done by trained personnel.
 - Only use distilled water when filling the automatic battery watering tank.
 - Wear personal protection equipment as needed and where recommended in this manual.
 6. When loading/unloading machine onto/off truck or trailer:
 - Drain tanks before loading machine.
 - Use a ramp that can support the machine weight and operator.
 - The machine may only be operated on gradients up to 2%.
 - Lower the scrub head and squeegee before tying down machine.
 - Turn machine off and remove key.
 - Set parking brake (if equipped).
 - Block machine wheels.
 - Use tie-down straps to secure machine.



For Safety: wear protective gloves.



For Safety: wear eye protection.

SAFETY LABELS - NORTH AMERICA

The safety labels appear on the machine in the locations indicated. Replace labels if they are missing or become damaged or illegible.

WARNING LABEL - Located on recovery tank cover.

	⚠ WARNING	⚠ AVERTISSEMENT	⚠ ADVERTENCIA
	TO REDUCE THE RISK OF FIRE, EXPLOSION, ELECTRICAL SHOCK, OR INJURY:	POUR RÉDUIRE LES RISQUES D'INCENDIE, L'EXPLOSION, DE CHOC ELECTRIQUE OU DE LESSURE:	PARA REDUCIR EL RIESGO DE INCENDIO, EXPLOSION, CHOQUE ELECTRICO, O LESIONS:
	• Read manual before operating machine. • Do not use or pick up flammable materials. • Do not use near flammable liquids, vapors or combustible dusts.	• Lisez le manuel avant d'utiliser la machine. • N'utilisez pas ou ne ramassez pas de matériaux inflammables. • N'utilisez pas près de liquides, vapeurs ou poussières inflammables.	• Lea el manual antes de utilizar la máquina. • No utilice ni recoja materiales inflamables. • No utilice la máquina cerca de líquidos, polvos o vapores inflamables.
	• Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away when charging. • Disconnect battery cables and charger plug before servicing machine. • Do not charge batteries with damaged cord. • Do not use outdoors. Store indoors.	• Les batteries émettent de l'hydrogène gazeux. Risque d'incendie et d'explosion. Évitez toute étincelle et toute flamme nue lors de la charge des batteries. • Débranchez les câbles des batteries et le cordon du chargeur avant l'entretien de la machine. • Ne chargez pas les batteries avec un cordon endommagé. • N'utilisez pas à l'extérieur. Entrez-les à l'intérieur.	• Las baterías emiten hidrógeno. Peligro de incendio o explosión. Mantenga la máquina alejada de chispas y llamas cuando se esté cargando. • Desconecte los cables de la batería antes de realizar el servicio a la máquina. • No cargue las baterías si el cable está dañado. • No utilice la máquina al aire libre. Guárdela en un lugar cerrado.
			


1215281




WARNING LABEL -
Spinning brush. Keep hands away.
Located on scrub head.



FOR SAFETY LABEL -
Do not power spray or hose off machine.
Electrical malfunction may occur.
Located on control console

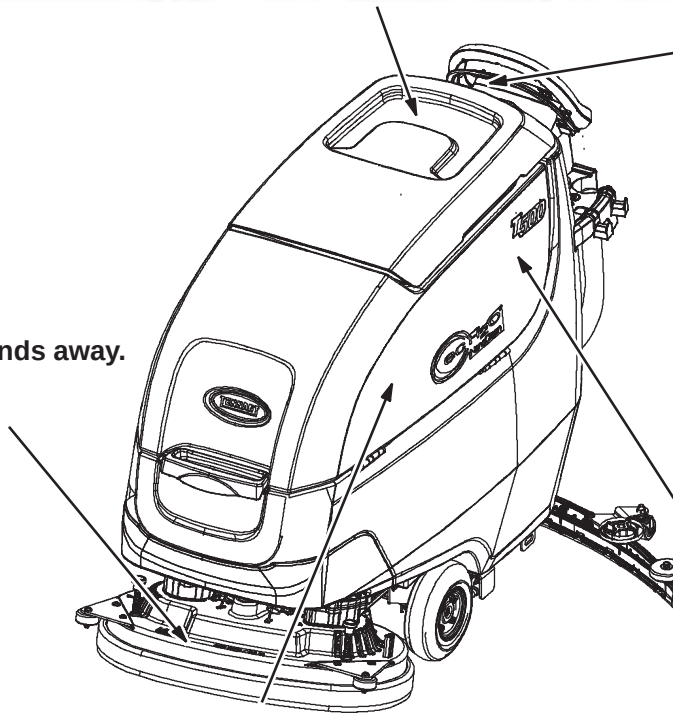

WARNING LABEL -
Batteries emit hydrogen gas.
Explosion or fire can result. Keep sparks and open flame away when charging.
Located on bottom side of recovery tank.

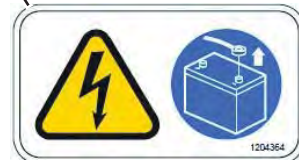

WARNING LABEL -
Electrical hazard.
Disconnect battery cables before servicing machine.
Located on circuit breaker panel.

SAFETY LABELS - EU / INTL

The safety labels appear on the machine in the locations indicated. Replace labels if they are missing or become damaged or illegible.



WARNING LABEL -
Flammable materials or reactive metals can cause an explosion or fire. Do not pick up.

Located near control console.



FOR SAFETY LABEL -
Do not power spray or hose off machine. Electrical malfunction may occur.

Located on control console



FOR SAFETY LABEL -
Read manual before operating machine.

Located near control console.



WARNING LABEL -
Flammable materials can cause explosion or fire. Do not use flammable materials in tank(s).

Located on backside of solution tank cover.



WARNING LABEL -
Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away when charging.

Located on control console and bottom side of recovery tank.



WARNING LABEL -
Spinning brush. Keep hands away.

Located on scrub head.



WARNING LABEL -
Electrical Hazard. Disconnect battery cables before servicing machine.

Located on circuit board panel.




WARNING LABEL -
Do not charge batteries with damaged cord. Electric shock can result. Disconnect charger cord before servicing.

Located on control console.

GENERAL INFORMATION

MACHINE COMPONENTS

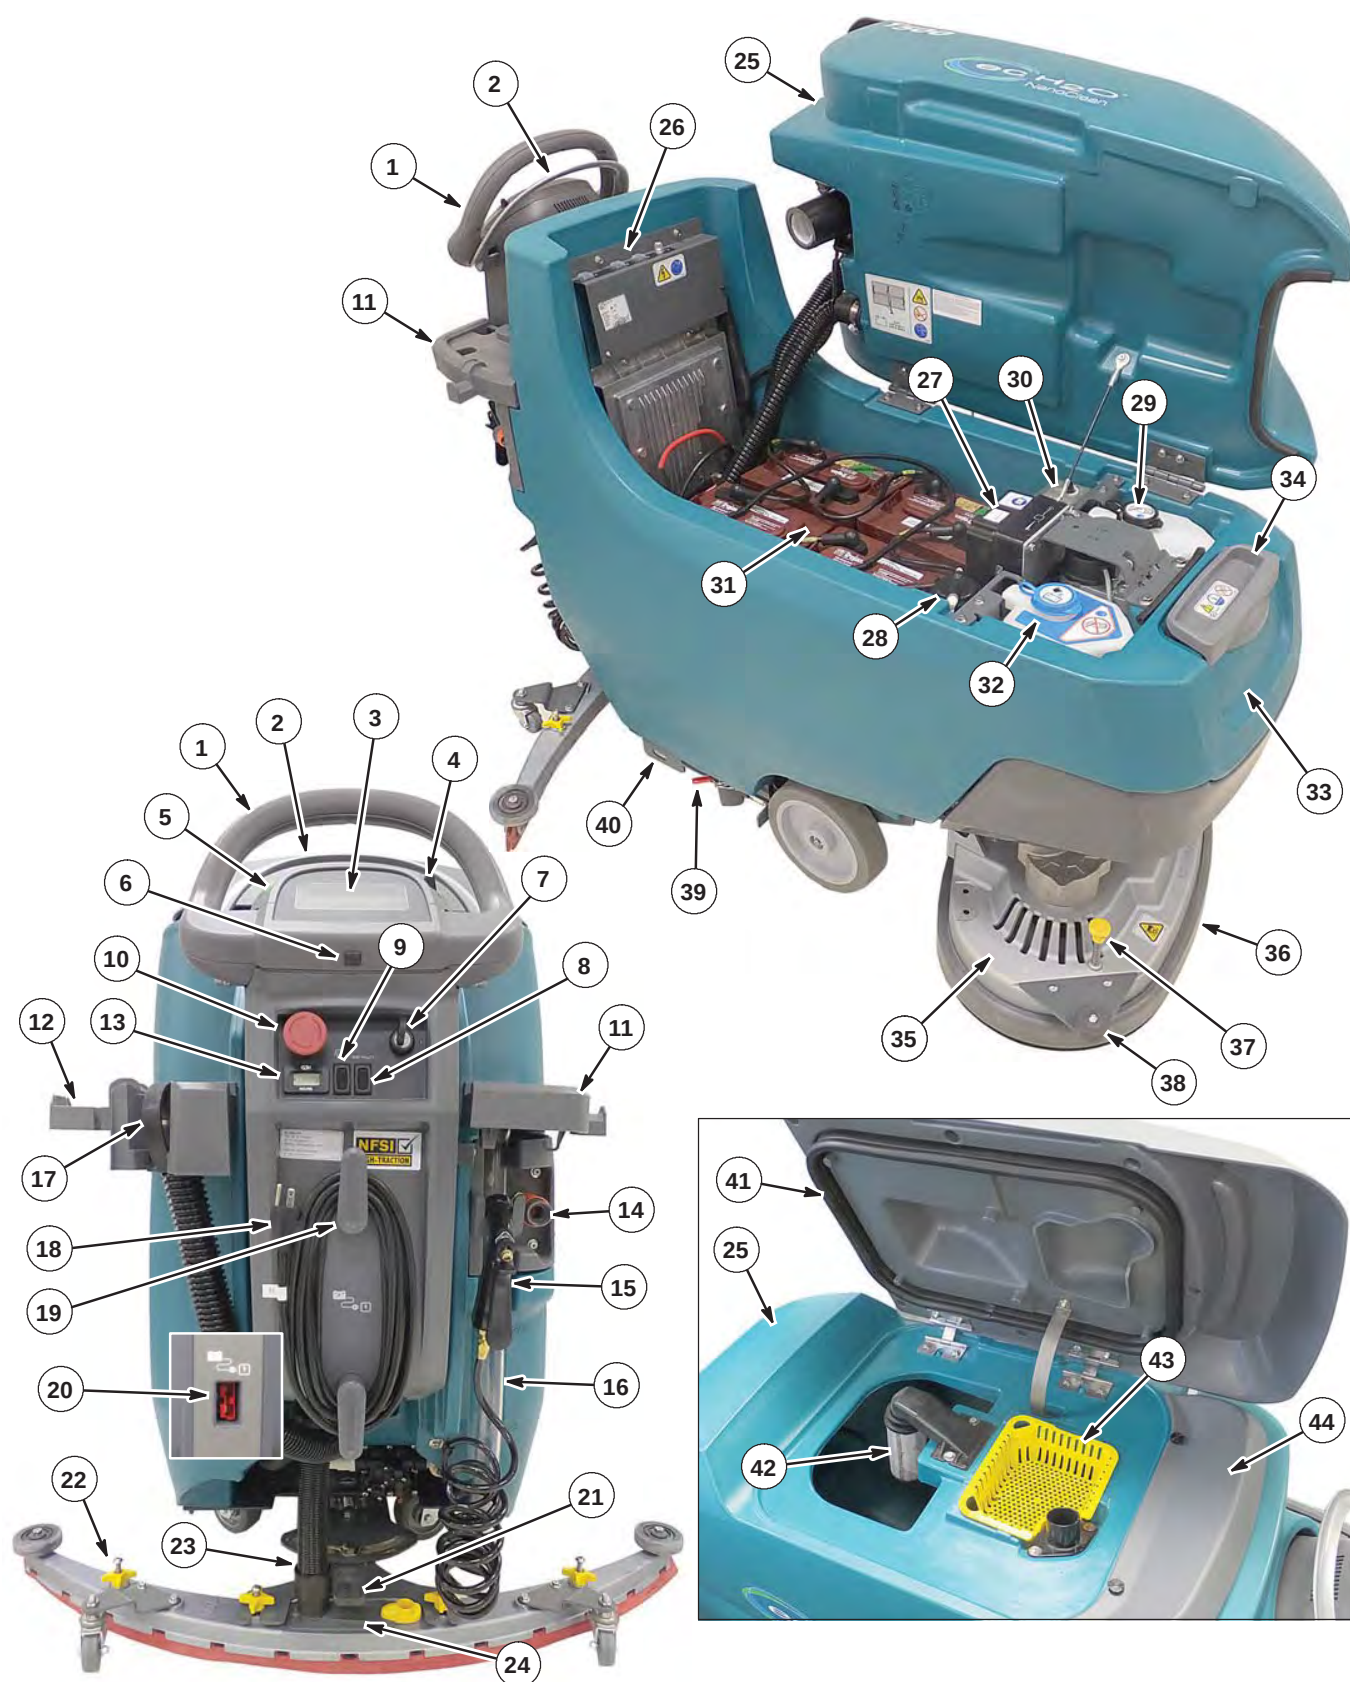


1. Control handle
2. Control handle start bail
3. Control panel
4. Forward/Reverse lever
5. Speed control knob
6. USB port (Service only)
7. Key switch
8. ec-H2O on/off switch (option)
9. Spray nozzle on/off switch (option)
10. Emergency shut-off button
11. Accessory rails
12. Accessory rail clips (option)
13. Hour meter
14. Solution tank rear hose fill-port
15. Tank rinse out spray nozzle (option)
16. Solution tank level/drain hose
17. Recovery tank drain hose
18. On-board battery charger cord
19. On-board battery charger cord hooks
20. Off-board battery charger receptacle
21. Squeegee lower/lift foot pedal
22. Squeegee assembly
23. Squeegee vacuum hose
24. Squeegee debris/drip tray
25. Recovery tank
26. Circuit breaker panel
27. ec-H2O module (option)
28. ec-H2O water conditioning cartridge
29. Severe environment detergent tank (ec-H2O option)
30. Detergent mixing ratio knob (Severe environment option)
31. Battery compartment
32. Automatic battery watering tank (option)
33. Solution tank
34. Solution tank front bucket fill-port
35. Scrub head
36. Scrub head skirt
37. Pad release plunger
38. Pad release plunger
39. Parking brake (option)
40. Transport tie-down bracket
41. Recovery tank lid
42. Recovery tank float shut-off screen
43. Recovery tank debris tray
44. Splash guard


SCRUB HEAD TYPES



26 in / 650 mm Dual Disk
28 in / 700 mm Dual Disk
32 in / 800 mm Dual Disk

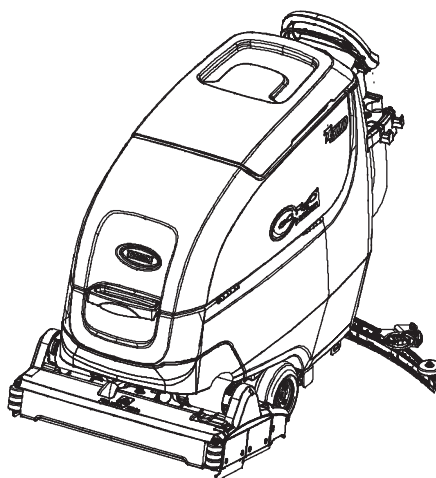


28 in / 700 mm Cylindrical Brush

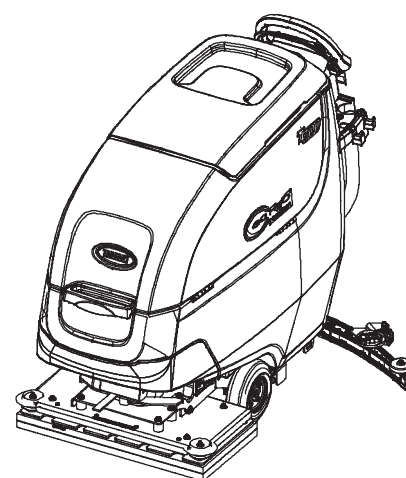


28 in / 700 mm Orbital Pad

ELECTRICAL SCHEMATICS


SCHEMATIC SYMBOLS

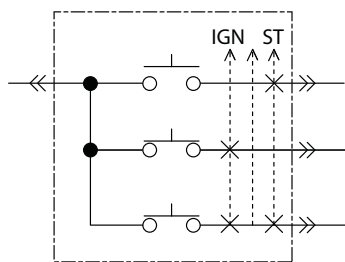


Key Switch

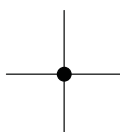

Connected

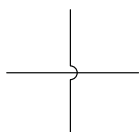


Not Connected




Connector




Energized




Adaptor Harness




Notes



Assembly



AC Plug



Capacitor



Battery



Circuit Breaker




Fuse




Diode




Single Continuation Tab




Double Continuation Tab




Relay Coil



N.C. Relay Contacts




N.O. Relay Contacts




Horn or Alarm



Light

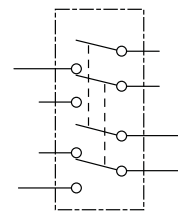


DPDT Switch




Pressure Switch



Motor

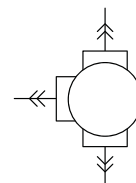


3 Phase AC Induction Motor




Motor Encoder



Sensor (Variable Resistor)



Momenary Switch N.O.




Contact Switch N.C.



Solenoid Valve

SCHEMATICS

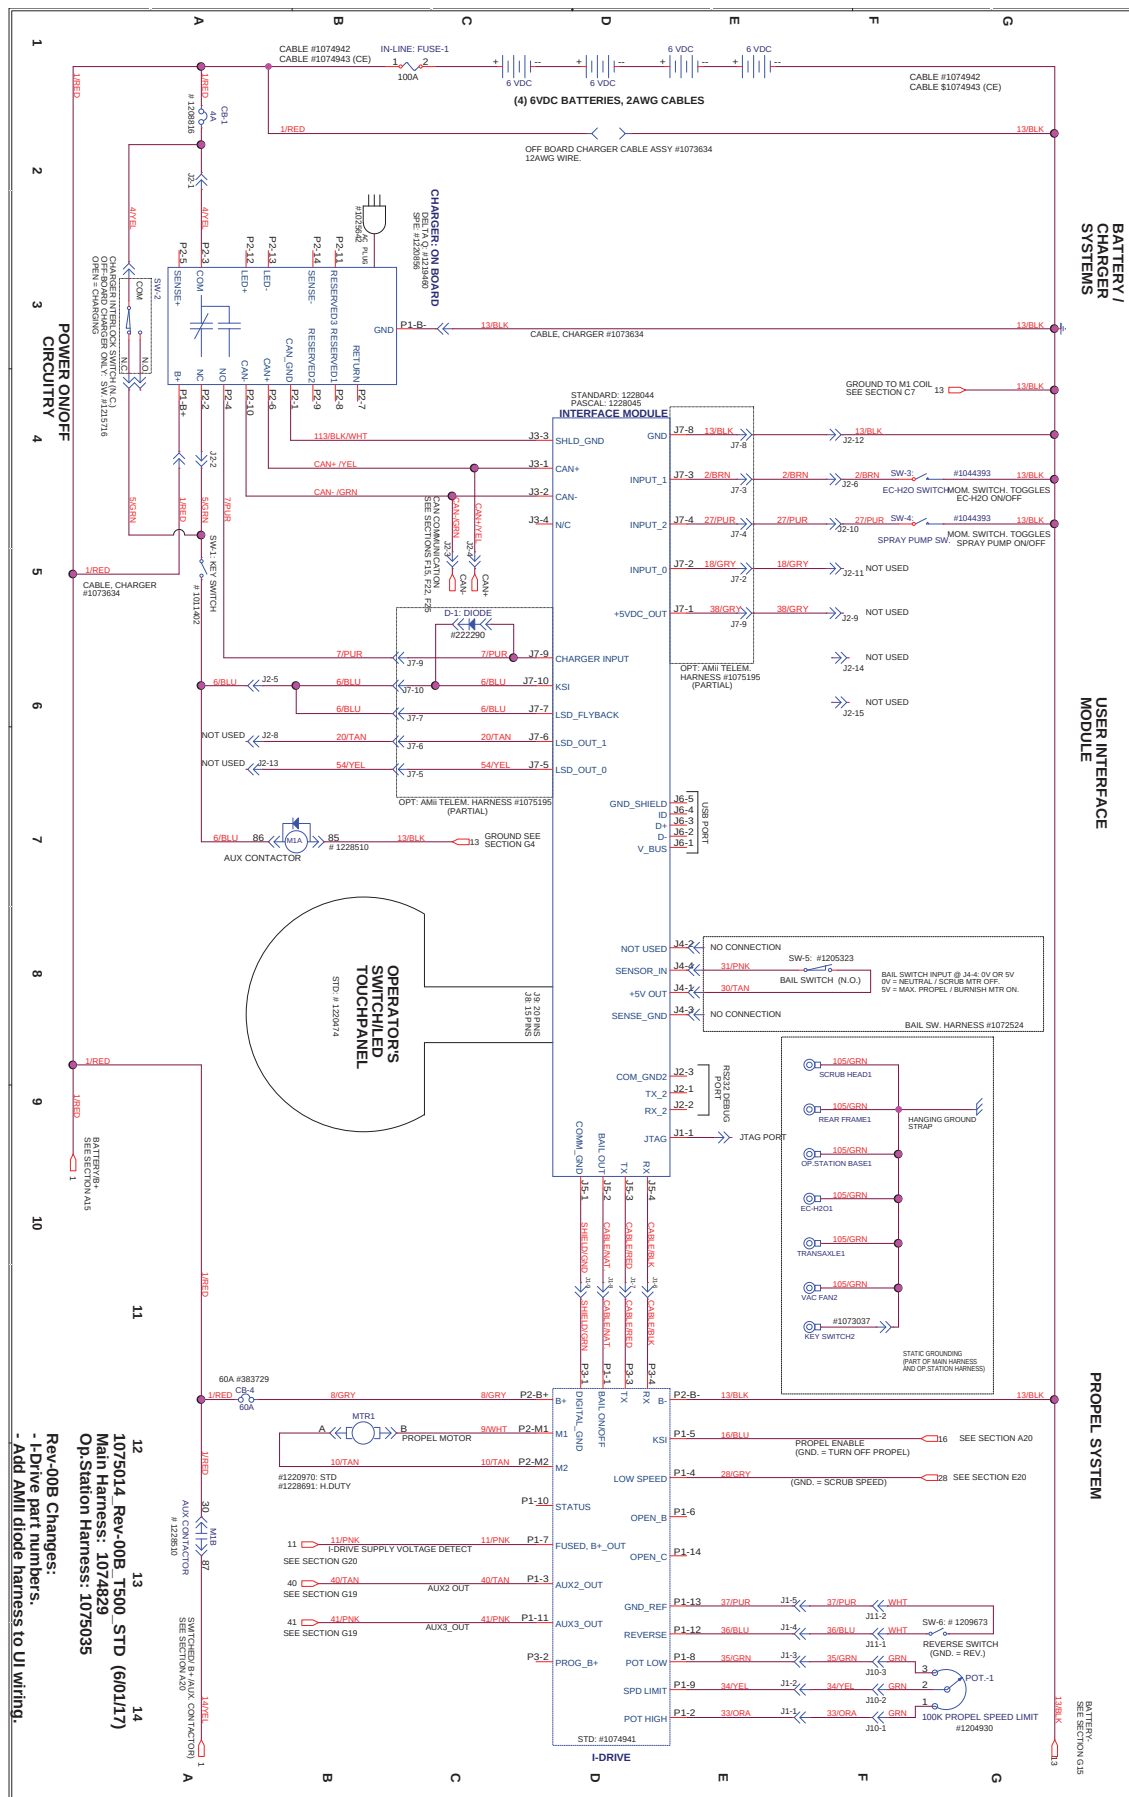

14



OPERATIONAL MATRIX

FUNCTION	ENABLED	DISABLED
Propel	• Key ON (I) • Forward/Reverse Switch In FORWARD or REVERSE	• Key OFF (O) • Neutral - Bail Released • Spray Nozzle Button ON • Propel Motor Controller Fault • Battery Charger ON Interlock
Vacuum Fan	• Key ON (I) • Squeegee Lowered - Foot Pedal	• Key OFF (O) • Squeegee Raised • Low Battery Voltage (Wet < 21.9 V, AGM < 22.7 V) • Fault • Battery Charger ON Interlock
Scrub Head Actuator	• Key ON (I) • Head Lowered - 1-STEP	• Key OFF (O) • Head Raised - 1-STEP • Low Battery Voltage (Wet < 21.9 V, AGM < 22.7 V) • Fault • Battery Charger ON Interlock
Main Scrub Motor	• Key ON (I) • Head Lowered - 1-STEP • Forward/Reverse Switch - FORWARD or REVERSE • Bail Activated	• Key OFF (O) • Head Raised - 1-STEP • Neutral - Bail Released • Low Battery Voltage (Wet < 21.9 V, AGM < 22.7 V) • Fault • Battery Charger ON Interlock
Solution Control (Conventional)	• Head Lowered - 1-STEP • Solution Control ON • Forward/Reverse Switch - FORWARD or REVERSE • Bail Activated	• Head Raised - 1-STEP • Solution Control OFF • Neutral - Bail Released • Low Battery Voltage (Wet < 21.9 V, AGM < 22.7 V) • Fault • Battery Charger ON Interlock
Solution Control (ec-H2O NanoClean - Optional)	• Head Lowered - Foot Pedal • Solution Control ON • ecH2O Switch ON • Forward/Reverse Switch - FORWARD or REVERSE • Bail Activated	• Head Raised - 1-STEP • Solution Control OFF • ecH2O Switch OFF • Neutral - Bail Released • Low Battery Voltage (Wet < 21.9 V, AGM < 22.7 V) • ecH2O System Fault • Battery Charger ON Interlock
Severe Environment	• Head Lowered - Foot Pedal • Severe Environment ON (30 seconds or continuous) • Forward/Reverse Switch - FORWARD or REVERSE • Bail Activated • Detergent Tank Not Empty	• Head Raised - 1-STEP • Solution Control OFF • Neutral - Bail Released • Detergent Tank Empty • Low Battery Voltage (Wet < 21.9 V, AGM < 22.7 V) • Fault • Battery Charger ON Interlock
Spray Nozzle (Optional)	• Key ON (I) • Spray Nozzle Button ON • Solution Tank Not Empty	• Key OFF (O) • Spray Nozzle Button OFF • Solution Tank Empty

GENERAL INFORMATION

FASTENER TORQUE

SAE (STANDARD)

Thread Size	SAE Grade 1	SAE Grade 2 Carriage Bolts	Thread Cutting Thread Rolling	SAE Grade 5 Socket & Stainless Steel	SAE Grade 8	Headless Socket Set Screws	Square Head Set Screws	
4 (.112)	(5) - (6.5)					(4) - (6)		Inch Pounds
5 (.125)	(6) - (8)					(9) - (11)		
6 (.138)	(7) - (9)		(20) - (24)			(9) - (11)		
8 (.164)	(12) - (16)		(40) - (47)			(17) - (23)		
10 (.190)	(20) - (26)		(50) - (60)			(31) - (41)		
1/4 (.250)	4 - 5	5 - 6	7 - 10	7 - 10	10 - 13	6 - 8	17 - 19	Foot Pounds
5/16 (.312)	7 - 9	9 - 12	15 - 20	15 - 20	20 - 26	13 - 15	32 - 38	
3/8 (.375)	13 - 17	16 - 21		27 - 35	36 - 47	22 - 26	65 - 75	
7/16 (.438)	20 - 26	26 - 34		43 - 56	53 - 76	33 - 39	106 - 124	
1/2 (.500)	27 - 35	39 - 51		65 - 85	89 - 116	48 - 56	162 - 188	
5/8 (.625)		80 - 104		130 - 170	171 - 265		228 - 383	
3/4 (.750)		129 - 168		215 - 280	313 - 407		592 - 688	
1 (1.000)		258 - 335		500 - 650	757 - 984		1281 - 1489	

METRIC

Thread Size	4.8/5.6	8.8 Stainless Steel	10.9	12.9	Set Screws
M3	43 - 56 Ncm	99 - 128 Ncm	139 - 180 Ncm	166 - 215 Ncm	61 - 79 Ncm
M4	99 - 128 Ncm	223 - 290 Ncm	316 - 410 Ncm	381 - 495 Ncm	219 - 285 Ncm
M5	193 - 250 Ncm	443 - 575 Ncm	624 - 810 Ncm	747 - 970 Ncm	427 - 554 Ncm
M6	3.3 - 4.3 Nm	7.6 - 9.9 Nm	10.8 - 14 Nm	12.7 - 16.5 Nm	7.5 - 9.8 Nm
M8	8.1 - 10.5 Nm	18.5 - 24 Nm	26.2 - 34 Nm	31 - 40 Nm	18.3 - 23.7 Nm
M10	16 - 21 Nm	37 - 48 Nm	52 - 67 Nm	63 - 81 Nm	
M12	28 - 36 Nm	64 - 83 Nm	90 - 117 Nm	108 - 140 Nm	
M14	45 - 58 Nm	102 - 132 Nm	142 - 185 Nm	169 - 220 Nm	
M16	68 - 88 Nm	154 - 200 Nm	219 - 285 Nm	262 - 340 Nm	
M20	132 - 171 Nm	300 - 390 Nm	424 - 550 Nm	508 - 660 Nm	
M22	177 - 230 Nm	409 - 530 Nm	574 - 745 Nm	686 - 890 Nm	
M24	227 - 295 Nm	520 - 675 Nm	732 - 950 Nm	879 - 1140 Nm	

**GENERAL MACHINE DIMENSIONS/CAPACITIES/
PERFORMANCE (NORTH AMERICA / INTL)**

MODEL	26 in / 650 mm Dual Disk	28 in / 700 mm Dual Disk	32 in / 800 mm Dual Disk
Length	58.5 in / 1486 mm	59.1 in / 1501 mm	61.1 in / 1552 mm
Width	27.5 in / 700 mm	29.5 in / 750 mm	33.5 in / 850 mm
Height	43.3 in / 1100 mm	43.3 in / 1100 mm	43.3 in / 1100 mm
Weight	320 lb / 145 kg	330 lb / 150 kg	355 lb / 161 kg
Weight (with batteries)	610 lb / 277 kg	620 lb / 281 kg	645 lb / 293 kg
GVW	800 lb / 363 kg	810 lb / 367 kg	835 lb / 379 kg
Squeegee width	38.3 in / 973 mm	41.3 in / 1049 mm	46.6 in / 1234 mm
Solution tank capacity	22.5 gal / 85 L		
Recovery tank capacity	27 gal / 102 L		
Severe Environment tank capacity	0.66 gal / 2.5 L		
Automatic battery watering tank capacity	0.66 gal / 2.5 L		
Scrubbing path width	26 in / 650 mm	28 in / 700 mm	32 in / 800 mm
Down pressure	Low: 40 lbs / 18 kg, Med: 80 lbs / 36 kg, High: 120 lbs / 54 kg		
Scrubbing speed	2.5 mph / 4.0 km/h (220 fpm / 67 mpm)		
Transport speed	2.7 mph / 4.4 km/h (240 fpm / 73 mpm)		
Reverse speed	1.6 mph / 2.6 km/h (144 fpm / 44 mpm)		
Productivity rate - estimated actual	20,571 ft ² /hr / 1911 m ² /hr	22,286 ft ² /hr / 2070 m ² /hr	25,714 ft ² /hr / 2389 m ² /hr
ec-H ₂ O productivity rate - est. actual	23,124 ft ² /hr / 2148 m ² /hr	23,680 ft ² /hr / 2200 m ² /hr	27,323 ft ² /hr / 2538 m ² /hr
Aisle turnaround width	59 in / 1499 mm	59.6 in / 1514 mm	61.6 in / 1565 mm
Maximum operating gradient	2%		
Solution flow rate	Low: .30 gpm / 1.1 L/min, Med: .40 gpm / 1.5 L/min, High: .50 gpm / 1.9 L/min		
ec-H ₂ O solution flow rate	Low: .15 gpm / 0.57 L/min, Med: .22 gpm / 0.84 L/min, High: .30 gpm / 1.14 L/min	Low: .22 gpm / 0.84 L/min, Med: .33 gpm / 1.25 L/min, High: .44 gpm / 1.67 L/min	Low: .22 gpm / 0.84 L/min, Med: .33 gpm / 1.25 L/min, High: .44 gpm / 1.67 L/min
Brush motor	2-24 VDC, 0.75 hp/0.55 kW, 29 A, 220 rpm		
Propel motor	24 VDC, 0.63 hp / 0.48 kW, 20A		
Vacuum motor	24 VDC, 0.63hp / .47 kW, 19.5 A		
Water lift	46 in / 1170 mm		
Water lift Quiet-mode	32 in / 810 mm		
ec-H ₂ O solution pump	24 VDC, 2 A, 1.0 gpm / 3.8 L/min, min open flow		
Severe environment detergent pump	24 VDC, 1.7 A, 2.0 oz/min / 59 ml/min, min open flow		
Automatic battery watering pump	12 VDC, 1.8 A, 0.37 gpm / 1.4 L/min, min open flow		
Spray nozzle pump	24 VDC, 5 A, 4.0 gpm / 15 L/min, min open flow		
Machine voltage	24 VDC		
Battery capacity	4-6V 225AH C/20 Wet, 4-6V 260AH C/20 Wet, 4-6V 220AH C/20 AGM		
Total power consumption	66 A nominal / 1.6 kW		
Battery Charger - on-board	115-240VAC, 50/60Hz, 24VDC, 25A		
Battery Charger - smart off-board	85-265VAC, 50/60Hz, 24VDC, 25A		
Protection grade	IPX3		
Sound pressure level L _{pA} *	66.5 dB(A)	66.5 dB(A)	66.5 dB(A)
Sound pressure level L _{pA} * - Quiet mode	61.7 dB(A)	61.7 dB(A)	61.7 dB(A)
Sound uncertainty K _{pA} *	0.8 dB(A)	0.8 dB(A)	0.8 dB(A)
Sound power level uncertainty L _{pA} - uncertainty K _{pA} *	83.7 dB(A)	83.7 dB(A)	83.7 dB(A)
Machine vibration at hand-arm*	<2.5 m/s ²		
Ambient operating temperature	Min: 36°F/2°C, Max: 110°F/43°C		

*Values per IEC 60335-2-72. Specifications are subject to change without notice.

GENERAL INFORMATION

GENERAL MACHINE DIMENSIONS/CAPACITIES/ PERFORMANCE - North America continued

MODEL	28 in / 700 mm Cylindrical Brush	28 in / 700 Orbital
Length	59.1 in / 1501 mm	58.5 in / 1486 mm
Width	30.7 in / 780 mm	28 in / 710 mm
Height	43.3 in / 1100 mm	43.3 in / 1100 mm
Weight	370 lb / 168 kg	370 lb / 168 kg
Weight (with batteries)	660 lb / 299 kg	660 lb / 299 kg
GVW	850 lb / 386 kg	850 lb / 386 kg
Squeegee width	46.6 in / 1234 mm	41.3 in / 1049 mm
Solution tank capacity	22.5 gal / 85 L	
Recovery tank capacity	26.5 gal / 100 L	
Severe Environment tank capacity	0.66 gal / 2.5 L	
Automatic battery watering tank capacity	0.66 gal / 2.5 L	
Scrubbing path width	28 in / 700 mm	
Down pressure	Low: 40 lbs / 18 kg Med: 80 lbs / 36 kg High: 120 lbs / 54 kg	Low: 110 lbs / 48 kg Med: 140 lbs / 63 kg High: 170 lbs / 77 kg
Scrubbing speed	2.5 mph / 4.0 km/h (220 fpm / 67 mpm)	
Transport speed	2.7 mph / 4.4 km/h (240 fpm / 73 mpm)	
Reverse speed	1.6 mph / 2.6 km/h (144 fpm / 44 mpm)	
Productivity rate - estimated actual	22,286 ft ² /hr / 2070 m ² /hr	20,260 ft ² /hr / 1882 m ² /hr
ec-H2O productivity rate - est. actual	23,680 ft ² /hr / 2200 m ² /hr	21,527 ft ² /hr / 2000 m ² /hr
Aisle turnaround width	59.6 in / 1514 mm	59 in / 1499 mm
Maximum operating gradient	2%	
Solution flow rate	Low: .30 gpm / 1.1 L/min, Med: .40 gpm / 1.5 L/min, High: .50 gpm / 1.9 L/min	
ec-H2O solution flow rate	Low: .22 gpm / 0.84 L/min, Med: .33 gpm / 1.25 L/min, High: .44 gpm / 1.67 L/min	
Brush motor	2-24 VDC, 0.63 hp/0.47 kW, 23 A	24 VDC, 0.75 hp/0.55 kW, 28 A
Propel motor	24 VDC, 0.63 hp / 0.48 kW, 20A	
Vacuum motor	24 VDC, 0.63hp / .47 kW, 19.5 A	
Water lift	46 in / 1170 mm	
Water lift Quiet-mode	32 in / 810 mm	
ec-H2O solution pump	24 VDC, 2 A, 1.0 gpm / 3.8 L/min, min open flow	
Severe environment detergent pump	24 VDC, 1.7 A, 2.0 oz/min / 59 ml/min, min open flow	
Automatic battery watering pump	12 VDC, 1.8 A, 0.37 gpm / 1.4 L/min, min open flow	
Spray nozzle pump	24 VDC, 5 A, 4.0 gpm / 15 L/min, min open flow	
Machine voltage	24 VDC	
Battery capacity	4-6V 225AH C/20 Wet, 4-6V 260AH C/20 Wet, 4-6V 220AH C/20 AGM	
Total power consumption	66 A nominal / 1.6 kW	
Battery Charger - on-board	115-240VAC, 50/60Hz, 24VDC, 25A	
Battery Charger - smart off-board	85-265VAC, 50/60Hz, 24VDC, 25A	
Protection grade	IPX3	
Sound pressure level L _{pA} *	66.4 dB(A)	67 dB(A)
Sound pressure level L _{pA} * - Quiet mode	61.8 dB(A)	60.6 dB(A)
Sound uncertainty K _{pA} *	0.8 dB(A)	0.8 dB(A)
Sound power level uncertainty L _{pA} - uncertainty K _{pA} *	85.2 dB(A)	84.0 dB(A)
Machine vibration at hand-arm*	<2.5 m/s ²	
Ambient operating temperature	Min: 36°F/2°C, Max: 110°F/43°C	

*Values per IEC 60335-2-72. Specifications are subject to change without notice.

**GENERAL MACHINE DIMENSIONS/CAPACITIES/
PERFORMANCE (EU)**

MODEL	650 mm Dual Disk	700 mm Dual Disk	800 mm Dual Disk
Length	1486 mm	1501 mm	1552 mm
Width	700 mm	750 mm	850 mm
Height	1100 mm	1100 mm	1100 mm
Weight	145 kg	150 kg	161 kg
Weight (with batteries)	277 kg	281 kg	293 kg
GVW	363 kg	367 kg	379 kg
Squeegee width	973 mm	1049 mm	1234 mm
Solution tank capacity	85 L		
Recovery tank capacity	102 L		
Severe Environment tank capacity	2.5 L		
Automatic battery watering tank capacity	2.5 L		
Scrubbing path width	650 mm	700 mm	800 mm
Down pressure	Low: 18 kg, Med: 36 kg, High: 54 kg		
Scrubbing speed	67 mpm / 4.0 km/h		
Transport speed	73 mpm / 4.4 km/h		
Reverse speed	44 mpm / 2.6 k/h		
Productivity rate - estimated actual	1911 m ² /hr	2070 m ² /hr	2389 m ² /hr
ec-H2O productivity rate - est. actual	2148 m ² /hr	2200 m ² /hr	2538 m ² /hr
Scrubbing speed (high speed model)	84 mpm / 5.0 km/h		
Transport speed (high speed model)	91 mpm / 5.5 km/h		
Reverse speed (high speed model)	44 mpm / 2.6 km/h		
Productivity rate - estimated actual (high speed model)	2389 m ² /hr	2588 m ² /hr	2986 m ² /hr
ec-H2O productivity rate - est. Actual (high speed model)	2685 m ² /hr	2750 m ² /hr	3173 m ² /hr
Aisle turnaround width	1499 mm	1514 mm	1565 mm
Maximum operating gradient	2%		
Solution flow rate	Low: 1.1 L/min, Med: 1.5 L/min, High: 1.9 L/min		
ec-H2O solution flow rate	Low: 0.57 L/min, Med: 0.84 L/min, High: 1.14 L/min	Low: 0.84 L/min, Med: 1.25 L/min, High: 1.67 L/min	Low: 0.84 L/min, Med: 1.25 L/min, High: 1.67 L/min
Brush motor	2-24 VDC, 0.75 hp/0.55 kW, 29 A, 220 rpm		
Propel motor	24 VDC, 0.63 hp / 0.48 kW, 20A		
Vacuum motor	24 VDC, 0.63hp / .47 kW,19.5 A		
Water lift	1170 mm		
Water lift Quiet-mode	810 mm		
ec-H2O solution pump	24 VDC, 2 A, 3.8 L/min, min open flow		
Severe environment detergent pump	24 VDC, 1.7 A, 59 ml/min, min open flow		
Automatic battery watering pump	12 VDC, 1.8 A, 1.4 L/min, min open flow		
Spray nozzle pump	24 VDC, 5 A, 15 L/min, min open flow		
Machine voltage	24 VDC		
Battery capacity	4-6V 210AH C/5 Wet, 4-6V 180AH C/5 Wet		
Total power consumption	66 A nominal / 1.6 kW		
Battery Charger - on-board	115-240VAC, 50/60Hz, 24VDC, 25A		
Battery Charger - smart off-board	85-265VAC, 50/60Hz, 24VDC, 25A		
Protection grade	IPX3		
Sound pressure level L _{pA} *	66.5 dB(A)	66.5 dB(A)	66.5 dB(A)
Sound pressure level L _{pA} * - Quiet mode	61.7 dB(A)	61.7 dB(A)	61.7 dB(A)
Sound uncertainty K _{pA} *	0.8 dB(A)	0.8 dB(A)	0.8 dB(A)
Sound power level uncertainty L _{pA} - uncertainty K _{pA} *	83.7 dB(A)	83.7 dB(A)	83.7 dB(A)
Machine vibration at hand-arm*	<2.5 m/s ²		
Ambient operating temperature	Min: 28°C, Max: 43°C		

*Values per IEC 60335-2-72. Specifications are subject to change without notice.

GENERAL INFORMATION




GENERAL MACHINE DIMENSIONS/CAPACITIES/ PERFORMANCE - EU continued

MODEL	700 mm Cylindrical Brush	700 mm Orbital
Length	1501 mm	1486 mm
Width	780 mm	710 mm
Height	1100 mm	1100 mm
Weight	168 kg	168 kg
Weight (with batteries)	299 kg	299 kg
GVW	386 kg	386 kg
Squeegee width	1234 mm	1049 mm
Solution tank capacity	85 L	
Recovery tank capacity	102 L	
Severe Environment tank capacity	2.5 L	
Automatic battery watering tank capacity	2.5 L	
Scrubbing path width	700 mm	
Down pressure	Low: 18 kg Med: 36 kg High: 54 kg	Low: 48 kg Med: 63 kg High: 77 kg
Scrubbing speed	67 mpm / 4.0 km/h	
Transport speed	73 mpm / 4.4 km/h	
Reverse speed	44 mpm / 2.6 km/h	
Productivity rate - estimated actual	2070 m ² /hr	1882 m ² /hr
ec-H ₂ O productivity rate - est. actual	2200 m ² /hr	2000 m ² /hr
Scrubbing speed (high speed model)	84 mpm / 5.0 km/h	n/a
Transport speed (high speed model)	91 mpm / 5.5 km/h	n/a
Reverse speed (high speed model)	44 mpm / 2.6 km/h	n/a
Productivity rate - estimated actual (high speed model)	2588 m ² /hr	n/a
ec-H ₂ O productivity rate - est. Actual (high speed model)	2750 m ² /hr	n/a
Aisle turnaround width	1514 mm	1499 mm
Maximum operating gradient	2%	
Solution flow rate	Low: 1.1 L/min, Med: 1.5 L/min, High: 1.9 L/min	
ec-H ₂ O solution flow rate	Low: 0.84 L/min, Med: 1.25 L/min, High: 1.67 L/min	
Brush motor	2-24 VDC, 0.63 hp/0.47 kW, 23 A, 1500 rpm	24 VDC, 0.75 hp/0.55 kW, 28 A, 2200 rpm
Propel motor	24 VDC, 0.63 hp / 0.48 kW, 20A	
Vacuum motor	24 VDC, 0.63hp / .47 kW, 19.5 A	
Water lift	1170 mm	
Water lift Quiet-mode	810 mm	
ec-H ₂ O solution pump	24 VDC, 2 A, 3.8 L/min, min open flow	
Severe environment detergent pump	24 VDC, 1.7 A, 59 ml/min, min open flow	
Automatic battery watering pump	12 VDC, 1.8 A, 1.4 L/min, min open flow	
Spray nozzle pump	24 VDC, 5 A, 15 L/min, min open flow	
Machine voltage	24 VDC	
Battery capacity	4-6V 210AH C/5 Wet, 4-6V 180AH C/5 Wet	
Total power consumption	66 A nominal / 1.6 kW	
Battery Charger - on-board	115-240VAC, 50/60Hz, 24VDC, 25A	
Battery Charger - smart off-board	85-265VAC, 50/60Hz, 24VDC, 25A	
Protection grade	IPX3	
Sound pressure level L _{pA} *	66.4 dB(A)	67 dB(A)
Sound pressure level L _{pA} * - Quiet mode	61.8 dB(A)	60.6 dB(A)
Sound uncertainty K _{pA} *	0.8 dB(A)	0.8 dB(A)
Sound power level uncertainty L _{pA} - uncertainty K _{pA} *	85.2 dB(A)	84.0 dB(A)
Machine vibration at hand-arm*	<2.5 m/s ²	
Ambient operating temperature	Min: 28°C, Max: 43°C	




*Values per IEC 60335-2-72. Specifications are subject to change without notice.

MACHINE DIMENSIONS


DUAL DISK MODEL

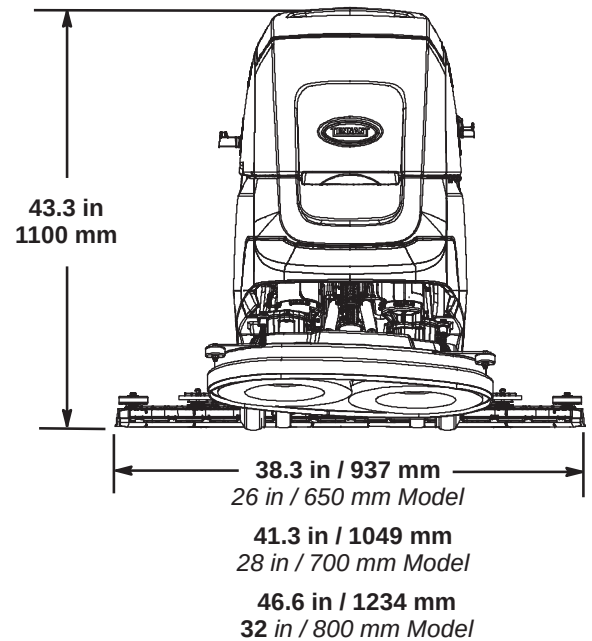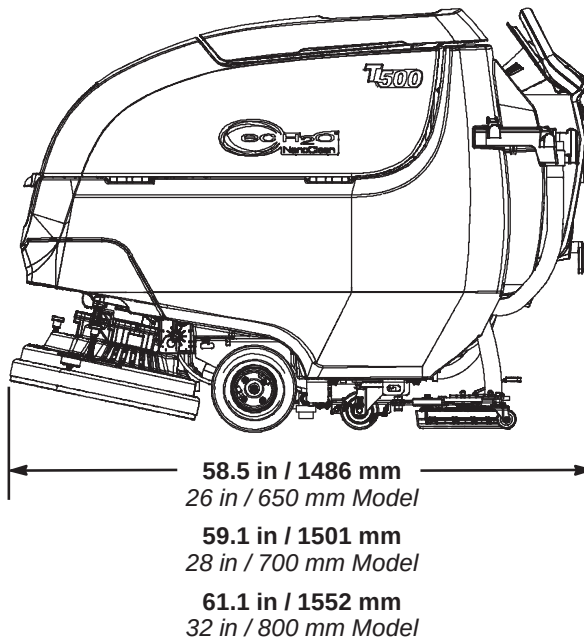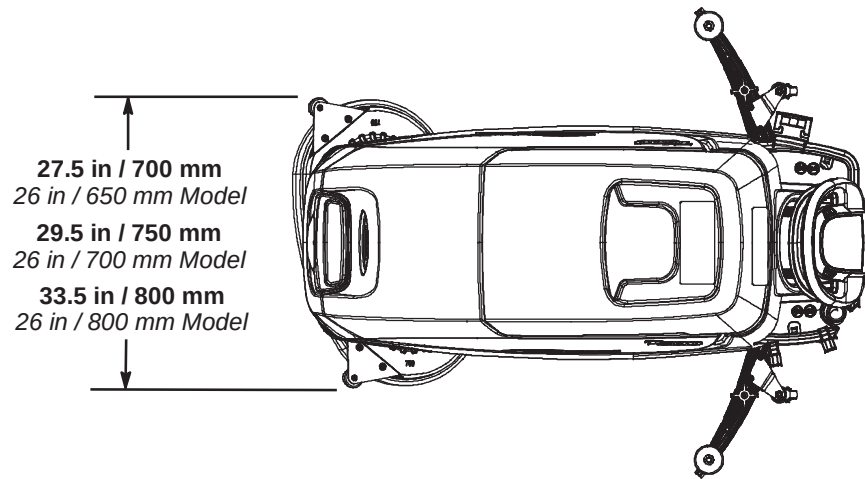


CYLINDRICAL BRUSH MOEL

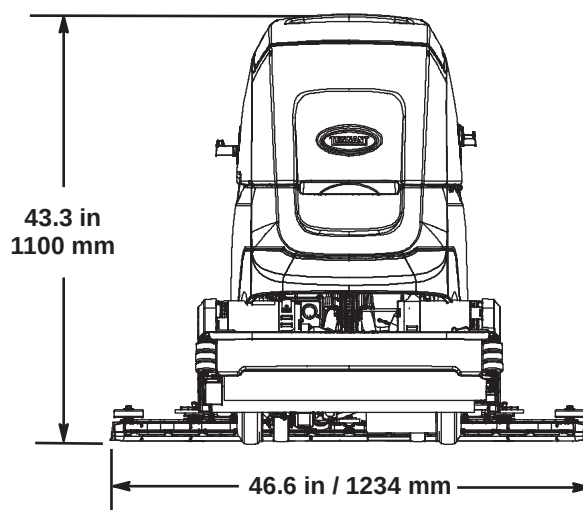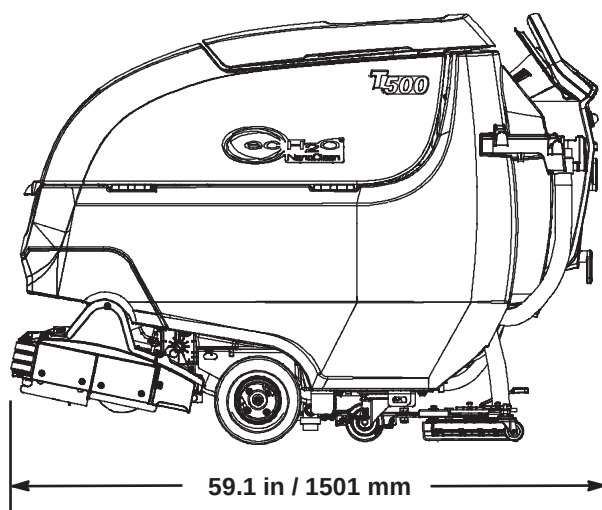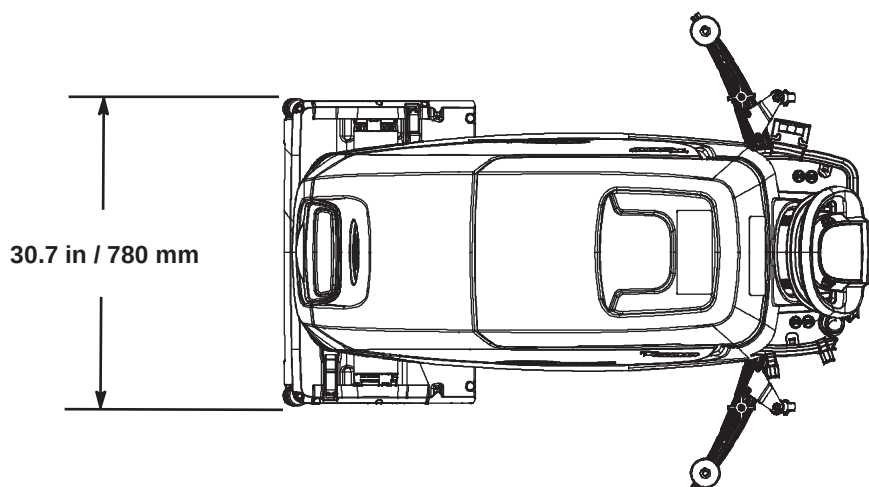

ORBITAL PAD MODEL

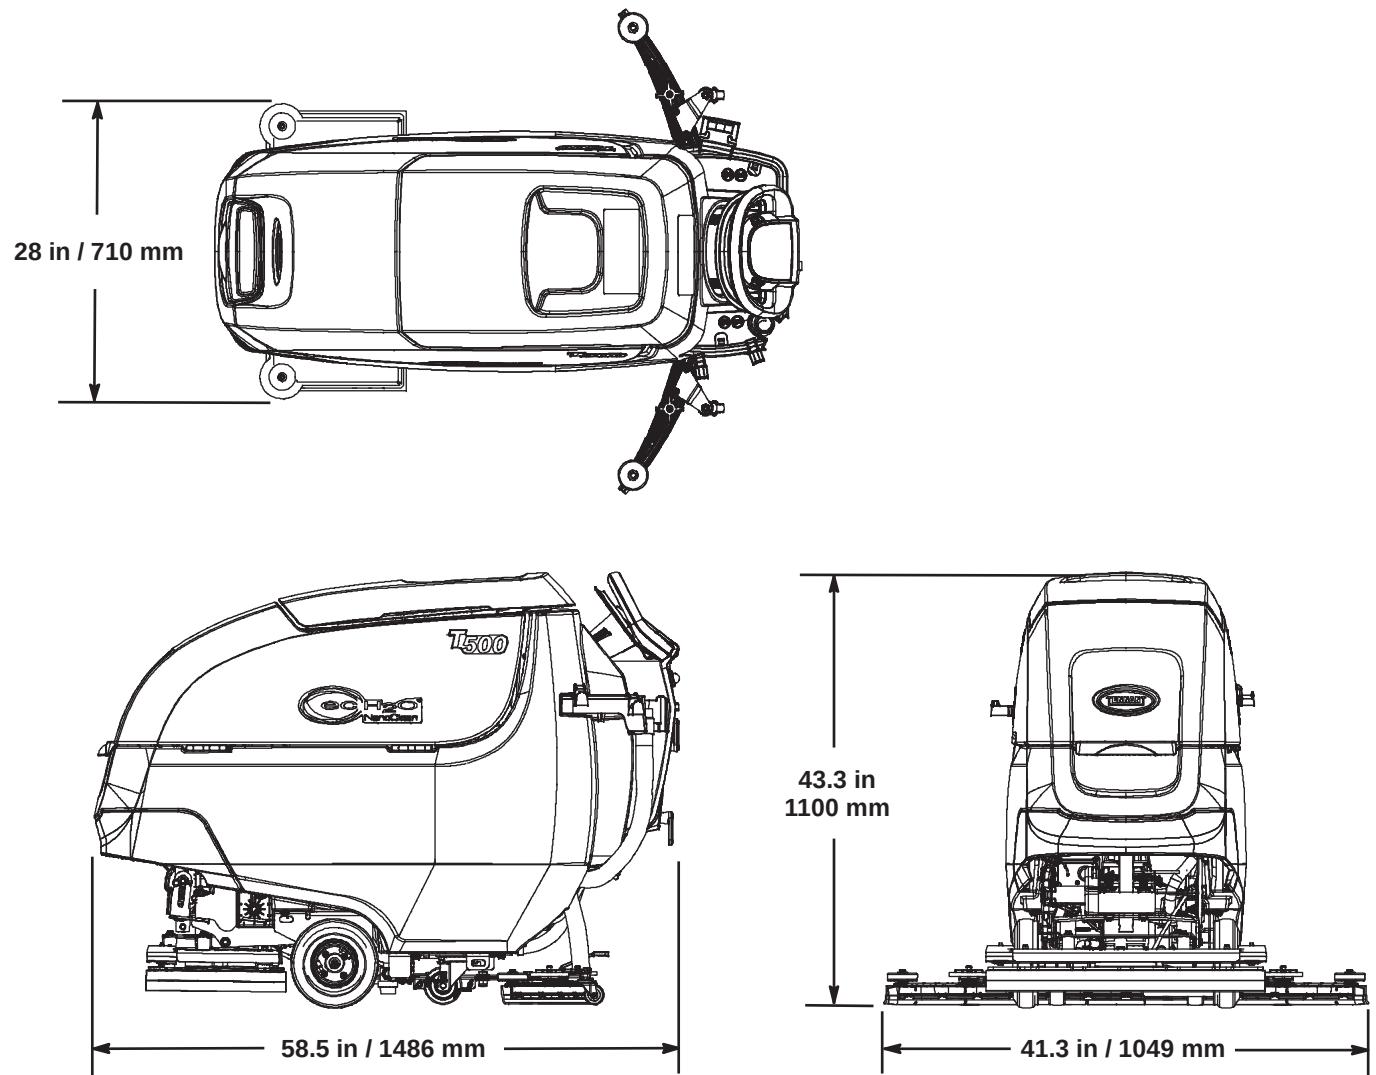

MAINTENANCE

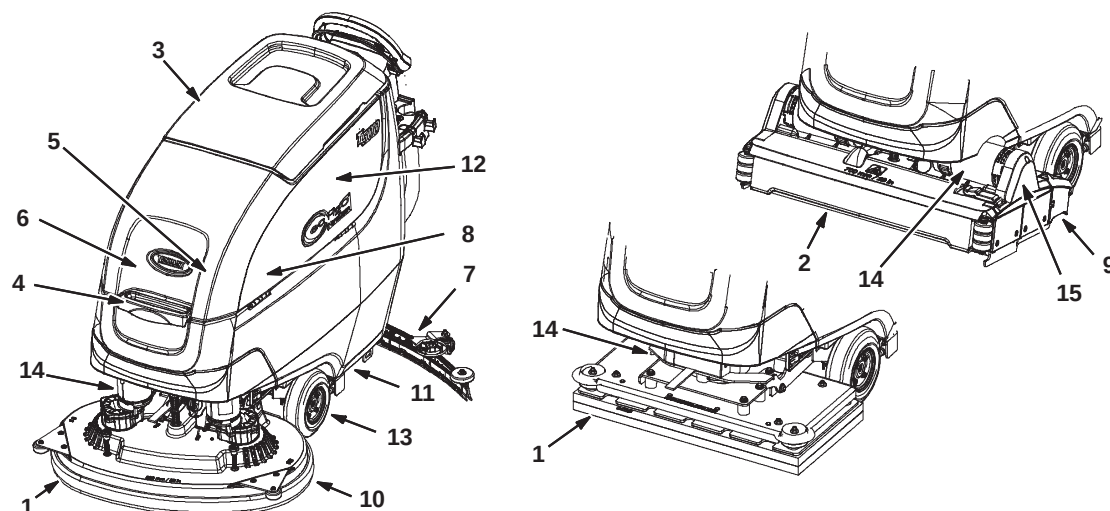

MAINTENANCE CHART

The table below indicates the Person Responsible for each procedure.

O = Operator T = Trained Personnel

Interval	Person Resp.	Key	Description	Procedure
Daily	O	1	Pads	Check, flip, or replace
	O	1	Brushes	Check, clean
	O	2	Cylindrical brushes	Check, clean
	O	3	Recovery tank	Drain, rinse, clean float shut-off screen and debris tray
	O	4	Solution tank	Drain, rinse
	O	5	Severe environment tank (option)	Check, refill
	O	6	Automatic battery watering tank (option)	Check, refill
	O	7	Squeegee	Clean, check for damage and wear
	O	8	Batteries	Charge if necessary
	O	9	Debris trough	Clean
	O	10	Scrub head skirt	Check for damage and wear
Weekly	O	8	Battery cells	Check electrolyte level
	O	7	Squeegee assembly drip trap reservoir	Check, clean
50 Hours	O	2	Cylindrical brushes	Rotate brushes. Check for wear
	O	2	Cylindrical scrub head	Clean underside of scrub head
	O	3	Recovery tank lid seal	Check for wear.
	O	11	Solution tank filter	Remove and clean
100 Hours	O	8	Battery watering system (option)	Check hoses for damage and wear
200 Hours	O	8	Batteries, terminals and cables	Check and clean
750 Hours	T	12	Vacuum motor	Replace carbon brushes
1250 Hours	T	13	Propel motor	Replace carbon brushes
	T	14	Brush motor	Replace carbon brushes
	T	15	Brush belt	Replace belt

MACHINE MAINTENANCE


To keep the machine in good working condition, simply perform the following maintenance procedures.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine wear personal protection equipment as needed. All repairs must be performed by trained personnel

YELLOW TOUCH POINTS

This machine features easy to find yellow touch points for simple service items. No tools are required to perform these maintenance operations.

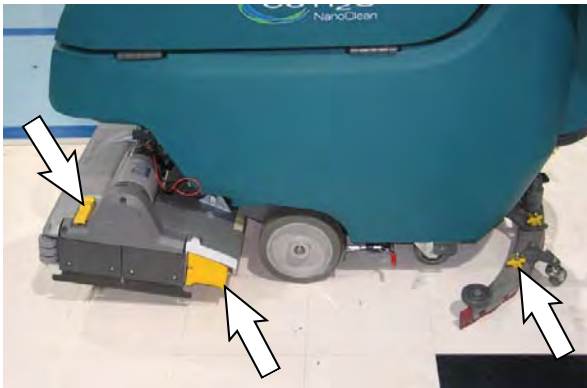

AFTER DAILY USE

1. Drain and rinse out the recovery tank. See DRAINING TANKS.



If machine is equipped the spray nozzle option, usespray nozzle to rinse out recovery tank. If cleaning detergent was added to solution tank, do not use spray nozzle for rinsing proposes.

FOR SAFETY: When servicing machine, do not power spray or hose off machine. Electrical malfunction may occur. Use damp cloth.



2. Remove the debris tray and empty.



3. Remove and clean the float shut-off screen.




MAINTENANCE

4. Drain and rinse out the solution tank



Orbital scrub head - Turn the working pad over or replace when worn

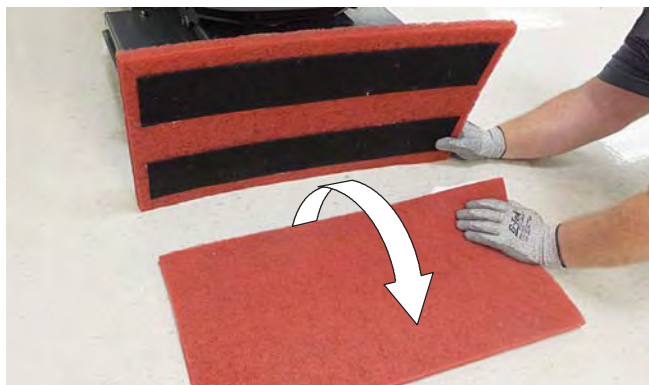

5. Disk scrub head - Turn pad over or replace when worn



6. Replace brushes when they no longer clean effectively or when the bristles are worn to the yellow indicator



7. Wipe the squeegee blades clean. Inspect blades for wear and damage. Rotate blade if worn. See SQUEEGEE BLADE REPLACEMENT.



8. Clean scrub head skirt. Check for wear or damage. Replace if worn or damaged



9. Clean the outside surface of the machine with an all purpose cleaner and damp cloth.

FOR SAFETY: When servicing machine, do not power spray or hose off machine. Electrical malfunction may occur. Use damp cloth.




10. Cylindrical brush scrub head - Remove and clean debris trough.



11. Severe environment option - Refill the severe environment tank with a recommended cleaning detergent at full concentration. Replace cap.



12. Automatic battery watering option - Refill tank with distilled water. Replace cap.

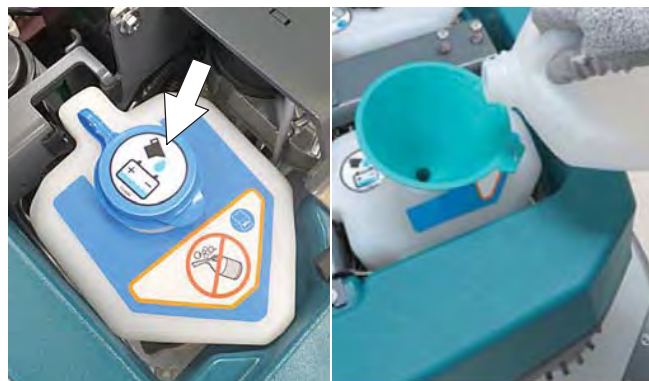

13. Charge batteries. See BATTERIES.




ATTENTION: Do not disconnect battery cables while charger is plugged in, circuit board damage may result.

MAINTENANCE

AFTER WEEKLY USE

1. Check the electrolyte level in all batteries. See BATTERIES.

NOTE: If machine is equipped with the automatic or manual battery watering system, See BATTERIES.

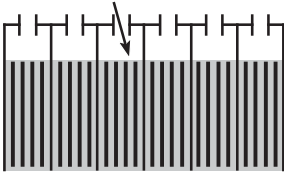


2. Remove the drip trap cover from the squeegee assembly and clean reservoir.



AFTER EVERY 50 HOURS OF USE

1. Drain solution tank. Remove the solution tank filter and clean screen (Figure 109). Turn the filter bowl counter-clockwise to remove.

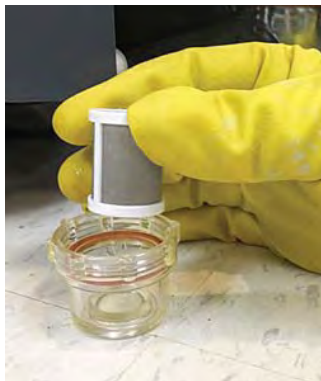

2. Cylindrical brushes - Rotate brushes from front to rear. Replace brushes when they no longer clean effectively.



3. Cylindrical scrub head - Remove debris buildup from underside of scrub head, including the idler plates and drive hubs



4. Inspect and clean the seal on the recovery tank lid. Replace seal if damaged.



AFTER EVERY 100 HOURS OF USE

If machine is equipped with the optional battery watering system, check hoses for leaks, loose hose connections and for damage or wear. Replace system if damaged.

FOR SAFETY: When servicing batteries, wear personal protection equipment as needed. Avoid contact with battery acid.



ELECTRIC MOTORS


Replace motor carbon brushes as indicated. Contact trained personnel for carbon brush replacement.

Carbon Brush Replacement	Hours
Vacuum motor	750
Propel motor	1250
Disk brush motors	1250
Cylindrical brush motors	1250
Orbital brush motor	1250

BELTS (Cylindrical Brush Model)

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

Replace belts every 1250 hours. Contact trained personnel for belt replacement.

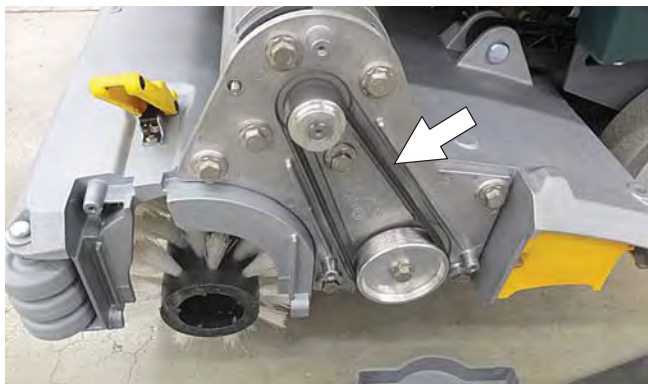

BATTERIES

FOR SAFETY: Before servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

The lifetime of the batteries depends on their proper maintenance. To get the most life from the batteries;

- Do not charge the batteries more than once a day and only after running the machine for a minimum of 15 minutes.
- Do not leave the batteries partially discharged for long period of time.
- Only charge the batteries in a well-ventilated area to prevent gas build up. Charge batteries in areas with ambient temperatures 80°F/27°C or less.
- Allow the charger to complete charging the batteries before re-using the machine.
- Maintain the proper electrolyte levels of flooded (wet) batteries by checking levels weekly.

This machine is equipped with either flooded (wet) lead-acid or maintenance-free (Sealed AGM) batteries supplied by Tennant.

FOR SAFETY: When servicing machine, keep all metal objects off batteries. Avoid contact with battery acid.

MAINTENANCE-FREE BATTERIES


Maintenance-free (Sealed AGM) batteries do not require watering. Cleaning and other routine maintenance is still required.

FLOODED (WET) LEAD-ACID BATTERIES

The flooded (wet) lead-acid batteries require routine watering as described below. Check the battery electrolyte level weekly.

NOTE: If machine is equipped with the automatic or manual battery watering system, proceed to the BATTERY WATERING SYSEM instructions.

The electrolyte level should be slightly above the battery plates as shown before charging. Add distilled water if low. DO NOT OVERFILL. The electrolyte will expand and may overflow when charging. After charging, distilled water can be added up to about 3 mm (0.12 in) below the sight tubes.

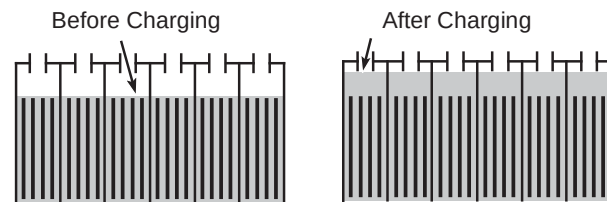

NOTE: Make sure the battery caps are in place while charging. There may be a sulfur smell after charging batteries. This is normal.

CHECKING CONNECTIONS / CLEANING

After every 200 hours of use, check for loose battery connections and clean the surface of the batteries, including terminals and cable clamps to prevent battery corrosion. Use a scrub brush with a strong mixture of baking soda and water. Do not remove battery caps when cleaning batteries.



CHARGING BATTERIES

The charging instructions in this manual are intended for the battery charger supplied with your machine. The use of other battery chargers that are not supplied and approved by Tennant are prohibited.

If machine is equipped with an off-board battery charger refer to the charger's owners manual for operating instructions. Contact distributor or Tennant for battery charger recommendations if machine is not equipped with charger.

FOR SAFETY: The use of incompatible battery chargers may damage battery packs and potentially cause a fire hazard.

IRIS® Battery Charging Metrics Notification: Machines equipped with capability to report battery charging data via IRIS are supplied with a charger and set of batteries from the factory. When a battery reaches its end of life and must be replaced, Tennant highly recommends that the same battery type be used to continue to maximize the machines performance. In the event a battery with a different amp hour (AH), type (Flooded, AGM, Gel), or manufacturer is selected for replacement please contact Tennant technical service department for assistance in determining the feasibility of the replacement batteries and if so, selecting the correct charging profile. Availability of IRIS battery metric reporting is not guaranteed with third party supplied batteries.

IMPORTANT NOTICE: The battery charger is set to charge the battery type supplied with the machine. If it is necessary to change to a different battery type or capacity (i.e. flooded (wet) lead-acid, maintenance-free, sealed, AGM batteries, etc...), the charger charging profile must be changed to prevent battery damage. See BATTERY CHARGER SETTINGS.

1. Transport the machine to a well-ventilated area.



WARNING: Batteries emit hydrogen gas. Explosion or fire can result. Keep sparks and open flame away when charging.

2. Park the machine on a flat, dry surface, turn off machine and remove key.

FOR SAFETY: When servicing batteries, stop on level surface, turn off machine, remove key and set parking brake if equipped.


3. If the machine is equipped with flooded (wet) leadacid batteries check the battery electrolyte level weekly before charging. For models equipped with the automatic battery watering system, check if the automatic battery water tank needs refilling. Add distilled water if low.

4. For models equipped with an on-board charger, remove the charger's power cord from the storage hooks and plug power cord into a properly grounded wall outlet.



For models equipped with off-board chargers, first connect the charger's DC cord into the machine's battery charge receptacle then plug the AC power supply cord into a properly grounded wall outlet. Refer to the off-board battery charger's owner manual for operating instructions.

FOR SAFETY: Do not disconnect the off-board charger's DC cord from the machine's receptacle when the charger is operating. Arcing may result. If the charger must be interrupted during charging, disconnect the AC power supply cord first.

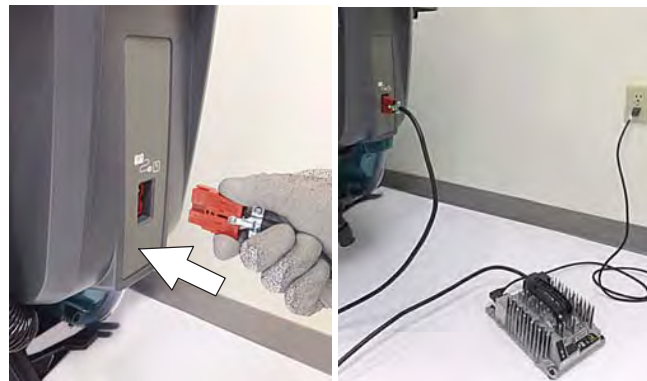

- The charger will automatically begin charging and shut off when fully charged. The maximum charging cycle may take up to 6-12 hours depending on battery type.

On-board battery charger: The battery discharge indicator lights will ripple back and forth during the charging cycle. When all five lights repeatedly flash two times, the charging cycle is complete.



Pro-membrane



Pro-panel

ATTENTION: Do not disconnect battery cables while charger is plugged in, circuit board damage may result.

- After charging batteries unplug the power supply cord and wrap cord around the cord hooks.

For models equipped with an off-board charger, always disconnect the AC power supply cord first before disconnecting charger from machine



NOTE: For machines shipped without batteries, the battery discharge indicator and the on-board battery charger are set for GEL batteries as the default. If you choose to use a different battery type, the settings must be changed as described as below.

NOTE: For Pro-Membrane models shipped without batteries and an Off-Board Charger, the off-board battery charger is set for wet lead-acid batteries from the factory. The machine's battery discharge indicator is set for GEL batteries as the default. The battery discharge indicator must be reprogrammed to match charger settings, contact service.

IRIS MODELS: For models equipped with capability to report battery charging data via IRIS, Tennant recommends using the same battery type. If a different amp hour or battery type is desired, Call Tennant Technical Support to report new battery type.

OFF-BOARD BATTERY CHARGER

Refer to the off-board charger's owner manual to change the charging profile.

To reprogram the machine's battery discharge indicator (BDI), see below:

Pro-Membrane Model - Service application software required, contact service.

Pro-Panel Model - See CHANGING ON-BOARD BATTERY CHARGER SETTINGS for Pro-Panel model.

Pro-Membrane Model



Pro-Panel Model (LCD)



BATTERY CHARGER SETTINGS

The battery charger is set to charge the battery type supplied with your machine. If you choose to change to a different battery type or capacity, the charger's charging profile must be changed to prevent battery damage.

The machine's battery discharge indicator (BDI) must also be reprogrammed to match battery type to prevent battery damage and/or short run-time.

ON-BOARD BATTERY CHARGER

Pro-Membrane Model - Service application software required, contact service. As an alternative, the charger profile may be manually changed. See CHANGING ON-BOARD BATTERY CHARGER SETTINGS for Pro-Membrane model. The battery discharge indicator will automatically reprogram to match battery type when the battery charger profile is changed.

Pro-Panel Model - See CHANGING ON-BOARD BATTERY CHARGER SETTINGS for Pro-Panel model. The battery discharge indicator will automatically reprogram to match battery selection.


CHANGING ON-BOARD BATTERY CHARGER SETTINGS (Pro-Membrane model)

To manually change the on-board battery charger settings for a different battery type, carefully follow instructions as described below

NOTE: The manual method is only an alternative if unable to change setting by use of the Service Application Software performed by Service.

1. Disconnect the battery cable connection at machine.

FOR SAFETY: When servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

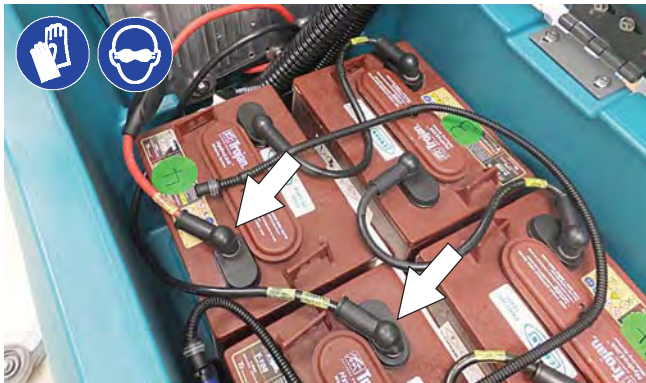


2. Unwrap the battery charger power cord from the cord hooks.
3. Using a T25 star screwdriver, remove the two screws located at the bottom of the control console to access battery charger.



4. Carefully peel back the charger display label to access the dial settings.



5. Using a small standard screwdriver, turn the dial to the appropriate battery type according to the following chart.

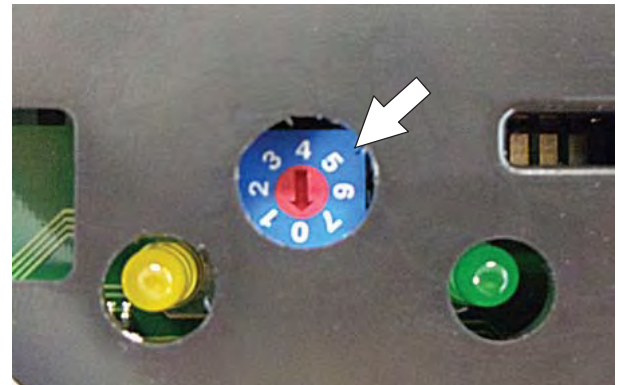

Dial Position	Battery Description Settings with AH Ranges
0	CAN-BUS setting*
1	Wet, Trojan 180-260 AH
2	Wet, Trojan 270-360 AH
3	Wet, Enersys/Tab 200-350 AH
4	AGM, Tianneng 180-260 AH
5	AGM, Discover 200-350 AH
6	Gel, Sonnenschein 80-150 AH

* The CAN-BUS setting, dial position "0", is the software setting that is programmed to match battery type supplied with machine. When the dial is manually changed to a different setting, it should not be reset back to "0" otherwise battery damage may result. Service Application Software is required to reset dial back to "0". Contact Service.

6. Re-apply the display label.
7. Replace the control console.
8. To set the BDI for the new battery type, plug the on-board battery charger cord into an electrical outlet. The machine's software will automatically reprogram the BDI to the new battery type.


CHANGING ON-BOARD BATTERY CHARGER SETTINGS (Pro-Panel model)

NOTE: To perform this procedure, machine must be in supervisor mode. See SUPERVISOR CONTROLS instructions at back of manual.

1. Turn the key to the on position.
2. Press the settings button located on the home screen.



3. Press the Battery Type button.

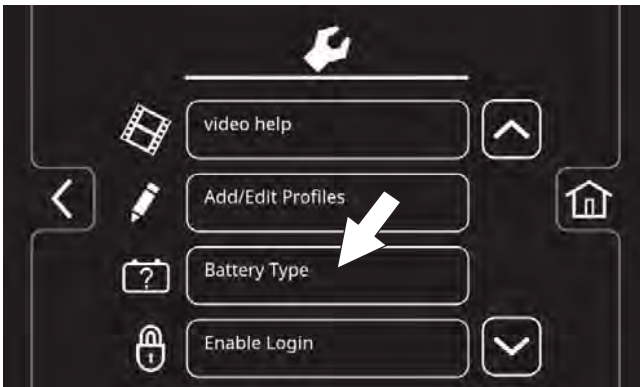


4. Select battery type and brand installed in machine. See battery label to determine type and brand. Press the up and down arrows to scroll through battery selection.



NOTE: The battery charger profile and battery discharge indicator will automatically reprogram when battery type is selected.

HYDROLINK® BATTERY WATERING SYSTEM (Trojan® Battery OPTION)

The following instructions are for models equipped with the HydroLink battery watering system option.

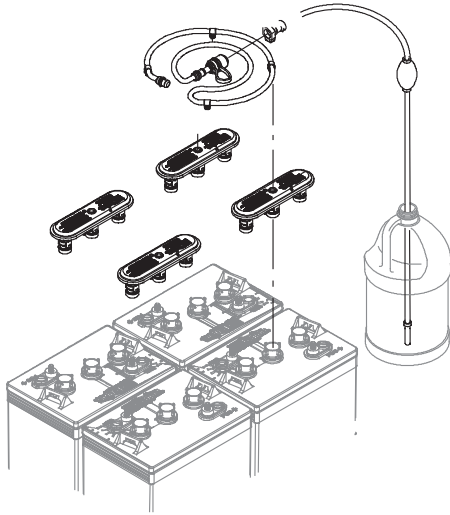


The optional HydroLink battery watering system provides a safe and easy way to maintain the proper electrolyte levels in your batteries. It is designed exclusively for Trojan flooded (wet) lead-acid batteries.


FOR SAFETY: When servicing machine, wear personal protection equipment as needed. Avoid contact with battery acid.

Before using the battery watering system check hoses and connections for damage or wear.

1. Fully charge batteries prior to using the battery watering system. Do not add water to batteries before charging, the electrolyte level will expand and may overflow when charging.
2. After charging batteries, check the battery electrolyte level indicators located on the battery covers. If the level indicator is white add water as described in the following instructions. If the level indicators are black the electrolyte is at the correct level, no water is required.

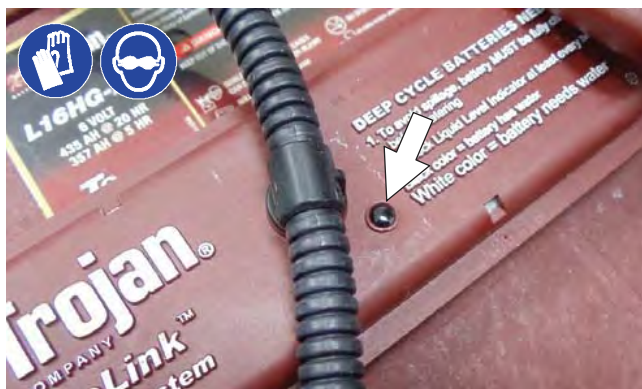


3. Locate the battery fill hose coupler inside the battery compartment. Remove the dust cap and connect the hand pump hose.

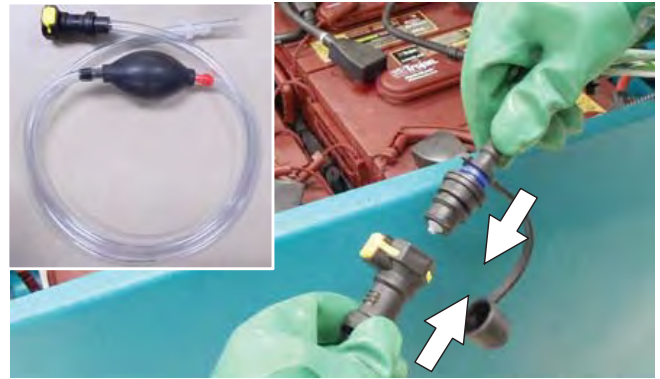

4. Submerge the other end of the hand pump hose into a bottle of distilled water




5. Squeeze the bulb on the hand pump hose until firm. The level indicators will turn black when full.

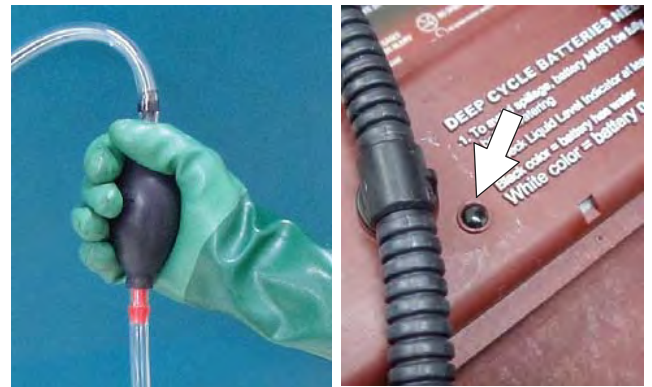

6. After adding water, replace the dust cap on the battery fill hose and store the hand pump hose inside the machine's battery compartment for future use.

MANUAL HAND PUMP BATTERY WATERING SYSTEM (TAB BATTERY OPTION)

The following instructions are for machines equipped with the manual hand pump battery watering system option.

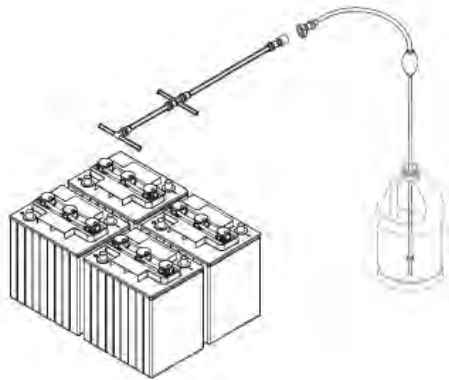

This optional manual battery watering system provides a safe and easy way to maintain the proper electrolyte levels in your batteries. It is designed for Wet BFS TAB batteries only.

FOR SAFETY: When servicing machine, wear personal protection equipment as needed. Avoid contact with battery acid.

Before using the battery watering system check hoses and connections for damage or wear.

1. Fully charge batteries prior to using the battery watering system. Do not add water to batteries before charging, the electrolyte level will expand and may overflow when charging.
2. After charging batteries, check the battery electrolyte level indicators located on the battery covers. If the white level indicator is at the low position, add distilled water as described in the following instructions. If the white level indicator is at the full position (against the transparent window), the electrolyte is at the correct level, no water is required.



3. Locate the battery fill hose coupler inside the battery compartment. Connect the hand pump hose to the battery watering system.



4. Submerge the other end of the hand pump hose into a bottle of distilled water.



5. Squeeze the bulb on the hand pump hose until firm. The white level indicators will raise to the full position.



6. After adding water, store the hand pump hose inside the machine's battery compartment for future use.

AUTOMATIC BATTERY WATERING SYSTEM

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.


The automatic battery watering system is designed to automatically refill the batteries after the machine reaches a limited number of charge cycles. Do not remove battery caps and manually add water to the batteries.

Check the automatic battery watering system for leaks, loose hose connections and for damage or wear. Replace if damaged.




Check the water level in the automatic watering tank periodically. Add distilled water when low.

FOR SAFETY: When servicing machine, only use distilled water when filling the automatic battery watering tank.

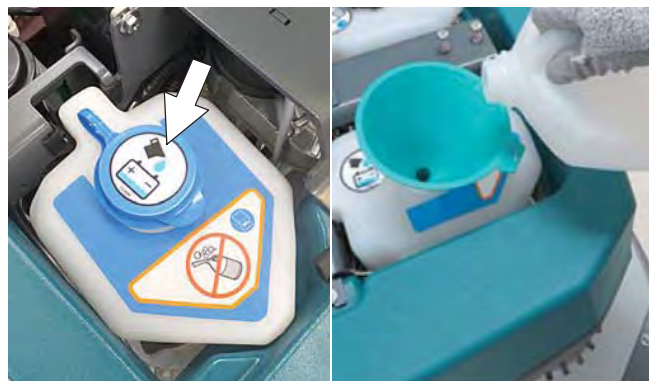

The automatic battery watering indicator will also alert user to add distilled water when tank is empty. See CONTROL PANEL OPERATION for further details.

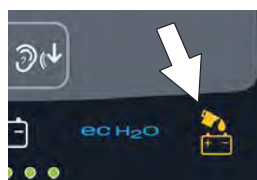

To store machine equipped with the automatic battery watering system in freezing temperatures, see STORING MACHINE/FREEZE PROTECTION.

SQUEEGEE BLADE REPLACEMENT

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

Each squeegee blade has four wiping edges. When the blades become worn, simply rotate the blades end-for-end or top-to-bottom for a new wiping edge. Replace blade if all four edges are worn.


1. Remove the squeegee assembly from the machine.
2. Fully loosen the two outside knobs on squeegee assembly. This will separate the spring loaded blade retainer from squeegee frame. To loosen the knobs quickly, squeeze the blade retainer and squeegee frame together




3. Remove worn blade(s) from the blade retainer.



4. Rotate the rear blade to a new wiping edge and Reinstall blade. Make sure to align the slots in the blade with retainer tabs.

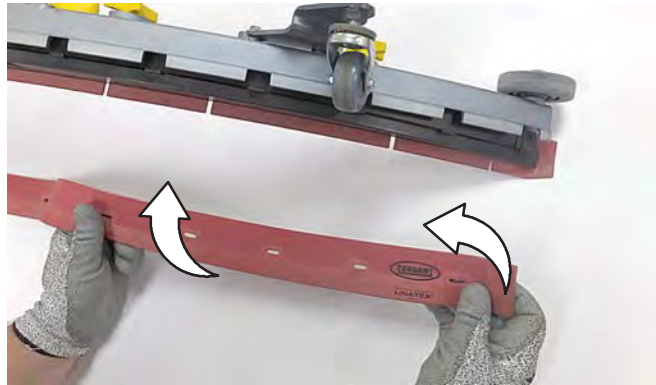

5. Squeeze the squeegee frame and blade retainer together and re-tighten the two outside knobs.

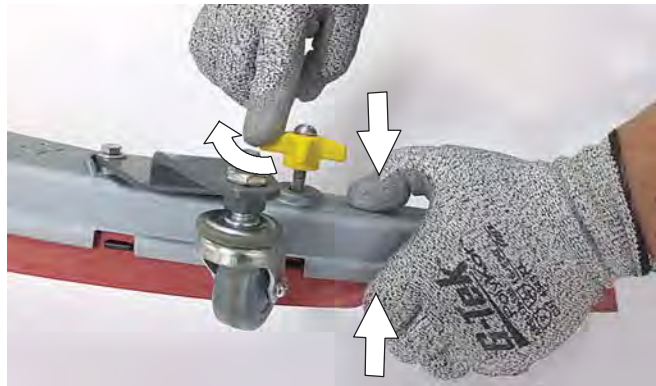

ec-H2O WATER CONDITIONING CARTRIDGE REPLACEMENT

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

The water conditioning cartridge is required to be replaced when it reaches its maximum water usage or expiration time of when the cartridge was activated, whichever comes first. The control panel will signal a code when it is time to replace cartridge. See CONTROL PANEL OPERATION for further details.


Depending on machine usage, on average, a new cartridge can last anywhere from 12 months for heavy machine usage to 24 months for light machine usage.

ATTENTION: During first time use and after replacing the water conditioning cartridge, the ec-H2O system will automatically override the selected solution flow rate for up to 75 minutes.

1. Park the machine on a level surface, remove the key and set parking brake, if equipped.
2. Lift the recovery tank to access the ec-H2O water conditioning cartridge. Drain recovery tank before lifting tank.



3. Disconnect the two hose connectors from the top of the cartridge by pressing the gray collars inward and pulling the connectors outward. Lift cartridge to remove.

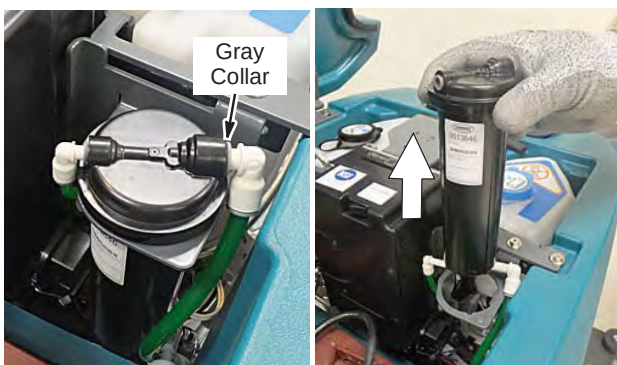


4. Fill in the installation date on the new cartridge label.



5. Install the new cartridge and reconnect the two hoses. Make sure the hose connectors are fully inserted into the cartridge.
6. Reset timer for new cartridge

Carefully read and understand all steps first before performing procedure.

- a. Turn key on.
- b. Press and hold the service switch, located on the ec-H2O module, for 10 seconds. After releasing service switch, the three solution flow indicator lights will begin to (ripple) move back and forth.
- c. Within 5 seconds after releasing the service switch, while the three indicator lights are moving back and forth, quickly press and release the solution flow button located on ec-H2O module.
The three indicator lights will then blink three times to indicate timer has been reset. Repeat process if the three indicator lights do not blink three times.

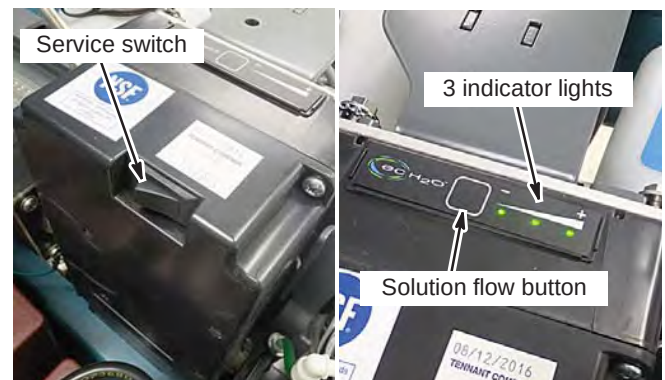

MACHINE JACKING

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key and set parking brake if equipped.

Use the designated locations to jack up the machine for service. Empty the recovery and solution tanks and position the machine on a level surface before jacking.

FOR SAFETY: When servicing machine, jack machine up at designated locations only. Support machine with jack stands. Use jack or hoist that will support the weight of the machine.



TRANSPORTING MACHINE

When transporting the machine by use of trailer or truck, carefully follow loading and tie-down procedure.

1. Drain tanks, raise the scrub head and the remove squeegee assembly.
2. Carefully load machine in trailer or on truck.


FOR SAFETY: When loading/unloading, use a ramp that can support the machine weight and operator.

FOR SAFETY: When loading/unloading, the machine may only be operated on gradients up to 2%.

3. Once loaded, position the front of the machine up against the front of the trailer or truck. Lower the scrub head, turn key off and set parking brake, if equipped.
4. Place a block behind each wheel.
5. Using tie-down straps, secure the machine using the four tie-down brackets located on the machine frame. It may be necessary to install tie-down brackets to the floor of your trailer or truck.

NOTE: When transporting machine in an open truck or trailer, secure recovery tank lid.

ATTENTION: Do not use control console area or accessory storage rails for tie-down locations, damage may occur.

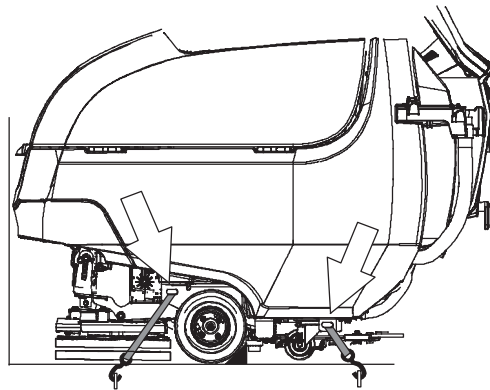

STORING MACHINE

The following steps should be taken when storing the machine for extended periods of time.

1. Charge the batteries before storing machine to prolong the life of the batteries. Recharge batteries once a month.
2. Disconnect batteries before storing.
3. Drain and rinse recovery tank and solution tank.
4. Store the machine in a dry area with squeegee and scrub head in the up position.

ATTENTION: Do not expose machine to rain, store indoors.


5. Open the recovery tank lid to promote air circulation.
6. If storing machine machine in freezing temperatures, proceed to FREEZE PROTECTION.

NOTE: To prevent potential machine damage store machine in a rodent and insect free environment

FREEZE PROTECTION

Storing machine in freezing temperatures.

1. Completely drain solution tank and recovery tank.
2. Empty the water from the solution tank filter located under machine. Replace filter.

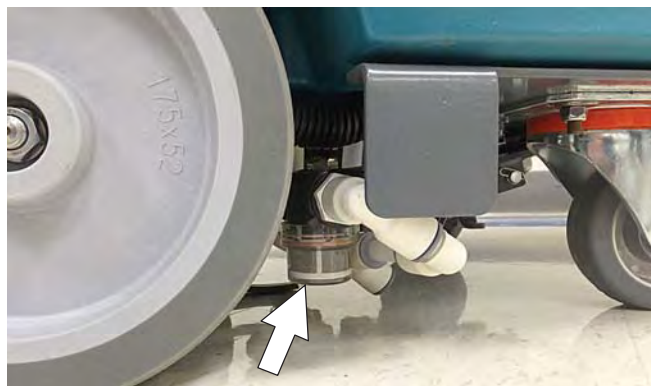

3. Pour 1 gallon / 4 liters of propylene glycol based recreational vehicle (RV) antifreeze into the solution tank.

Models equipped with optional Severe Environment detergent tank - Lift tank from machine and empty the detergent from tank. Return tank. Pour a 1/4 gallon / 1 liter of propylene glycol based recreational vehicle (RV) antifreeze into the detergent tank.



4. Models not equipped with ec-H2O system - Turn machine on and operate the solution flow system. Turn the machine off when the antifreeze is visible on the floor.

Models equipped with ec-H2O system and Severe Environment mode - Set the detergent ratio dial to the highest flow rate. Turn machine on and set solution flow rate to high. Operate ec-H2O scrubbing and press the severe environment button to cycle the antifreeze through both systems. Turn machine off when antifreeze is visible on the floor. This may take up to two minutes.

Models equipped with ec-H2O system - Turn machine and set the solution flow rate on and operate ec-H2O scrubbing to cycle antifreeze through system. Turn machine off when antifreeze is visible on the floor. This may take up to two minutes.

Models equipped with spray nozzle option - Operate the spray nozzle to cycle antifreeze through pump.

5. Models equipped with optional automatic battery watering tank - Lift tank from machine and empty the water from tank.



MAINTENANCE

Drain remaining water from system by removing the drain hose cap located below the tank. Leave cap off tank when draining system. After draining, replace cap on drain hose.

IMPORTANT: DO NOT add antifreeze to the automatic battery watering tank.




6. After storing machine in freezing temperatures, drain any remaining antifreeze from the solution tank and from the optional Severe Environment detergent tank. Add clean water to solution tank and to optional detergent tank and operate the machine to flush system.
7. Refill the automatic battery watering tank with distilled water, if equipped.


FAULTS AND WARNINGS

When the machine or battery charger detects a fault, the service indicator will flash. A fault code is provided to determine problem. Refer to the Faults and Warnings table for fault codes, conditions, reasons, and correction for the various fault codes.

Pro-Membrane Control Panel

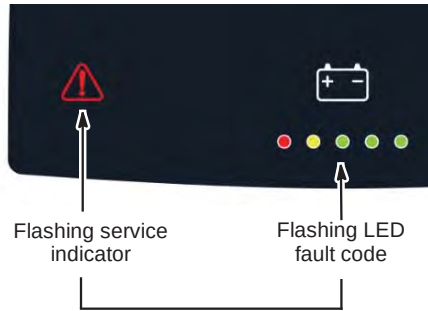

Pro-Panel Controls (LCD)

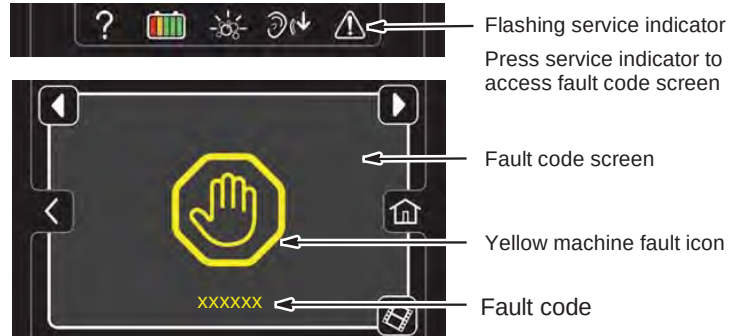

BDI (Battery Discharge Indicator) ☼ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☼ ☼ ☼ ☼ ☼	0xFFFF0	E-Stop activate fault	1. E-Stop pressed. 2. Large white i-Drive connector unplugged. 3. Large white i-Drive connector pin 7 disconnected. 4. i-Drive power wire unplugged. 5. Scrub controller board connector J9 pin 2 disconnected. 6. Scrub controller board connector J8 unplugged. 7. Scrub controller board connector J8 pin 7 disconnected.	Release E-Stop button and power cycle machine. If that does not clear fault, check connections/wiring.
● ● ● ☼ ●	0x0201	Actuator Open Warning	Wiring, connector, or control board issue on actuator.	Check connectors and connector pins.
● ● ● ☼ ☼	0x0101	Scrub Motor 1 Open Warning	1. Wiring, connector or control board issue on scrub motor. 2. J10 connector on scrub controller board unplugged. 3. Scrub controller board power disconnected. 4. Scrub controller inline power fuse defective/blown. 5. Scrub controller board problem.	Check connections. Board gets power from key switch and battery. If connections are good, replace control board.
	0x0111	Scrub Motor 2 Open Warning	1. Wiring, connector or control board issue on scrub motor. 2. J10 connector on Scrub Controller board unplugged. 3. Scrub Controller board power disconnected. 4. Scrub Controller inline power fuse defective/blown. 5. Scrub controller board problem.	Check connections. Board gets power from key switch and battery. If connections are good, replace control board.

BDI (Battery Discharge Indicator) ☀ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☀ ☀ ☀ ☀ ●	0x0102	Scrub Motor 1 Voltage / Power Loss	1. Scrub Controller board not detecting power. 2. Intermittent control board power loss.	Inline fuse may be blown or bad. Replace inline fuse. Check wiring.
	0x0112	Scrub Motor 2 Voltage / Power Loss	1. Scrub Controller board not detecting power. 2. Intermittent control board power loss.	Check wiring and/or inline fuse for bad connection.
● ☀ ☀ ● ☀	0x0208	Actuator stalled	1. Object/debris blocking actuator.	Clear blockage from actuator.
● ☀ ● ● ☀	0x0301	Valve Open Warning	1. Wiring, connector or control board issue with the valve. 2. Scrub Controller board connector J8 pin 2 disconnected.	Check connections/wiring.
● ☀ ● ☀ ☀	0x0303	Valve Over Current Fault	1. Valve connections shorted. 2. Faulty valve. 3. Scrub Controller board damaged.	Check connections/wiring. Check valve.
● ● ☀ ● ●	0x0501	Vacuum Motor Open Warning	1. Wiring, connector or control board issue on the vacuum. 2. J10 connector on scrub controller board unplugged. 3. Scrub controller board power disconnected. 4. Scrub controller inline power fuse defective/blown.	Check connections/wiring. Board gets power from key switch and battery. Replace defective/blown inline power fuse.
● ● ☀ ● ☀	0x0601	Detergent Pump Open Warning	1. Wiring, connector, or control board issue on detergent pump. 2. Detergent pot connector unplugged. 3. Detergent pot connector Pin 5 or 6 disconnected. 4. Scrub Controller board J8 pin 1 or 6 disconnected.	Check connections/wiring.
● ● ☀ ☀ ●	0x1005	Scrub Undercurrent Warning	1. Motor current is too low. Machine is driving head down to Max Down Force switch. 2. Applies to disk and cylindrical head machines. 3. Pad is not aggressive enough for floor surface. Floor surface is too slippery. 4. There are no brushes on machine. 5. The pad driver is broken and is not driving brushes. 6. Something preventing pads from contacting floor.	Ensure brushes/pads are on machine and they are contacting floor surface. Try a more aggressive brush/pad combination.
● ● ☀ ☀ ☀	0x0901	Propel Motor Open Warning	1. Motor on propel I-Drive is not connected.	
☀ ● ● ● ☀	0x0900	Propel Generic Fault	1. Generic i-Drive fault. 2. Large white i-Drive connector pin 2, 8, or 9 disconnected. 3. User Interface speed pot connector unplugged.	Power cycle machine. Check connections/wiring.

BDI (Battery Discharge Indicator) ☼ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☼ ● ● ● ☼	0x0903	Propel Communication Lost Warning	1. Large white i-Drive connector pin 5 disconnected. 2. Small white i-Drive connector unplugged. 3. Small white i-Drive connector pin 3 or 4 disconnected. 4. Scrub controller board connector J2 or J8 unplugged. 5. Scrub controller board J9 pin 1 or 2 disconnected. 6. Scrub controller board J8 pin 7 disconnected. 7. Smaller of two console connectors unplugged. 8. User Interface board connector J4 or J9 unplugged.	Power cycle machine. Check connections/wiring.
	0x0904	Propel Power Cycle Needed	1. i-Drive just programmed by service tech with new parameters. Power cycle to clear. 2. i-Drive unit is faulty.	Power cycle machine. Replace i-Drive.
	0x0905	Propel Current Limit Fault	1. Propel motor drawing too much current.	Power cycle machine.
	0x0906	Propel Motor Short Low Fault	1. Motor connections are shorted to (-) voltage. 2. Some higher current draw than hardware design limit.	Check motor wires.
	0x0907	Propel Motor Short High Fault	1. Motor connections are shorted to (+) voltage. 2. Some higher current draw than hardware design limit.	Check motor wires.
	0x0920	Propel Speed Control Wiper Warning	1. Propel speed control wiper out of bounds.	Check wiring to speed control potentiometer. Power cycle machine.
	0x0921	Propel Speed Control Reference Warning	1. Propel speed control reference incorrect.	Check wiring to speed control potentiometer. Power cycle machine.
	0x0922	Propel Throttle Trip Reference Warning	1. Propel throttle trip reference incorrect.	Check wiring to the bail sensor. Power cycle machine.
	0x0923	Propel High Battery Voltage Warning	1. Battery voltage at propel controller is too high.	Check battery wires going to i-Drive. Power cycle machine.
	0x0924	Propel High Battery Voltage 2 Warning	1. Battery voltage at propel controller is too high.	Check battery wires going to i-Drive. Power cycle machine.
	0x0925	Propel Inhibit 1 Warning	1. Propel controller inhibit 1 fault tripped.	Power cycle machine.
	0x0926	Propel Inhibit 2 Warning	1. Propel controller inhibit 2 fault tripped.	Power cycle machine.
	0x0927	Propel Inhibit 3 Warning	1. Propel controller inhibit 3 fault tripped.	Power cycle machine.

BDI (Battery Discharge Indicator) ☼ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☼ ● ● ● ☼	0x0928	Propel Watchdog Warning	1. Propel controller watchdog tripped.	Power cycle machine.
	0x0929	Propel Bad Setting Warning	1. A bad setting programmed to i-Drive.	Reprogram i-Drive.
	0x0930	Propel ROM Check Warning	1. The i-Drive memory is corrupted.	Replace damaged i-Drive.
	0x0931	Propel EEPROM Check Warning	1. The i-Drive settings are corrupted.	Replace damaged i-Drive.
	0x0932	Propel Internal 12V Error	1. The i-Drive hardware is damaged.	Replace damaged i-Drive.
	0x0933	Propel Low Battery	1. Battery voltage at propel controller is very low.	Check cables.
	0x0934	Propel Very Low Battery	1. Battery voltage at propel controller is extremely low.	Check cables.
	0x0910	Propel Breaker Tripped Fault	1. Issue with propel motor, wiring, or i-Drive module. 2. Large white i-Drive connector unplugged. 3. Large white i-Drive connector pin 7 disconnected. 4. i-Drive power wire unplugged. 5. Scrub controller board connector J9 unplugged and bail activated. 6. Scrub controller board connector J9 pin 7 disconnected.	Disconnect battery and reset circuit breaker. Check connections/wiring.
☼ ● ● ☼ ☼	0x0950	Propel Incorrect Profile	1. Software profile in i-Drive does not match programmed machine configuration.	Select and download correct configuration for scrub head type, size, and transaxle using Configuration screen in Tenant Service Diagnostics PC application. This will correct configuration and i-Drive.
	0x0103	Scrub Motor 1 Over Current Fault	1. Current draw higher than expected. 2. Some higher current draw than hardware design limit.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0104	Scrub Motor 1 Over Current 1 Fault	1. Current draw higher than expected.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0105	Scrub Motor 1 Over Current 2 Fault	1. Current draw higher than expected.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0106	Scrub Motor 1 Short Fault	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	Check wire harness and repair as needed.

BDI (Battery Discharge Indicator) ☼ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☼ ● ● ☼ ☼	0x0109	Scrub Motor 1 Over Heat Fault	1. Motor is drawing too much current and is overheating.	Inspect scrub brushes to see if they are completely worn. If scrub brushes are not worn, motor is defective. Replace scrub motor.
☼ ☼ ● ☼ ☼	0x0113	Scrub Motor 2 Over Current Fault	1. Current draw higher than expected. 2. Some higher current draw than hardware design limit.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0114	Scrub Motor 2 Over Current 1 Fault	1. Current draw higher than expected.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0115	Scrub Motor 2 Over Current 2 Fault	1. Current draw higher than expected.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0116	Scrub Motor 2 Short Fault	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	Check wire harness and repair as needed.
	0x0119	Scrub Motor 2 Over Heat Fault	1. Motor is drawing too much current and is overheating.	Inspect scrub brushes to see if they are completely worn. If scrub brushes are not worn and head is not orbital head, motor is defective. Replace scrub motor. If head is orbital, eccentric or motor might be bad.
☼ ● ☼ ● ☼	0x0902	Propel High Throttle Fault	1. Bail is activated before turning on machine. 2. Bail did not release to full rest position due to obstruction behind it.	Release bail or bail obstruction before turning on machine.
☼ ● ☼ ☼ ●	0x0107	Scrub Motor 1 FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.
	0x0117	Scrub Motor 2 FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.
	0x0207	Actuator FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.
	0x0307	Valve FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.

BDI (Battery Discharge Indicator) ☀ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☀ • ☀ ☀ •	0x0507	Vacuum FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, wand pump, detergent pump, vacuum and battery watering pump.
	0x0607	Detergent Pump FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, wand pump, detergent pump, vacuum and battery watering pump.
	0x0617	Wand Pump FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, wand pump, detergent pump, vacuum and battery watering pump.
	0x0717	ec-H2O FET Faults	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, wand pump, detergent pump, vacuum and battery watering pump.
	0x0B17	Battery Watering Pump FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, wand pump, detergent pump, vacuum and battery watering pump.
☀ • ☀ ☀ ☀	0x0503	Vacuum Over Current Fault	1. Current draw higher than expected.	Check harness and vacuum.
	0x0504	Vacuum Over Current 1 Fault	1. Current draw higher than expected.	Verify vacuum load, damage and/or usage conditions.
	0x0505	Vacuum Over Current 2 Fault	1. Current draw higher than expected.	Verify vacuum load, damage and/or usage conditions.
	0x0506	Vacuum Shorted Load Fault	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	Check harness and vacuum.
☀ ☀ • • •	0x0613	Wand Pump Over Current Fault	1. Current draw higher than expected. 2. Some higher current draw than hardware design limit.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0614	Wand Pump Over Current 1 Fault	1. Current draw higher than expected.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0615	Wand Pump Over Current 2 Fault	1. Current draw higher than expected.	Verify floor, pad, and down pressure combination are appropriate for machine. Check actuator.
	0x0616	Wand Pump Short Fault	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	Check wire harness and repair as needed.

BDI (Battery Discharge Indicator) ☀ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
☀ ● ● ● ●	0x0611	Wand Pump Open Warning	1. Wiring, connector or control board issue on the wand pump.	Verify wand pump is connected to machine harness and verify pump is good.
☀ ☀ ● ● ☀	0x0603	Detergent Pump Over Current Fault	1. Current draw higher than expected.	Check harness and pump.
	0x0604	Detergent Pump Over Current 1 Fault	1. Current draw higher than expected.	Verify detergent pump load, damage and/or usage conditions.
	0x0605	Detergent Pump Over Current 2 Fault	1. Current draw higher than expected.	Verify detergent pump load, damage and/or usage conditions.
	0x0606	Detergent Pump Shorted Load Fault	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	Check harness, pump and control boards.
☀ ● ● ☀ ●	0x0B11	Battery Watering Pump Open Warning	1. Wiring, connector, or control board issue on battery watering pump.	Check if battery watering pump is connected to machine harness. Verify pump is operable.
☀ ☀ ● ☀ ●	0x0B01	Battery Watering System Timed Out Warning	1. System is running longer than it should be. Pump ends at 1 minute.	Check for leaks in pump housing and battery vents. Check for water in battery tray and on floor around machine. Replace stuck open valves. Check if batteries are defective.
	0x0B02	Battery Watering System No Feedback Warning	1. System is running for 10 seconds with no feedback telling board there is water flow. 2. Kinks in hoses. 3. Batteries full. 4. Bad flow sensor. 5. Pump not operating.	Check if hose is kinked and/or batteries are full. <i>Note: The must be a flow of 0.1 liters per minute for at least 3 seconds to reset system and a stop in flow (pump stops pumping water - batteries full) to allow board to clear fault.</i>
	0x0B06	Tank Empty Fault	1. Battery watering tank empty.	Fill battery watering tank.
	0x0B13	Battery Watering Pump Over Current Fault	1. Current draw higher than expected.	Check harness and pump.
	0x0B14	Battery Watering Pump Over Current 1 Fault	1. Current draw higher than expected.	Verify pump load, damage, and/or usage conditions.
	0x0B15	Battery Watering Pump Over Current 2 Fault	1. Current draw higher than expected.	Verify pump load, damage, and/or usage conditions.
	0x0B16	Battery Watering Pump Shorted Load Fault	1. Shorted load condition 2. Some higher current draw than hardware design limit.	Check harness, pump and control boards.
☀ ☀ ☀ ● ☀	0x1006	Scrub Head Imbalance	1. Scrub head motor currents unbalanced.	
● ☀ ☀ ☀ ●	0xF103	Charger CAN Communication Fault	1. Control boards not communicating properly. 2. Board lost power (wiring issue). 3. Control board may be damaged.	1. Power cycle machine. 2. No communication with a network module. Use CANopen troubleshooting techniques.

BDI (Battery Discharge Indicator) ☼ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
● ☼ ☼ ☼ ●	0xFF20	Scrub Controller CAN Communication Fault	1. Control boards are not communicating properly. 2. Board lost power (wiring issue). 3. Control board may be damaged.	1. Power cycle machine. 2. No communication with a network module. Use CANopen troubleshooting techniques.
	0x0B04	Battery Watering CAN Communication Fault	1. Control boards are not communicating properly. 2. Board lost power (wiring issue). 3. Control board may be damaged.	1. Power cycle machine. 2. No communication with a network module. Use CANopen troubleshooting techniques.
	0x0704	ec-H2O CAN Communication Fault	1. Control boards are not communicating properly. 2. Board lost power (wiring issue) 3. Control board may be damaged. 4. ec-H2O connector unplugged (never plugged in). 5. ec-H2O connector pin 2 or 3 disconnected. 6. ec-H2O connector power pin disconnected.	1. Power cycle machine. If fault persists, contact service. 2. No communication with a network module. 3. Check connections.
☼ ☼ ☼ ● ●	0xF104	Charger Timer Phase I Warning	1. Batteries not able to be charged correctly.	
● ☼ ☼ ● ●	0xF101	Charger No Load Warning	1. Battery pack may not be plugged into charger.	Check battery wires and connections.
● ☼ ● ● ●	0xF102	Charger Overheat Warning	1. Charger environment is not cool enough and cannot complete charge.	Move machine to well-ventilated area.
☼ ● ☼ ● ●	0x0703	ec-H2O Breaker Tripped Warning	1. Detected module circuit breaker trip. 2. Scrub Controller board J4 connector unplugged. 3. Scrub Controller board J4 connector pin 2 disconnected.	Power cycle machine.
	0x0712	ec-H2O Pump Breaker Tripped Warning	1. Detected module circuit breaker trip. 2. Scrub Controller board J4 connector unplugged. 3. Scrub Controller board J4 connector pin 1 disconnected.	Power cycle machine. Check connections and wiring.
☼ ☼ ☼ ☼ ●	0x0704	ec-H2O CAN Communication Fault	1. Control boards are not communicating properly. 2. Board lost power (wiring issue) 3. Control board may be damaged. 4. ecH2O connector unplugged (never plugged in). 5. ecH2O connector pin 2 or 3 disconnected. 6. ecH2O connector power pin disconnected.	1. Power cycle machine. 2. No communication with a network module. 3. Check connections.
● ☼ ● ☼ ●	0x0711	ec-H2O Pump Open Warning	1. Wiring, connector or control board issue on the ec-H2O pump.	Control board is not detecting pump current. Check connections for voltage and verify pump is operating.







BDI (Battery Discharge Indicator) ☼ = Flashing	Pro-Panel LCD Faults (Option)	Fault Condition	Reason	Correction
NA	NA	Hour Meter Not Powered	1. Hour meter wires disconnected. 2. Scrub Controller board connector J8 pin 9 disconnected.	Check connections and wiring
NA	NA	Bail Not Responding	1. Bail sensor is unplugged. 2. User Interface board defective.	Check connections and wiring. Replace user interface board.
NA	NA	Scrub Head Switch Not Functioning	1. Scrub Head switch disconnected. 2. Faulty wiring. 3. Scrub Controller board connector J4 pin 5 disconnected. 4. Scrub Controller board connector J9 pin 3 disconnected.	Check connections and wiring.
NA	NA	Vacuum Squeegee Switch Not Functioning	1. Vacuum squeegee switch disconnected. 2. Faulty wiring. 3. Scrub Controller board connector J4 pin 7 disconnected.	Check connections and wiring.
NA	NA	Scrub Head Not Spinning	1. Reverse switch connector unplugged. 2. Large white i-Drive connector pin 12 or 13 disconnected.	Check connections and wiring.
NA	NA	No Propel Response (no faults reporting)	1. Propel Motor lead unplugged. 2. Large white i-Drive connector pin 1 disconnected. 3. Bail sensor is unplugged.	Check connections and wiring.
NA	NA	No Charge Mode LEDs	User Interface board is not receiving power from charger at J7-9.	Ensure pin connections between UI and charger connectors are not broken or unseated.






A Service Diagnostics tool is available to provide additional fault detail. See SERVICE DIAGNOSTICS TOOL in the SERVICE section of this manual.

SCRUBBER DISPLAY FAULTS

Icon	Code	Fault Condition	Reason	Correction
	0x0781	Detergent Tank Empty	1. This blinking icon indicates detergent tank level is too low to operate correctly. 2. Detergent tank switch connector unplugged. 3. Scrub Controller connector J4 unplugged. 4. Scrub Controller connector J4 pin 4 disconnected.	Refill detergent to clear indicator. If fault persists, check connections.

ec-H2O NANOCLEAN ICON FAULTS

Icon	Code	Fault Condition	Reason	Correction
	0x0700	ec-H2O Generic Fault	1. Generic fault with ec-H2O.	
	0x0702	ec-H2O Pressure Switch Active	1. The system pressure switch is detecting a trip or unconnected.	1. System pressure too high; needs repair. 2. Check connections. Verify functionality of scrub head switch and parking brake switch.
	0x0704	ec-H2O CAN Communication Fault	1. Control boards are not communicating properly. 2. Board lost power (wiring issue) 3. Control board may be damaged. 4. ec-H2O connector unplugged (never plugged in). 5. ec-H2O connector pin 2 or 3 disconnected. 6. ec-H2O connector power pin disconnected.	1. Power cycle machine. 2. No communication with a network module. 3. Check connections.
	0x0707	ec-H2O WCM Expired	1. ec-H2O WCM cartridge expired.	1. Replace with new cartridge.
	0x0708	ec-H2O System Over Regulation Warning	1. Cell has been operating over target current condition for last 50 treated gallons.	Check water condition in solution tank for presence of detergents.
	0x0711	ec-H2O Pump Open Fault	1. Wiring, connector or control board issue on the ec-H2O pump.	Control board is not detecting pump current. Check connections for voltage and verify pump is operating.
	0x0713	ec-H2O Pump Over Current Fault	1. Current draw higher than expected.	Check pump operating current.
	0x0716	ec-H2O Pump Short Fault	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	
	0x0717	ec-H2O FET Faults	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.
	0x0720	ec-H2O Cell Generic Fault	1. Generic fault with ec-H2O cell.	
	0x0721	ec-H2O Cell Open Warning	1. Wiring, connector or control board issue on ec-H2O cell.	Needs repair.
	0x0723	ec-H2O Cell Over Current Warning	1. Current draw higher than expected.	
	0x0726	ec-H2O Cell Short Warning	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	

Icon	Code	Fault Condition	Reason	Correction
	0x0727	ec-H2O Cell FET Faults	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.
	0x0728	ec-H2O Cell Over Regulation	1. Control board problem.	
	0x0729	ec-H2O Cell Under Regulation	1. Control board problem.	
	0x072A	ec-H2O Cell Electrode Fault	1. Cell current is operating below allowed operating condition.	See NanoClean troubleshooting guide. Replace plumbing half of ec-H2O module.
	0x0741	ec-H2O WCM Pump Open Warning	1. Wiring, connector or control board issue on the ec-H2O pump.	Check Water Conditioning Module micro pump is connected to machine harness and verify pump is good.
	0x0746	ec-H2O WCM Pump Short Warning	1. Shorted load condition. 2. Some higher current draw than hardware design limit.	Check harness and verify Water Conditioning Module micro pump is good.
	0x0747	ec-H2O WCM Pump FET Fault	1. Control board problem. 2. Power/battery issue on startup.	Replace control board. FET detection includes motor, actuator, detergent pump, vacuum and battery watering pump.


OFF-BOARD CHARGER ERROR AND FAULT CODES

Code	Description	Cause	Solution
E-0-0-1 E-0-2-1	Battery high voltage	1. Wrong battery voltage for charger. 2. Other charger also attached. 3. Resistive battery.	Check battery voltage and cable connections. Check battery size and condition. Error will automatically clear once voltage is in range.
E-0-0-2 E-0-2-2	Battery low voltage	1. Battery disconnected. 2. Battery over discharged.	Check battery voltage and cable connections. Check battery size and condition. Error will automatically clear once voltage is in range.
E-0-0-3	Charge time out caused by battery pack not reaching required voltage within safe time limit. (charge profile dependent)	1. Charger output reduced due to high temperatures. 2. Poor battery health. 3. Very deeply discharged battery. 4. Poorly connected battery.	Operate at lower ambient temperature. Replace battery pack. Check DC connections. Error will clear once charger is reset by cycling DC or AC.
E-0-0-4	Battery could not meet minimum voltage (charge profile dependent)	1. Shorted or damaged cells.	Replace battery pack. Check DC connections. Error will automatically clear once charger is reset by cycling DC or AC.
E-0-0-7	Battery amp hour limit exceeded	1. Poor battery health. 2. Very deeply discharged battery. 3. Poorly connected battery. 4. High parasitic loads on battery while charging	Replace battery pack. Check DC connections. Disconnect parasitic loads. Error will automatically clear once charger is reset by cycling DC or AC.
E-0-0-8	Battery temperature is out of range	1. Possible battery temperature sensor error.	Check temperature sensor and connections. Reset charger. Error will clear once condition has been corrected.
E-0-1-2	Reverse polarity error	1. Battery incorrectly connected to charger.	Check battery connections. Error will clear once condition has been corrected
E-0-1-6 E-0-1-8 E-0-2-6	USB operation failed (software)	1. Software upgrade failure. 2. Script operation failure.	Ensure USB flash drive is properly formatted and reinsert USB flash drive.
E-0-1-7	USB operation failed (hardware)	1. Hardware upgrade failure.	Remove and reinsert USB drive. If condition persists, cycle AC and retry by reinserting USB drive.
E-0-2-3	High AC voltage error (>270VAC)	1. Voltage error.	Connect charger to an AC source that provides stable AC between 85 - 270 VAC / 45-65 Hz. Error will clear once condition has been corrected.
E-0-2-4	Charger failed to initialize	1. Charger has failed to turn on properly	Disconnect AC input and battery for 30 seconds before retrying.
E-0-2-5	Low AC voltage oscillation error	1. AC source is unstable. 2. Undersized generator. 3. Severely undersized input cables	Connect charger to an AC source that provides stable AC between 85 - 270 VAC / 45-65 Hz. Error will clear once condition has been corrected.
F-0-0-1 F-0-0-2 F-0-0-3 F-0-0-4 F-0-0-6	Internal charger fault	1. Internal charger fault.	Remove AC and battery for minimum 30 seconds and retry charger. If it fails again, contact the vehicle or machine manufacturer.

Off-Board Charger Error and Fault Codes table taken from the Delta-Q IC650 Charger Manual.

© Delta-Q Technologies Corp. (PN: 710-0138 Rev 3
Date: 14/07/2014)

ONBOARD BATTERY CHARGING ON

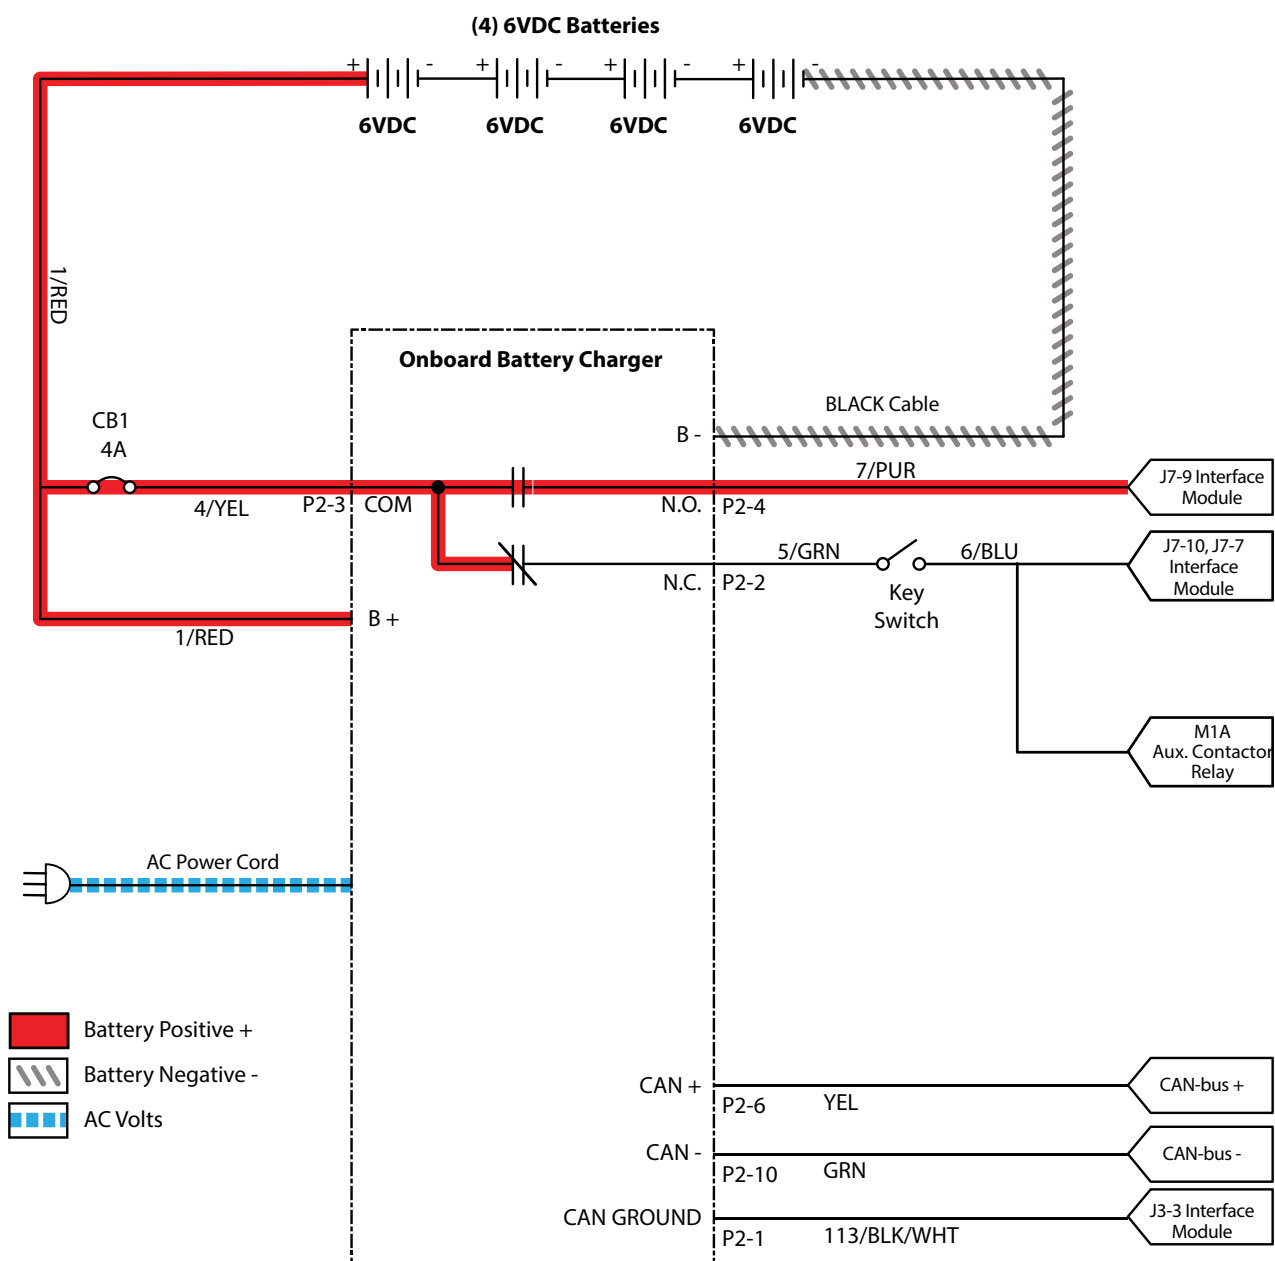

**BATTERIES FAIL TO CHARGE / REDUCED RUN
TIME (ONBOARD CHARGER)**

Step	Action	Value(s)	Yes	No
1	• Key ON • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Check AC power supply • Is the rated AC supply voltage present?		Proceed to STEP 3	Check AC supply circuit protection
3	• See BATTERY CHARGER SETTINGS in MAINTENANCE section of this manual and confirm proper charger settings • Is the onboard charger set properly?		Proceed to STEP 4	Reprogram battery charger
4	• Key OFF • Inspect battery and charger cables for damage / corrosion / contamination / terminal problems • Do any of the above conditions exist?		Repair or replace battery / battery charger cables	Proceed to STEP 5
5	• Proceed to STEP 6 for machines equipped with sealed or AGM batteries • Key OFF • Disconnect batteries • Check water level in all battery cells • Are the lead plates submerged?		Proceed to STEP 6	Add distilled water as necessary until lead plates are covered
6	• Key OFF • Use a hydrometer or refractometer to test specific gravity of each cell (Lead-Acid) • Are all battery cells within 0.050 (50 points) specific gravity of each other?		Replace battery charger	Replace battery charger or batteries


Terms:

AC = Alternating Current

AGM = Absorbed Glass Mat

Specific Gravity = Relative density of a substance compared to water (1.000 specific gravity)

OFF BOARD BATTERY CHARGING ON

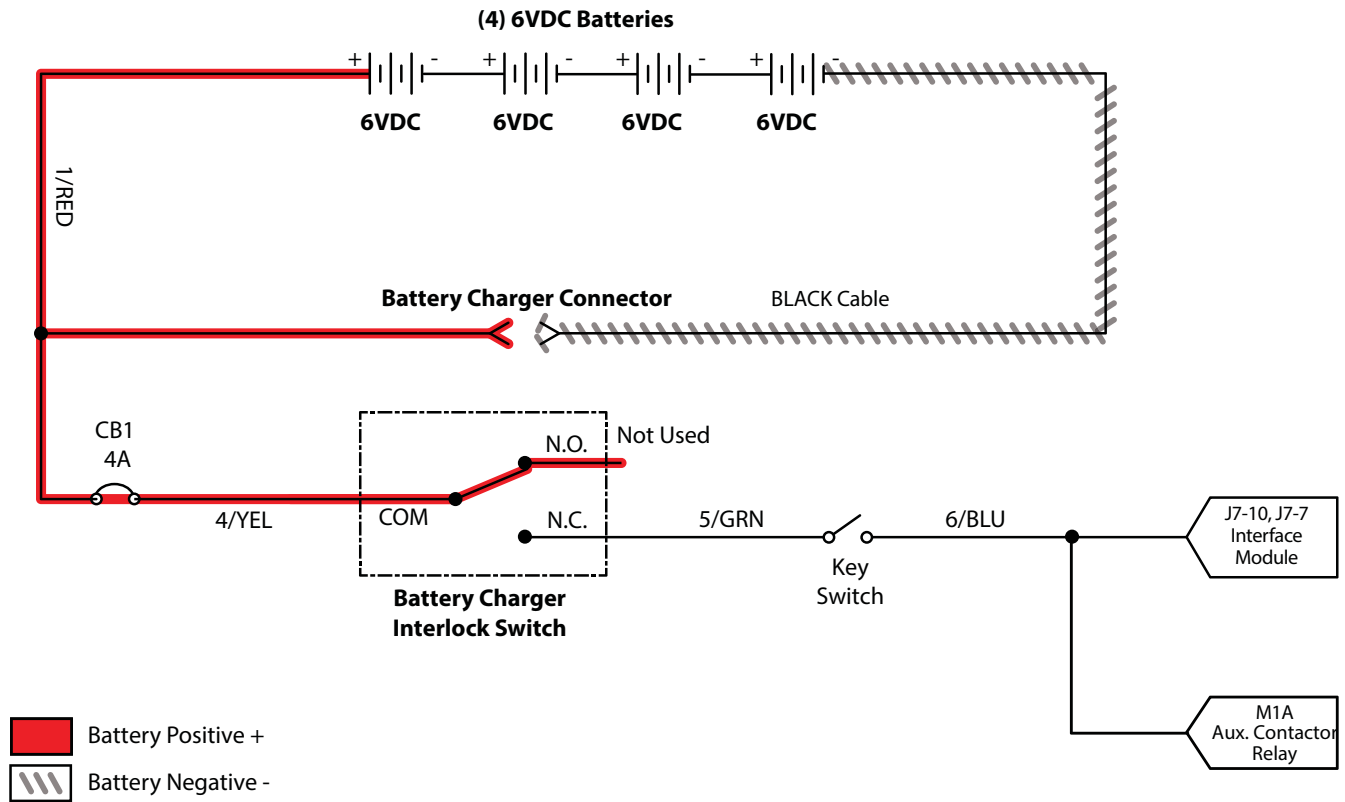

**BATTERIES FAIL TO CHARGE / REDUCED RUN
TIME (OFF BOARD CHARGER)**

Step	Action	Value(s)	Yes	No
1	• Key ON • Is there an LCD fault present on the Off Board Charger?		See OFF BOARD BATTERY CHARGER FAULTS in TROUBLESHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Check AC power supply • Is the rated AC supply voltage present?		Proceed to STEP 3	Check AC supply circuit protection
3	• Key OFF • Inspect battery and charger cables for damage / corrosion / contamination / terminal problems		Repair or replace battery / battery charger cables	Proceed to STEP 4
4	• Proceed to STEP 6 for machines equipped with sealed or AGM batteries • Key OFF • Disconnect batteries • Check water level in all battery cells • Are the lead plates submerged?		Proceed to STEP 5	Add distilled water as necessary until lead plates are covered
5	• Key OFF • Use a hydrometer or refractometer to test specific gravity of each cell (Lead-Acid) • Are all battery cells within 0.050 (50 points) specific gravity of each other?		Replace battery charger	Replace battery charger or batteries


Terms:

AC = Alternating Current

AGM = Absorbed Glass Mat

Specific Gravity = Relative density of a substance compared to water (1.000 specific gravity)

POWER UP ON

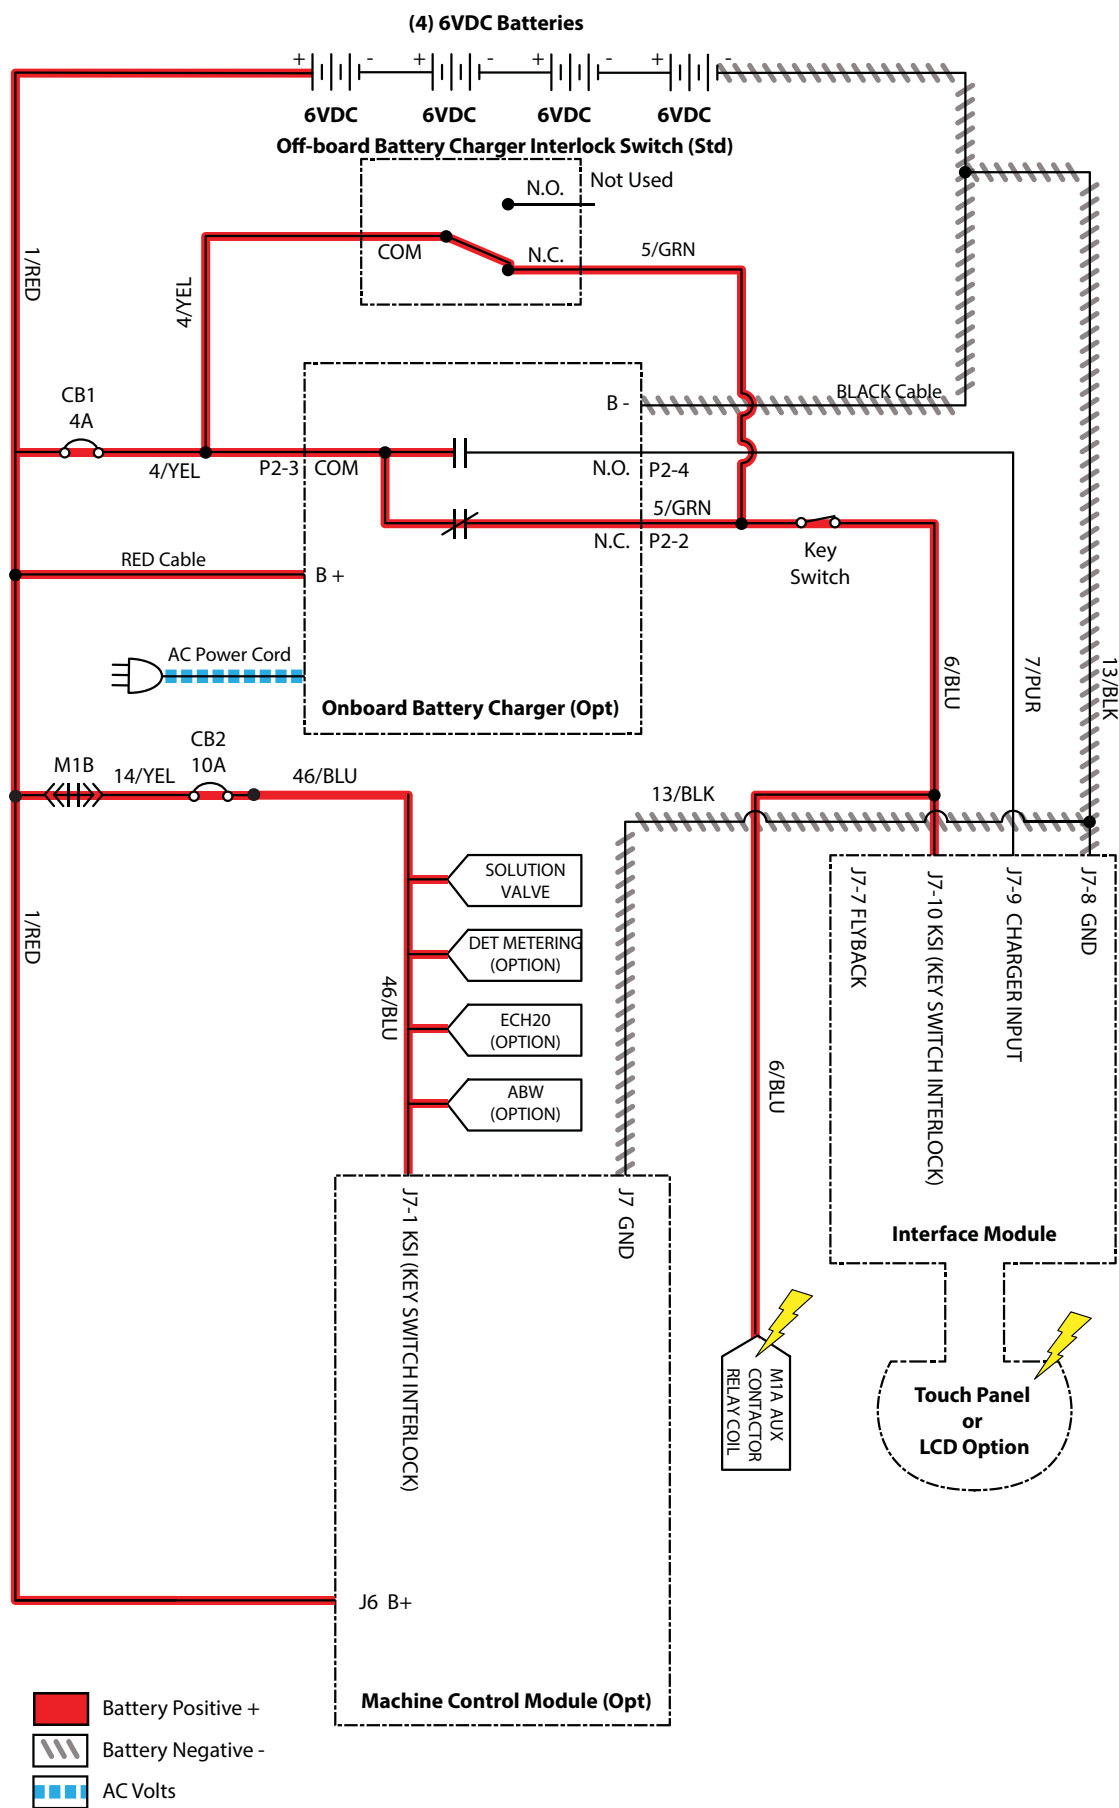


MACHINE FAILED TO POWER UP

Step	Action	Value(s)	Yes	No
1	• Key ON • Use a voltmeter to test the total battery voltage • Is total battery voltage greater than 20 VDC?		Proceed to STEP 2	Recharge batteries and test power-up circuit operation
2	• Key OFF • Firmly press circuit breaker #1 / circuit breaker #2 to reset • Are circuit breaker #1 / circuit breaker #2 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• Key ON • Test voltage applied to power-up subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

VDC = DC Voltage

PROPEL SUBSYSTEM

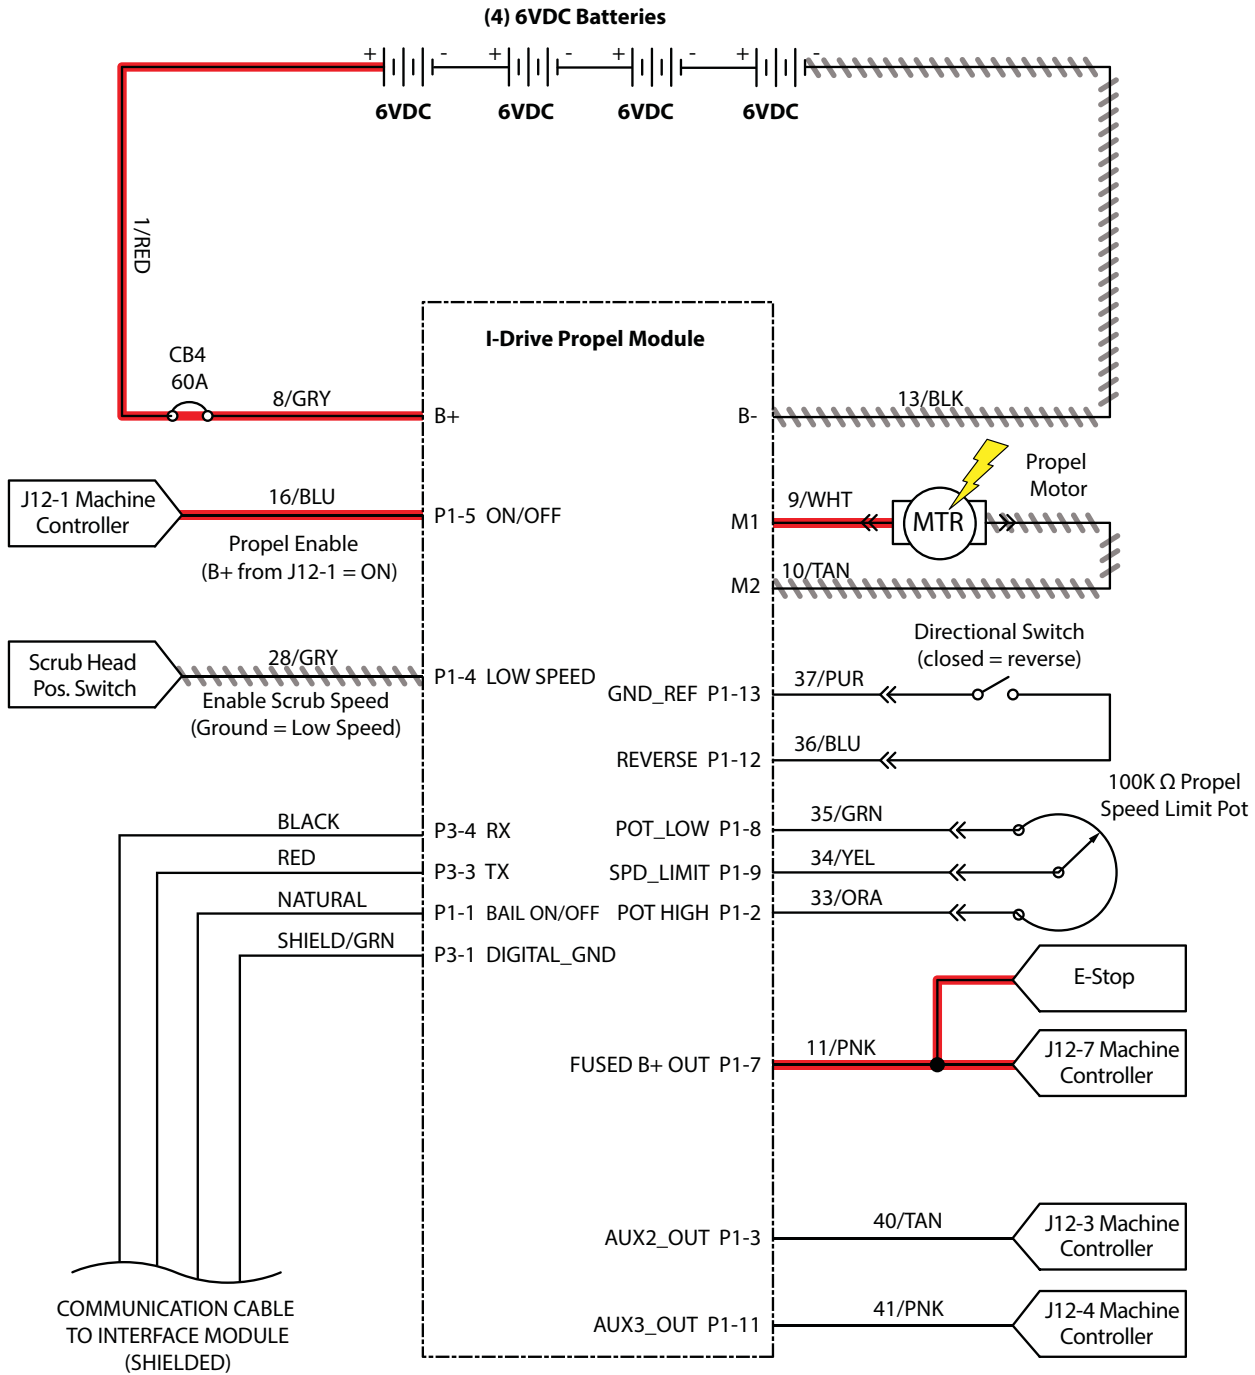

Operational Matrix:

Propel (Option)	Enabled	Disabled
	- Fwd/Rev Throttle Command - Fwd/Rev Switch Input	- Battery Charger ON Interlock - Neutral - Ready State - PMC (Propel Motor Controller) Fault



MACHINE FAILED TO PROPEL

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable propel • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Firmly press circuit breaker #4 to reset • Is circuit breaker #4 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• See SERVICE DIAGNOSTICS TOOL in SERVICE section of this manual and confirm software is properly configured to enable propel • Is software configured properly?		Proceed to STEP 4	Reprogram software
4	• Key OFF • Place machine on blocks so drive wheels are lifted from floor • Key ON • Enable propel • Test voltage applied to propel subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

SCRUB MOTOR ON

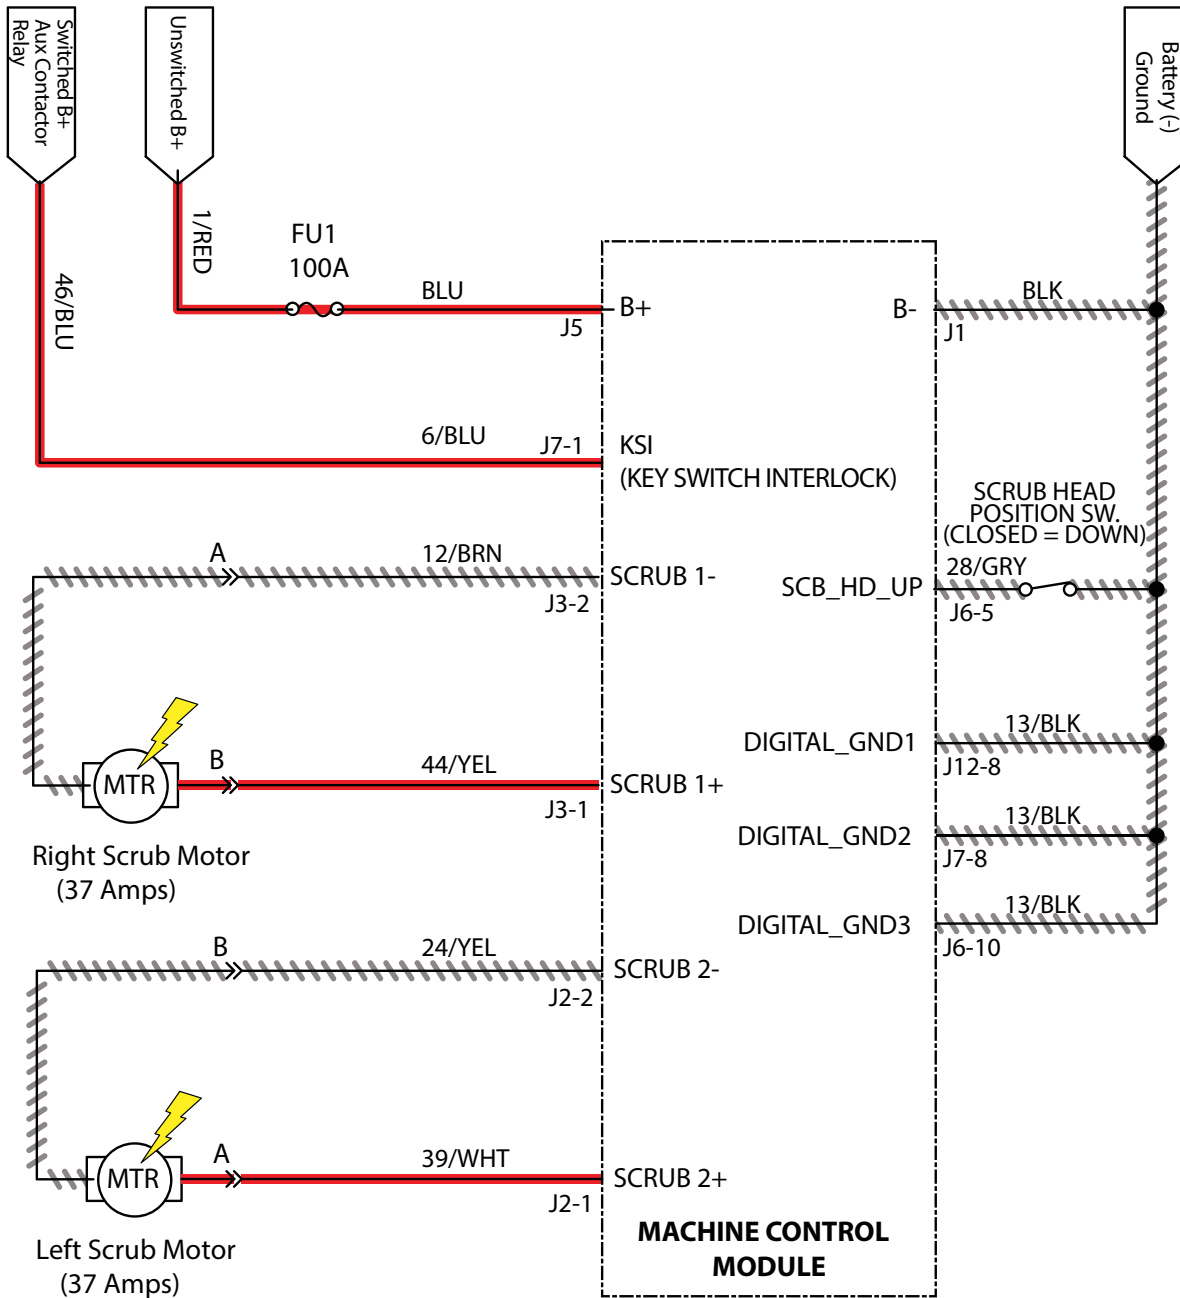

Operational Matrix:

	Enabled	Disabled
Scrub Motor	- Head Lowered - One Step Button - Fwd/Rev Throttle Command or Bail Activated on non-Propel models.	- Head Raised - One Step Button - Neutral - Ready State or Bail released on non-propel models. - Low Battery Voltage - Fault - Battery Charger ON Interlock


SCRUB MOTOR FAILED TO TURN ON

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable scrub motor • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key ON • Enable scrub motor • Test voltage applied to scrub motor subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

SCRUB HEAD LIFT ACTUATOR

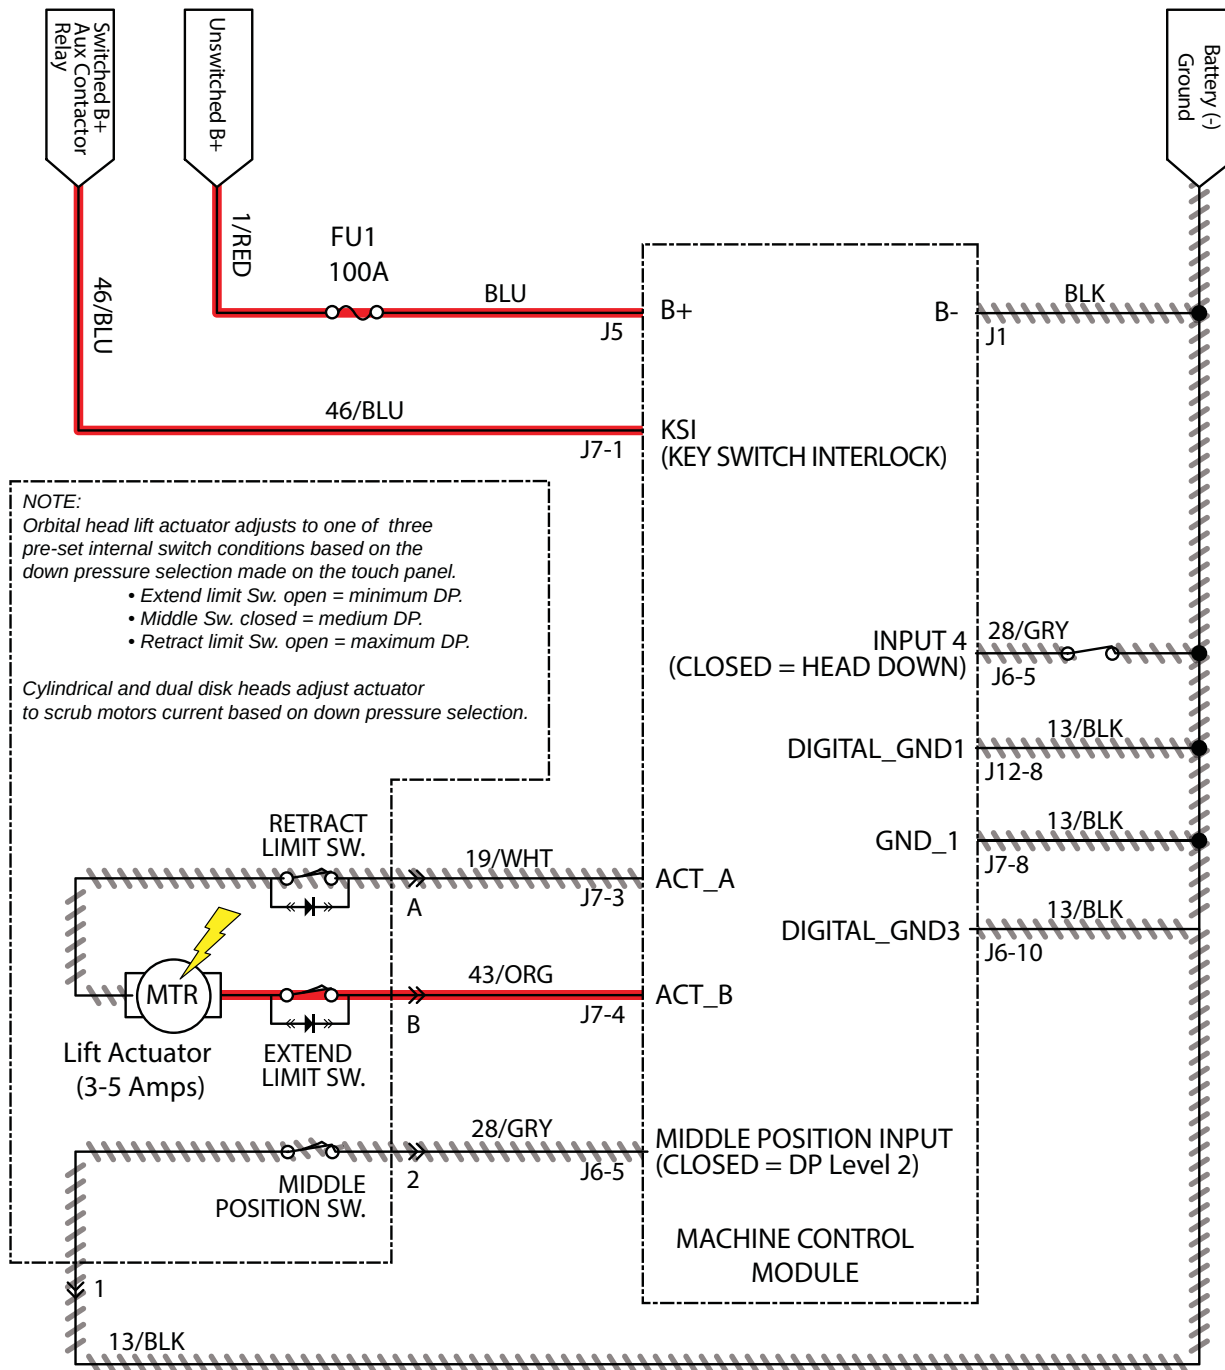

Operational Matrix:

	Enabled	Disabled
Lift Actuator (Option)	• Head Lowered - One Step Button	• Head Raised - One Step Button • Low Battery Voltage • Load Current Fault • Battery Charger ON Interlock



SCRUB HEAD FAILED TO LIFT / LOWER

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable lift actuator • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• See SERVICE DIAGNOSTICS TOOL in SERVICE section of this manual and confirm software is properly configured to enable automated down pressure • Is software configured properly?		Proceed to STEP 3	Reprogram software
3	• Key ON • Enable scrub motor • Enable propel • Test voltage applied to actuator subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

VACUUM FAN ON

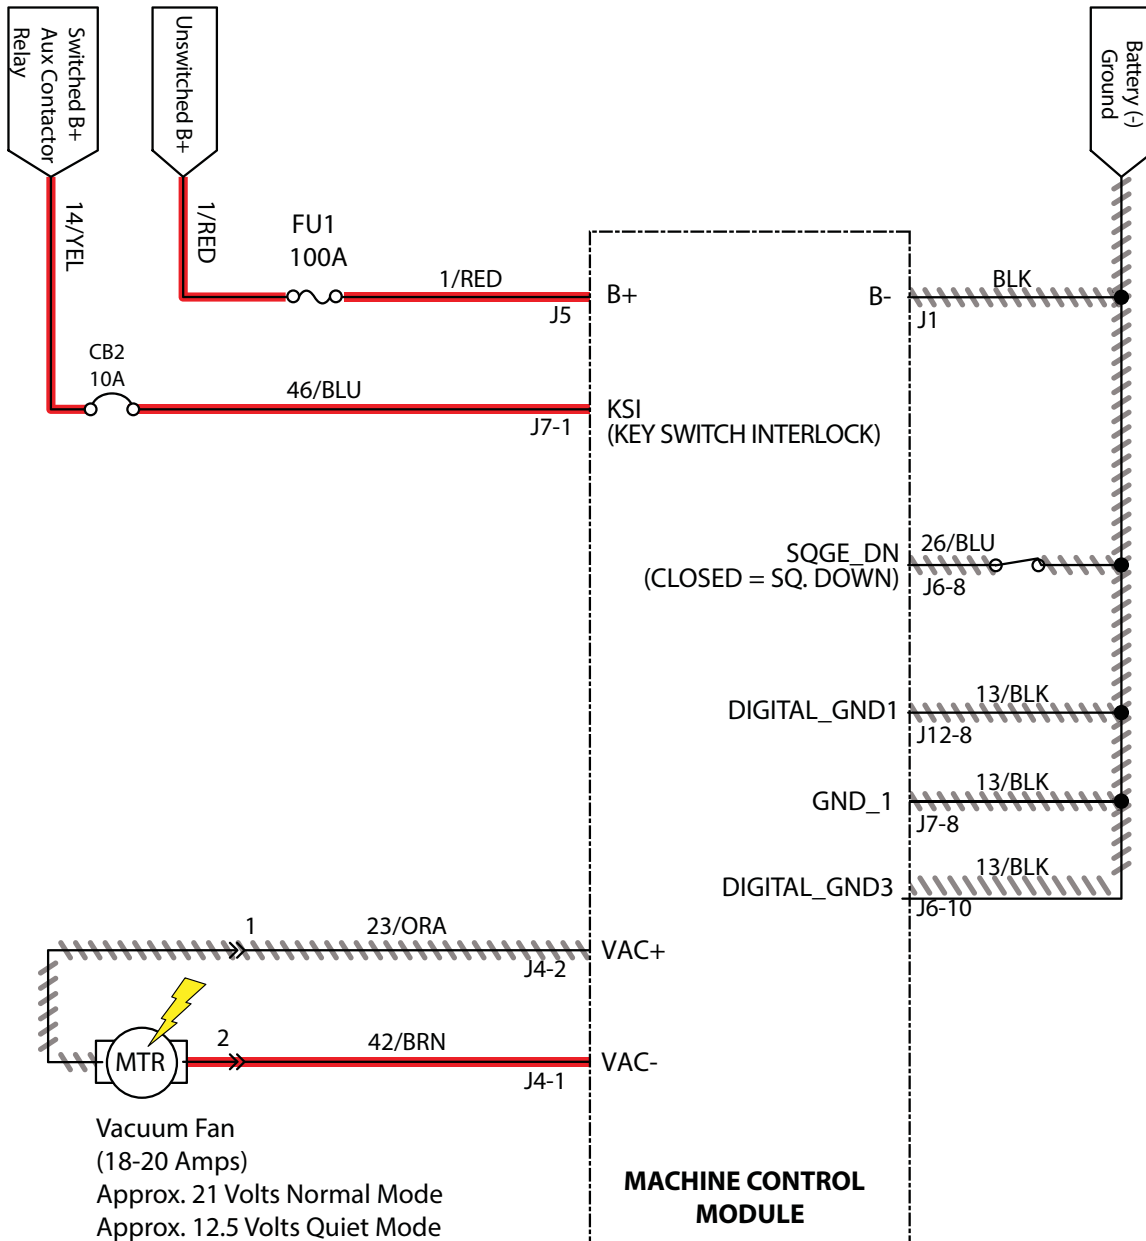

Operational Matrix:

	Enabled	Disabled
Vacuum Fan	Squeegee Lowered	- Squeegee Raised - Low Battery Voltage - Fault - Battery Charger ON Interlock - E-Stop Pushed


VACUUM FAN FAILED TO TURN ON

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable vacuum fan • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Firmly press circuit breaker #2 to reset • Is circuit breaker #2 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• Key ON • Enable vacuum fan • Test voltage applied to scrub motor subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

SOLUTION CONTROL ON (CONVENTIONAL)

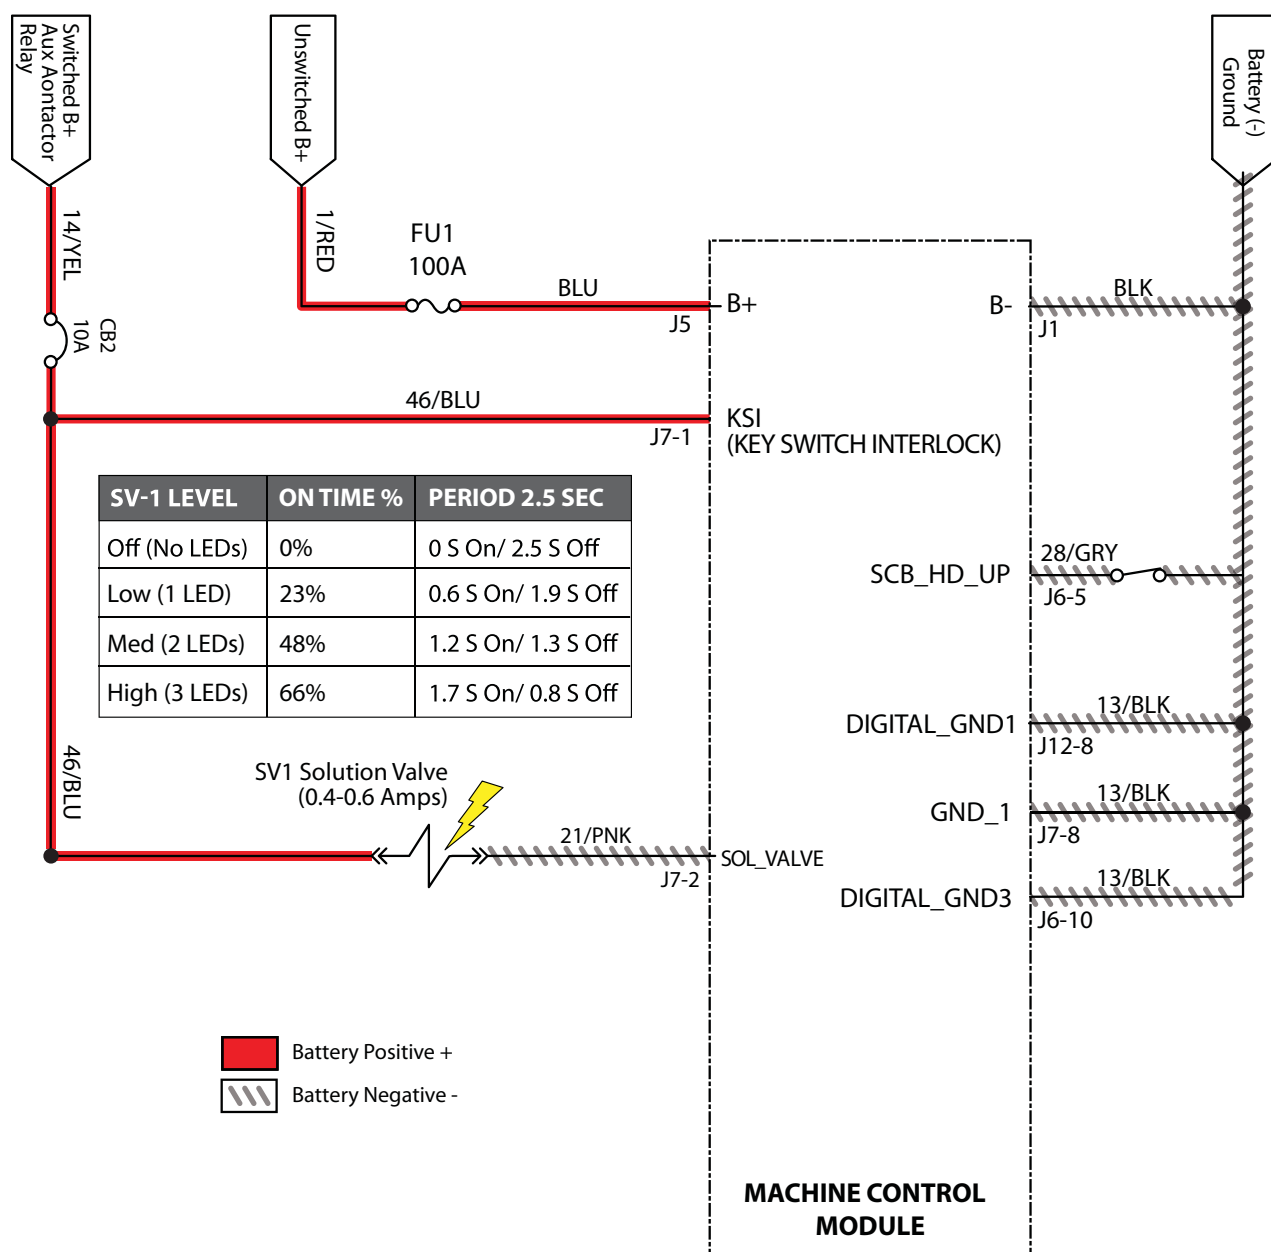

Operational Matrix:

	Enabled	Disabled
Solution Control (Conventional)	- Head Lowered - One-Step Button - Solution Control ON - Fwd/Rev Throttle Command or Bail activated	- Head Raised - One-Step Button - Solution Control OFF - Neutral - Ready State or bail released - Low Battery Voltage - Fault - Battery Charger ON Interlock


**SOLUTION CONTROL FAILED TO TURN ON
(CONVENTIONAL)**

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable solution control (conventional) • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Firmly press circuit breaker #2 to reset • Is circuit breaker #2 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• Key ON • Enable solution control (conventional) • Test voltage applied to solution control (conventional) subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

SOLUTION CONTROL ON (ec-H2O)

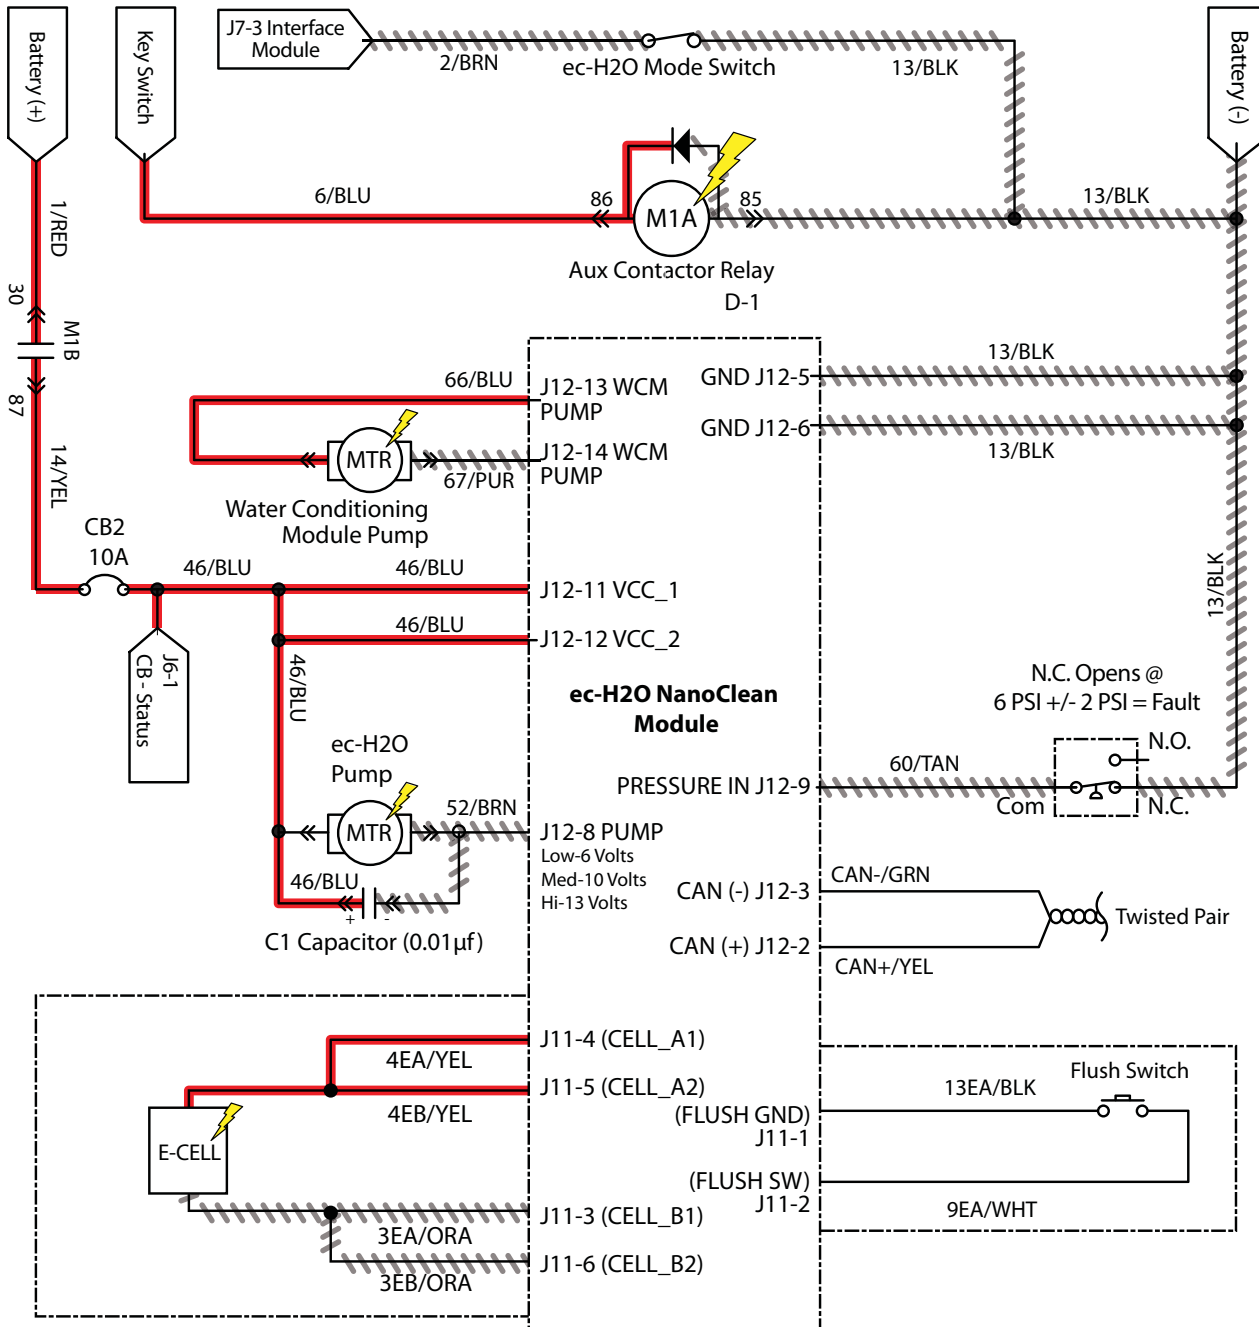

Operational Matrix:

	Enabled	Disabled
Solution Control (ec-H2O)	- Head Lowered - One Step Button - Solution Control ON - ecH2O Switch ON - Fwd/Rev Throttle Command or Bail activated	- Head Raised - One Step Button - Solution Control OFF - ecH2O Switch OFF - Neutral - Ready State or bail released - Low Battery Voltage - ecH2O System Fault - Battery Charger ON Interlock


**SOLUTION CONTROL FAILED TO TURN ON
(ec-H2O)**

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable solution control (ec-H2O) • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Firmly press circuit breaker #2 to reset • Is circuit breaker #2 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• Key ON • Enable solution control (ec-H2O) • Test voltage applied to solution control (ec-H2O) subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

SE (SEVERE ENVIRONMENT) ON

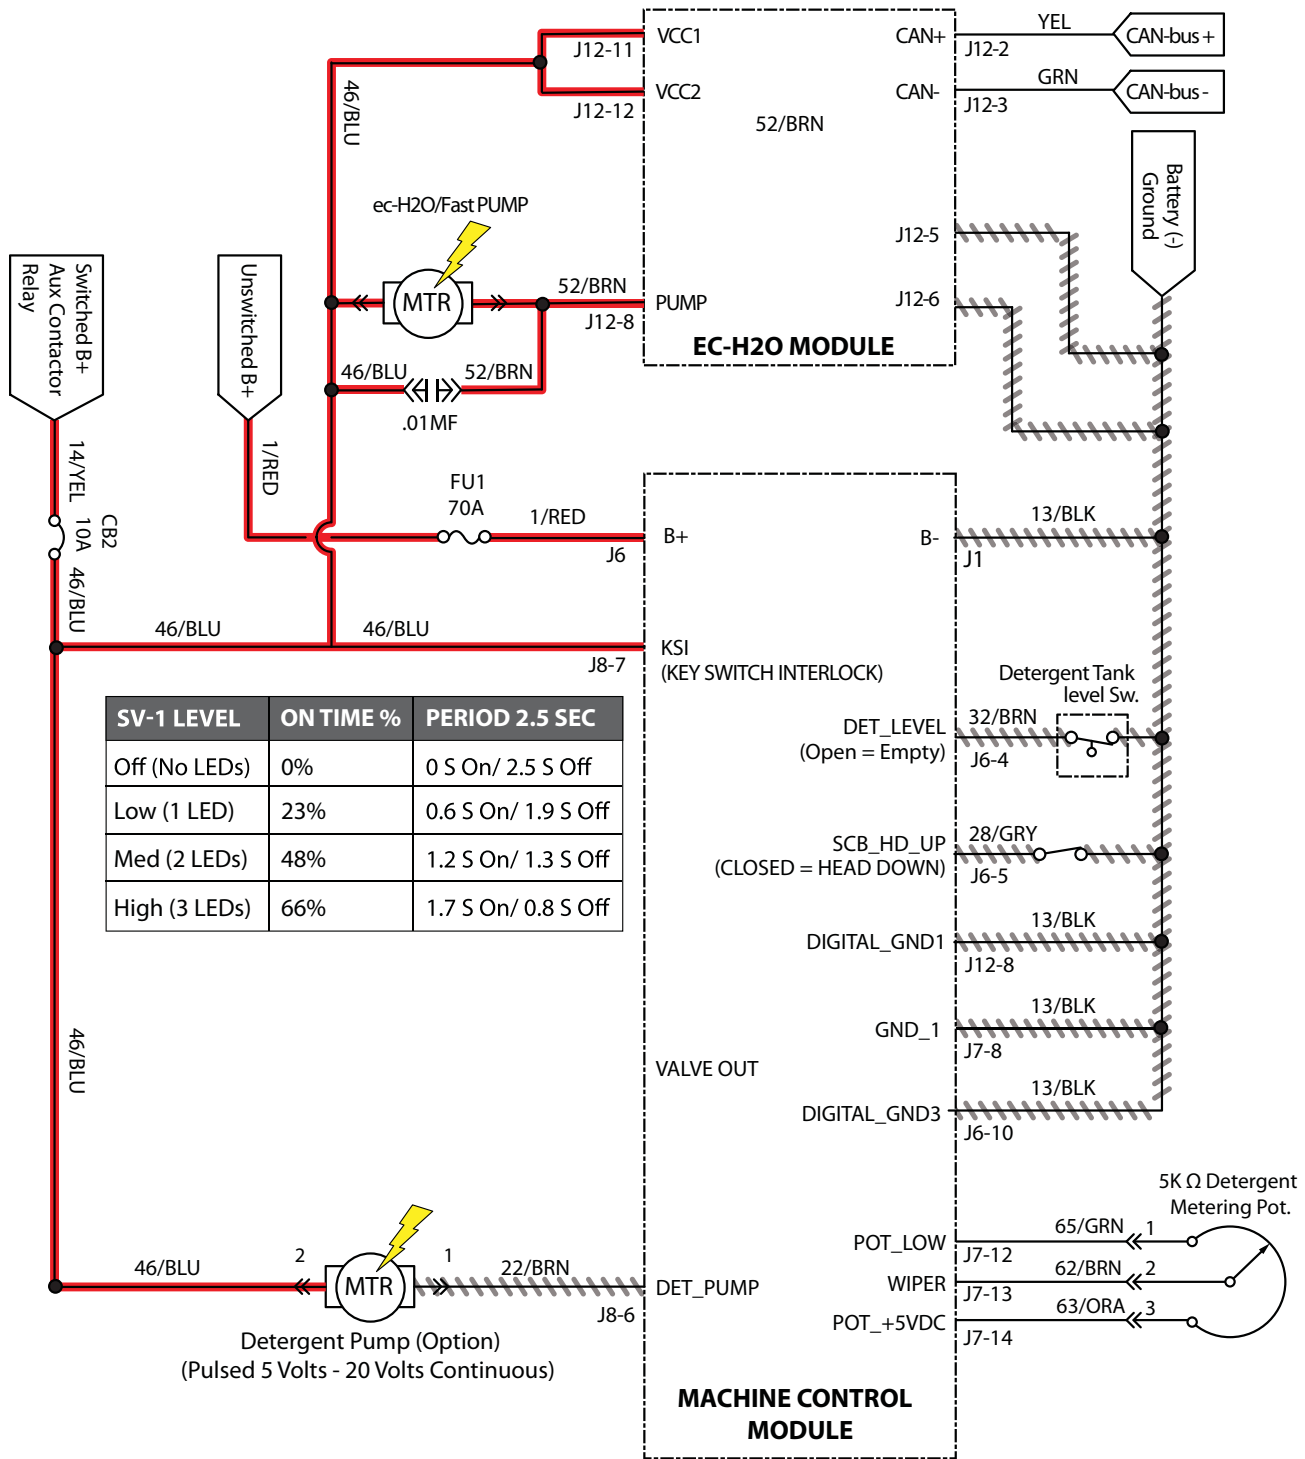


SE (SEVERE ENVIRONMENT) FAILED TO TURN ON

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable SE (Severe Environment) detergent pump • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Firmly press circuit breaker #2 to reset • Is circuit breaker #2 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• Key ON • Enable SE (Severe Environment) detergent pump • Test voltage applied to SE subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

SPRAY PUMP (OPTION)

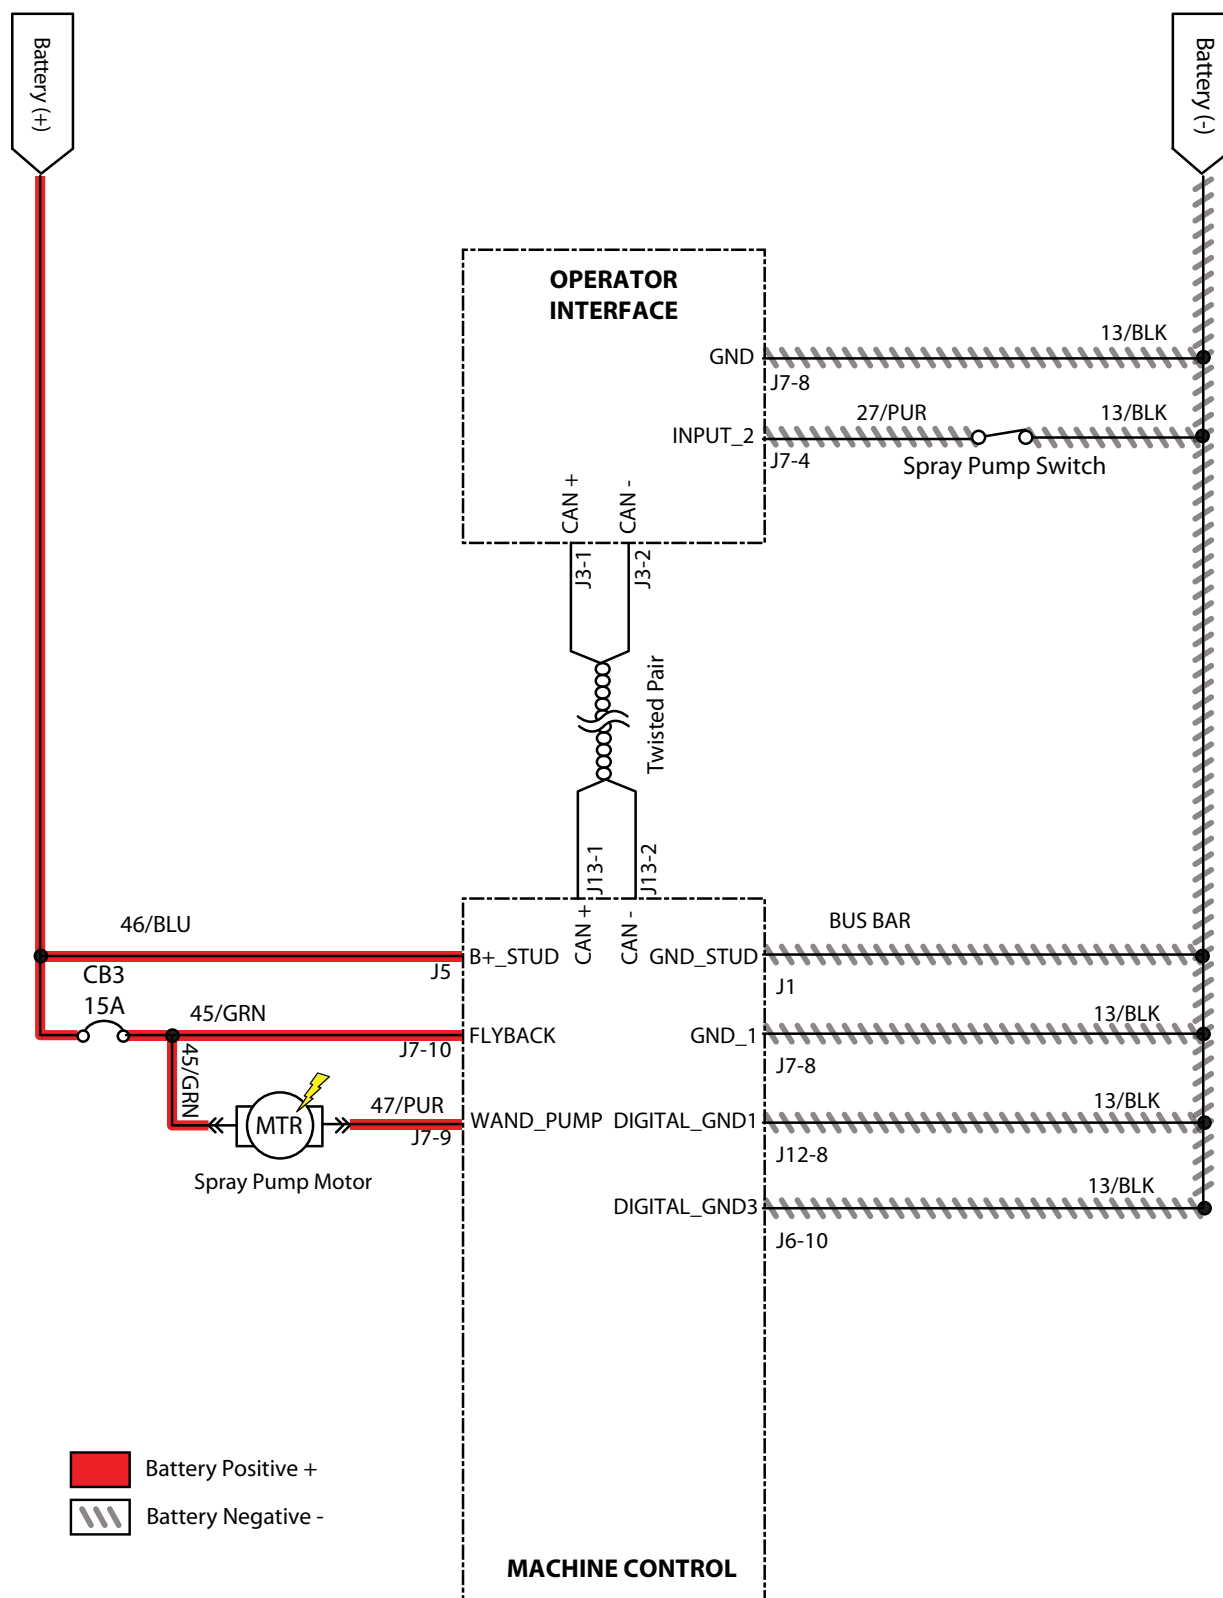


SPRAY PUMP FAILED TO TURN ON

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable spray pump • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Firmly press circuit breaker #3 to reset • Is circuit breaker #3 tripped?		Reset and test power-up circuit operation	Proceed to STEP 3
3	• Key ON • Enable spray pump • Test voltage applied to spray pump subsystem as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

ABW (AUTOMATIC BATTERY WATERING) (OPTION)



Battery watering pump activates under the following conditions:

- 10 complete charge cycles
- 20 opportunity/incomplete charge cycles
- 17 combined charge cycles


**ABW (AUTOMATIC BATTERY WATERING) SYSTEM
FAILED TO TURN ON**

Step	Action	Value(s)	Yes	No
1	• Key ON • Enable ABW if previously faulted or operate manually • Is there a flashing BDI fault or LCD Pro-Panel (option) fault code present?		See FAULTS in TROUBLE-SHOOTING section of this manual	Proceed to STEP 2
2	• Key OFF • Ensure there is water in ABW tank • Operate ABW manually if not priming		Fill ABW tank with water	Proceed to STEP 3
3	• Key OFF • Firmly press circuit breaker #2 to reset • Is circuit breaker #2 tripped?		Reset and test power-up circuit operation	Proceed to STEP 4
4	• Key ON • Test voltage applied to ABW pump subsystem, ABW module, ABW flow sensor, and ABW tank switch as shown on electrical schematic • Are electrical circuits operating as shown on electrical schematic?		Repeat STEP 1	Identify voltage drop location and repair or replace necessary components

Terms:

BDI = Battery Discharge Indicator

i-DRIVE TESTING (UNIVERSAL SCHEMATIC)

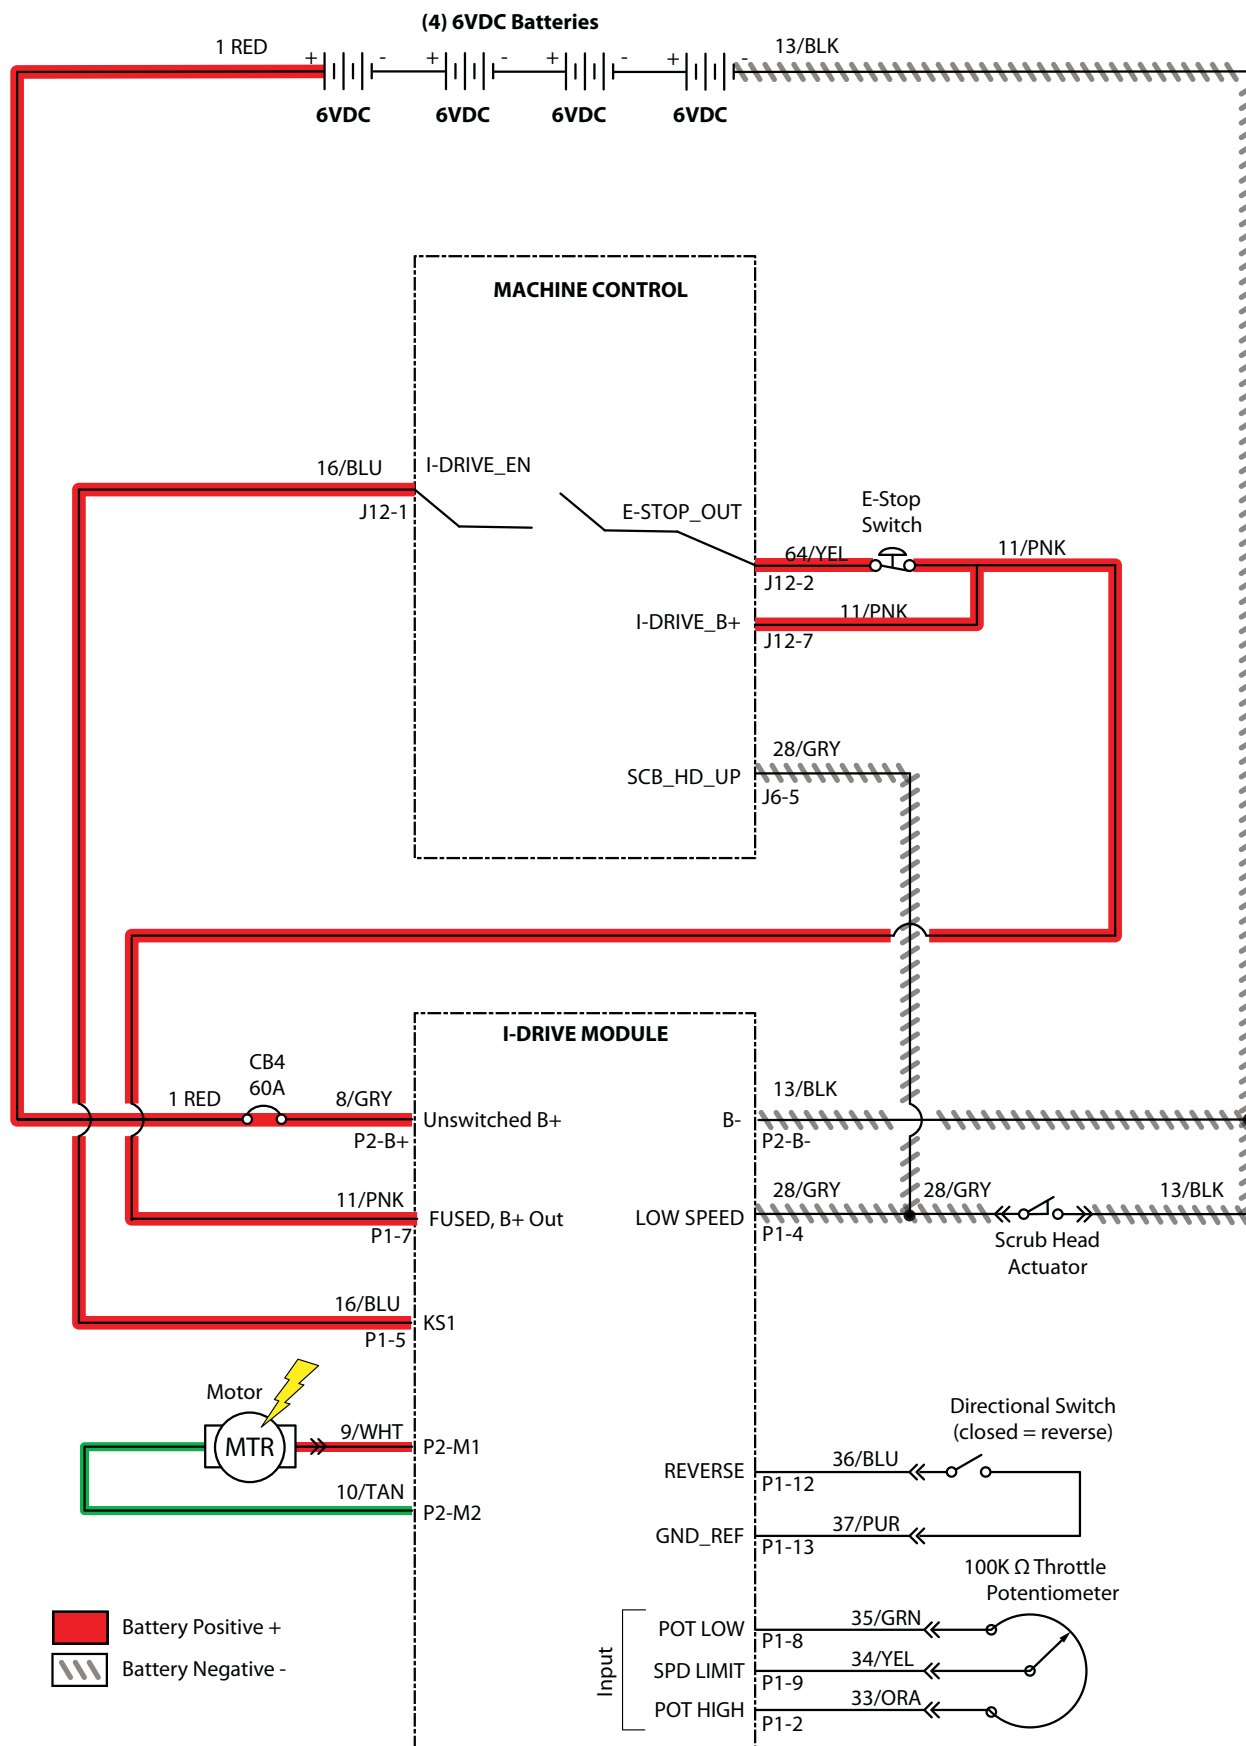

i-DRIVE TESTING PROCEDURE

Step	Action	Value(s)	Yes	No
1 ✓ Switched (+)*	- Key ON / circuits loaded (preferred) - All electrical components remain connected to wire harness - Use an electrical schematic to identify all switched (+) power supply wires - Is there <i>switched battery voltage</i> (+) applied to circuit board?	Applied voltage must be within 1 volt of actual battery voltage	Proceed to STEP 2	Identify voltage drop location and repair or replace necessary components ¹
2 ✓ Unswitched (+)*	- Key ON / circuits loaded (preferred) - All electrical components remain connected to wire harness - Use an electrical schematic to identify all unswitched (+) power supply wires - Is there <i>switched battery voltage</i> (+) applied to circuit board?	Applied voltage must be within 1 volt of actual battery voltage	Proceed to STEP 3	Identify voltage drop location and repair or replace necessary components ¹
3 ✓ Negative (-)*	- Key ON / circuits loaded (preferred) - All electrical components remain connected to wire harness - Use an electrical schematic to identify all negative (-) / ground supply wires - Is there battery negative (-) applied to circuit board?	Applied voltage must be within 1 volt of actual battery voltage	Proceed to STEP 4	Identify voltage drop location and repair or replace necessary components ¹
4 ✓ Inputs	- Key ON - Manually exercise all input devices and use a multimeter to observe status change - Use an electrical schematic to identify all input circuits - Do all inputs function correctly?		Proceed to STEP 5	Repair or replace necessary input components ¹
5 ✓ Outputs	- Key ON - Disconnect battery and circuit board from wire harness and use a Ohmmeter to test output circuits for open or shorted circuits - Use an electrical schematic to identify all output circuits - Is there an <i>open</i> or <i>shorted</i>² output circuit causing the trouble symptom?		Repair or replace necessary output components ¹	Replace circuit board

¹ Wire harnesses are components

² An open circuit has infinite resistance "O.L.". A shorted circuit has 0 (zero) resistance. Always test through entire circuit.

* Switched (+) and Unswitched (+) indicate positive battery voltage applied to circuit board. Negative (-) indicates battery negative (ground) as part of power supply to circuit board.

DISPLAYING FAULT CODES / WARNINGS (PRO-PANEL MACHINES ONLY)

SYSTEM REQUIREMENTS: Windows® 7 OS,
Microsoft .NET 4.5 or later, USB to Mini-USB cable.

Machine software configuration, which is stored in the interface module, must be programmed if the I-Drive or interface modules are replaced or if optional features are installed.

Authorized service providers can download the Service Diagnostics software from the My Tennant portal by visiting www.tennantco.com. Factory-Direct Tennant Service personnel have this software installed on their ServiceLink devices.

The SERVICE DIAGNOSTICS TOOL configures up to five control modules depending on optional trim packages. The interface module stores configuration data and communicates via RS232 serial communication with the i-Drive and through a CAN-Bus to all other modules.

1. Connect a USB cable from the computer to the machine.



2. Turn the key switch to the ON position.




3. Double click the Service Diagnostics desktop shortcut or find the software in All Programs to launch the software.

NOTE: Windows may prompt a restart after installing the machine driver. Decline the restart, close Service Diagnostics, and relaunch Service Diagnostics.



Service Diagnostics

4. Active faults scroll across the top of the home screen.

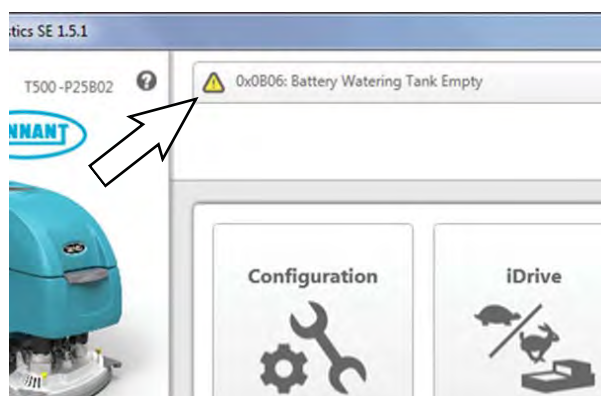


NOTE: Service Diagnostics tool is available to all Tennant Service personnel and authorized distributors. Contact Tennant Field Service for more information.


ENTERING THE MANUAL MODE (MEMBRANE PANEL MACHINES ONLY)

Note: Propel functionality is disabled while the machine is in the manual mode.

1. Turn the key switch to the OFF position.
2. Press and hold the center of the 1-Step button and turn the key switch to the ON position. Continue holding the 1-Step button until the BDI (battery discharge indicator) indicator lights illuminate

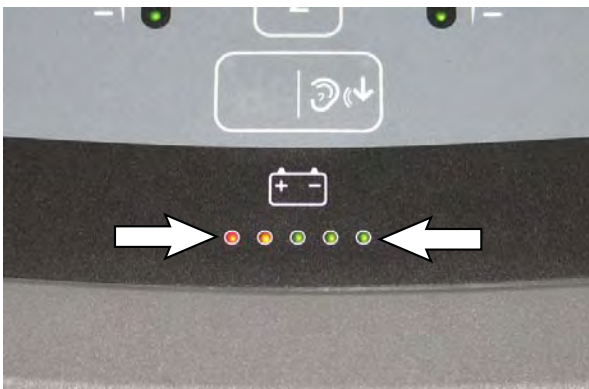

3. Release the 1-Step button.
4. Press the applicable button to access the corresponding function. Use the bail to control the actuator. Squeeze the bail to start the actuator and release the bail to stop the actuator.

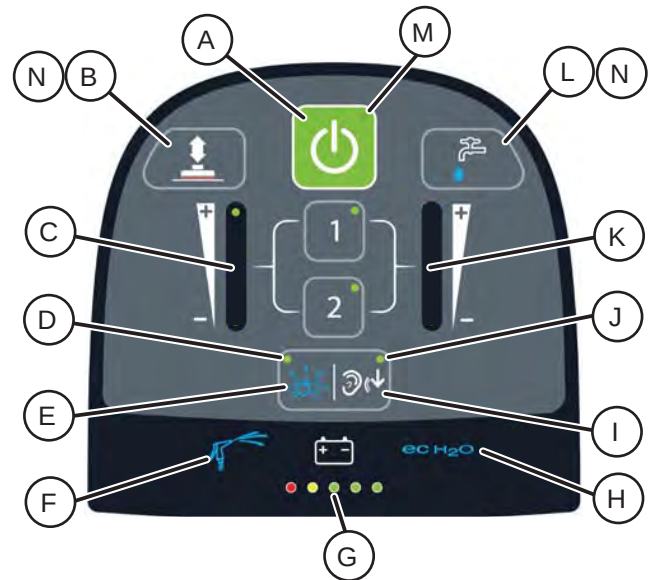

- A. Toggles scrub motor(s) on or off.
 - B. Toggles actuator direction.
 - C. LEDs display actuator direction.
 - D. LED indicates whether severe environment subsystem is active.
 - E. Turns Severe Environment subsystem on or off. Turns off ec-H₂O if ec-H₂O is enabled.
 - F. Indicates Spray Hose option is active. Turned on and off from respective rocker switch on accessory panel.
 - G. Indicates battery discharge level.
 - H. Indicates ec-H₂O option is active. Turned on and off from rocker switch on accessory panel.
 - I. Turns the quiet mode on or off.
 - J. LED Indicates quiet mode active setting.
 - K. LEDs display flow rate setting.
 - L. Cycles between four solution flow setting options (Off, 1, 2, 3). When ec-H₂O is enabled, ec-H₂O will function instead of conventional solution.
 - M. LED indicates if scrub motor(s) are on or off.
 - N. B and L pressed together simultaneously toggle between ABW pump on or ABW pump off.
15. Turn the key switch to OFF position to exit manual mode and return to operating mode

ENTERING THE MANUAL MODE (PRO-PANEL MACHINES ONLY)

Note: Propel functionality is disabled while the machine is in the manual mode.


1. Turn the key switch to the ON position.
2. Log in as a service user at the Supervisor Mode log in screen (service user log in code required). When logged in as service user, the Manual Mode button will appear as a selection in the Setting menu.



3. Select Manual Mode from the Setting menu.
4. Use the right arrow button or left arrow button to scroll through the various manual mode screens.

Pro-Panel Manual Mode Screens:

M01: Scrub Actuator: Press the - (minus) button to set the actuator in the retract direction and the + (plus) button to set the actuator in the extend direction. Squeeze the bail to move the actuator. Displays E (extend) or R (retract), the scrub actuator PWM (pulse width modulation) duty cycle, and the motor current.

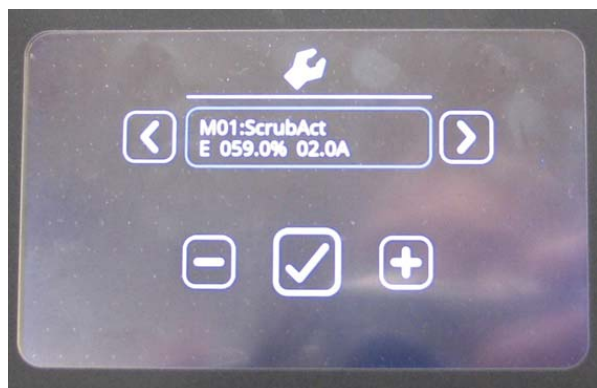

M02: Scrub Motor 1: Press the - (minus) button to set the actuator in the retract direction and the + (plus) button to set the actuator in the extend direction. Squeeze the bail to move the actuator. Press the check box to turn scrub motor 1 on or off. Displays the average voltage, PWM duty cycle, and motor current.



M03: Scrub Motor 2: Press the - (minus) button to set the actuator in the retract direction and the + (plus) button to set the actuator in the extend direction. Squeeze the bail to move the actuator. Press the check box to turn scrub motor 2 on or off. Displays the average voltage, PWM duty cycle, and motor current.



M04: Normal Vac: Press the check box to turn the vacuum motor on or off at normal full speed. Displays the average voltage, PWM duty cycle, and motor current.



M05: Quiet Vac: Press the check box to turn the vacuum motor on or off at reduced speed. Displays the average voltage, PWM duty cycle, and motor current.



M06: Water Valve: Press the check box to turn the water valve cycling on or off. Press the - button to decrease the water flow setting and the + button to increase the water flow setting. Displays the water flow setting and motor current.



M07: Detergent Pump: Press the check box to turn the detergent pump on or off. Press the - (minus) button and the + (plus) button to change the ec-H2O flow setting (three settings and off). Displays the average voltage, PWM duty cycle, and motor current.



M08: Spray Pump: Press the check box to turn the spray pump on or off. Displays the average voltage, PWM duty cycle, and motor current.



M09: Ec Pump: Press the check box to turn the ec-H2O pump on or off. Press the - (minus) button and the + (plus) button to change the ec-H2O flow setting (three settings and off). Displays the PWM duty cycle and motor current.



M10: Ec Cell: Press the check box to turn the ec-H2O cell plates on or off. Press the - (minus) button and the + (plus) button to change the ec-H2O flow setting (three settings and off). Displays the cell PWM duty cycle and cell current



M11: ABW Pump: Press the check box to turn the automatic battery watering pump on or off. Displays the flow meter measured flow rate and motor current.



5. Turn the key switch to the OFF position to turn off the machine and exit the Manual Mode.

SERVICE DIAGNOSTICS TOOL

Machine software configuration, which is stored in the interface module, must be programmed if the i-Drive or interface modules are replaced or if optional features are installed in the field.

Authorized service providers can download the Service Diagnostics software from the My Tennant portal at www.tennantco.com. Factory-Direct Tennant Service personnel have this software installed on their ServiceLink devices.

A USB cable connects from the notebook to an external port on the control console. The SERVICE DIAGNOSTICS TOOL configures up to five control modules depending on optional trim packages. The interface module stores configuration data and communicates via RS232 serial communication with the i-Drive and through a CAN-Bus to all other modules.

- **Interface Module:** The interface module is located in the operator console.
- **Machine Control Module:** The machine control module is located beneath the circuit board mounting heat shrink at the rear of the battery compartment.
- **Propel Module:** The propel module is located at the rear of the solution tank, behind the control module.
- **IRIS Module (option):** The IRIS module is attached to the machine control module as an assembly.
- **Onboard Battery Charger Module (option):** The onboard battery charger is located beneath the plastic cover at the rear of the machine.
- **ec-H2O NanoClean Module (option):** The ec-H2O module is located beneath the recovery tank at the front of the machine.

PROGRAMMING A NEW INTERFACE MODULE

SYSTEM REQUIREMENTS: Windows® 7 Operating System, Microsoft .NET 4.5 or later, USB to Mini-USB cable.

1. Connect a USB cable from a computer to the machine.



2. Turn the key switch to the ON position.




3. Double click the Service Diagnostics desktop shortcut or find the software in All Programs to launch the software.

NOTE: Computer may prompt a restart after installing the machine driver. Decline the restart, close Service Diagnostics, and relaunch Service Diagnostics.



Service
Diagnostics


NOTE: Check USB cable connection to the machine if the screen below appears on the computer screen.

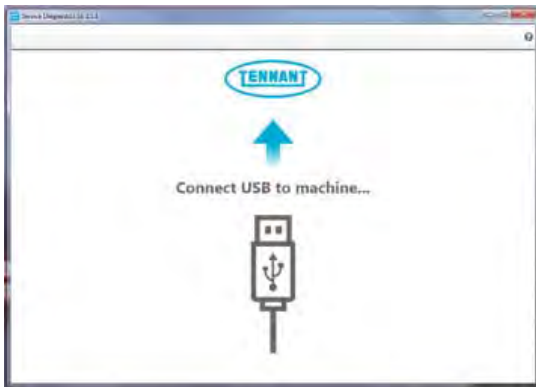

4. The Service Diagnostics tool now connects to the control module network.



5. The Service Diagnostics tool automatically detects a new interface module installation. Enter the model and serial number and then click the arrow button.

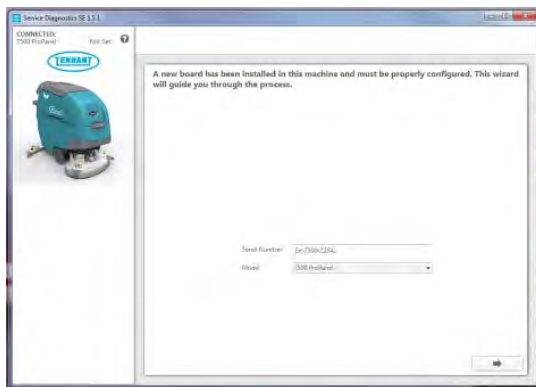

6. Inspect the actual machine configuration and match applicable configurations from the drop-down menus and then click on the arrow button.

NOTE: Reconfiguration may take several minutes.


NOTE: Configurations may differ from what is shown, depending on the options / features are equipped on the machine.




7. The programming process begins and all control modules are updated (if applicable).



8. The Service Diagnostic tool may prompt to cycle the key switch OFF/ON during the process. If prompted, click the OK button and then cycle the key switch to allow the programming to continue.

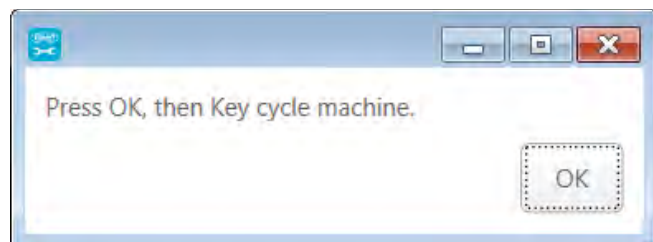

9. Cycle the key switch to save selections.

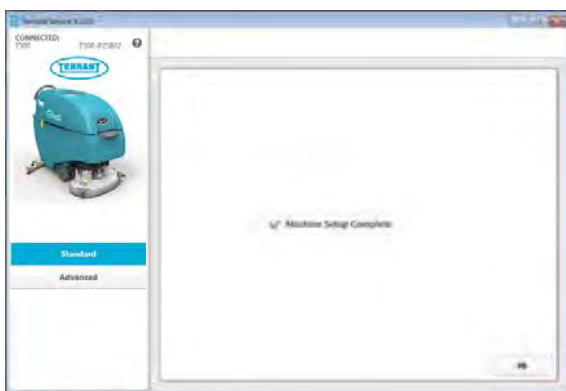

RECONFIGURING EXISTING MODULES

SYSTEM REQUIREMENTS: Windows® 7 Operating System, Microsoft .NET 4.5 or later, USB to Mini-USB cable.

Machine software configuration, which is stored in the interface module, must be programmed if the i-Drive or interface modules are replaced or if optional features are installed in the field.

Authorized service providers can download the Service Diagnostics software from the My Tennant portal by visiting www.tennantco.com. Factory-Direct Tennant Service personnel have this software installed on their ServiceLink devices.

A USB cable connects from the notebook to an external port on the control console. The SERVICE DIAGNOSTICS TOOL configures up to five control modules depending on optional trim packages. The interface module stores configuration data and communicates via RS232 serial communication with the i-Drive and through a CAN-Bus to all other modules.

1. Connect a USB cable from the computer to the machine.




2. Turn the key switch to the ON position.



3. Double click the Service Diagnostics desktop shortcut or find the software in All Programs to launch the software.



NOTE: Computer may prompt a restart after installing the machine driver. Decline the restart, close Service Diagnostics, and relaunch Service Diagnostics.

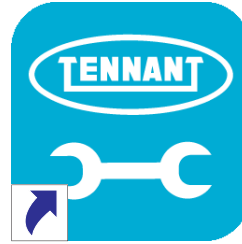

Service Diagnostics

4. Check for machine software updates. A yellow highlight surrounding the Firmware button indicates that updates are available. Click on the Firmware button to install updates.

NOTE: Update installation may take several minutes.

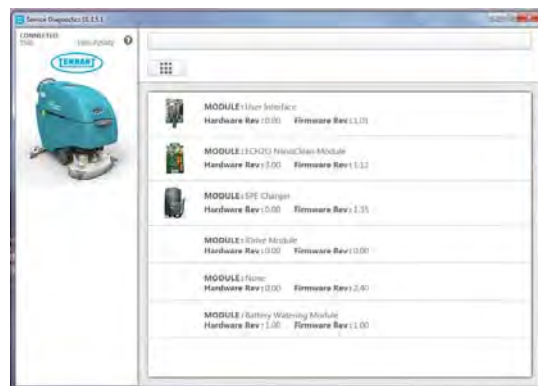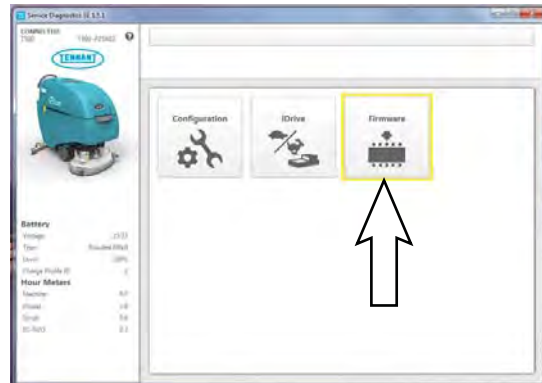

- Click on the Configuration button to display a list of configurable options.



- Select the configurable options that apply from the drop down menus and then click individual arrow buttons to launch individual module reprogramming (this is faster) or the header arrow button to launch all module reprogramming (this is slower). Click the refresh button to display the new configuration after reprogramming is completed.



- Cycle the key switch to save changes.

PROGRAMMING THE DRIVE MODULE

SYSTEM REQUIREMENTS: Windows® 7 Operating System, Microsoft .NET 4.5 or later, USB to Mini-USB cable.

Machine software configuration, which is stored in the interface module, must be programmed if the i-Drive or interface modules are replaced or if optional features are installed in the field.

Authorized service providers can download the Service Diagnostics software from the My Tennant portal by visiting www.tennantco.com. Factory-Direct Tennant Service personnel have this software installed on their ServiceLink devices.

A USB cable connects from the notebook to an external port on the control console. The SERVICE DIAGNOSTICS TOOL configures up to five control modules depending on optional trim packages. The interface module stores configuration data and communicates via RS232 serial communication with the i-Drive and through a CAN-Bus to all other modules.

1. Connect a USB cable from a notebook computer to the machine.




2. Turn the key switch to the ON position.



3. Double click the Service Diagnostics desktop shortcut or find the software in All Programs to launch the software.



NOTE: Computer may prompt a restart after installing the machine driver. Decline the restart, close Service Diagnostics, and relaunch Service Diagnostics.

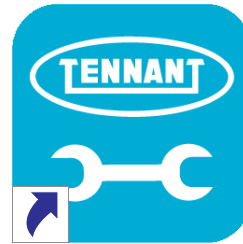

Service Diagnostics

4. Check for machine software updates. A yellow highlight surrounding the Firmware button indicates that updates are available. Click on the Firmware button to install updates.


NOTE: Update installation may take several minutes.

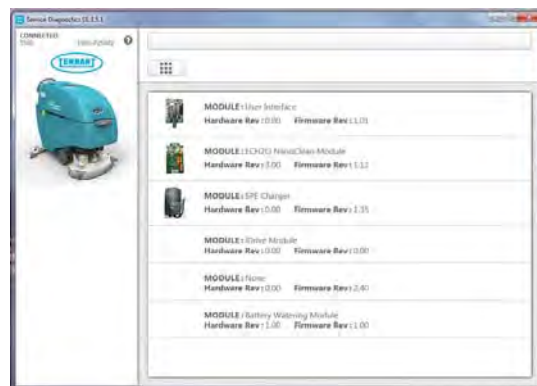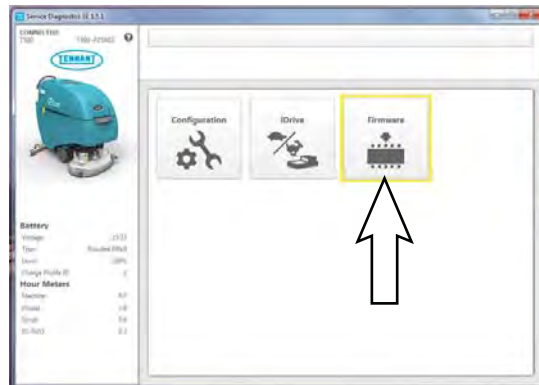

- Click on the i-Drive button.



- Click on the Program Factory Defaults button to program the drive module.

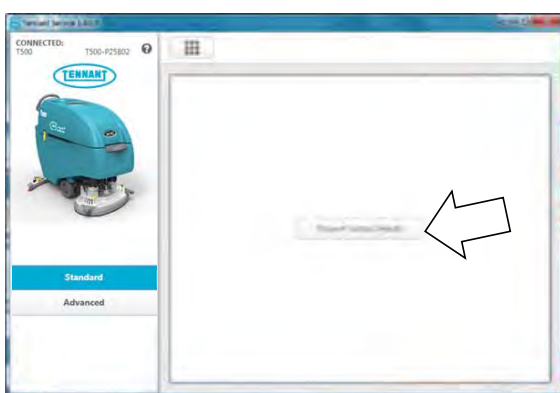

- Cycle the key switch to save.

RECONFIGURING THE MACHINE AFTER NEW HARDWARE / OPTION INSTALLATION

SYSTEM REQUIREMENTS: Windows® 7 Operating System, Microsoft .NET 4.5 or later, USB to Mini-USB cable.

Machine software configuration, which is stored in the interface module, must be programmed if the i-Drive or interface modules are replaced or if optional features are installed in the field.

Authorized service providers can download the Service Diagnostics software from the My Tennant portal by visiting www.tennantco.com. Factory-Direct Tennant Service personnel have this software installed on their ServiceLink devices.

A USB cable connects from the notebook to an external port on the control console. The SERVICE DIAGNOSTICS TOOL configures up to five control modules depending on optional trim packages. The interface module stores configuration data and communicates via RS232 serial communication with the i-Drive and through a CAN-Bus to all other modules.


1. Connect a USB cable from the computer to the machine.



2. Turn the key switch to the ON position.



3. Double click the Service Diagnostics desktop shortcut or find the software in All Programs to launch the software.

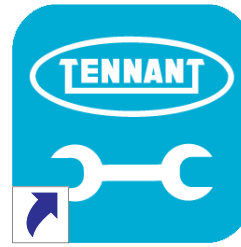

Service
Diagnostics


4. Click on the Configuration button to display a list of configurable options.




5. Select the configurable changes that apply from the drop down menus.



6. Select the new hardware setting from the pull down menu.

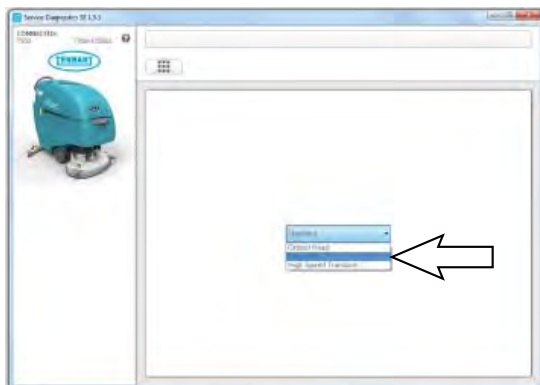

7. Click on the Program button to configure the machine for the new hardware / option. Reprogramming for new hardware should take several minutes to complete.

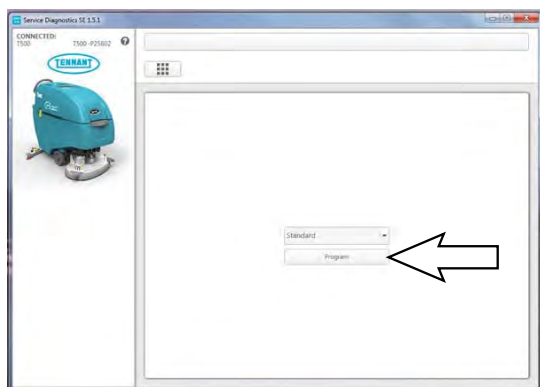

CHANGING THE OFF-BOARD BATTERY CHARGER SETTINGS

NOTE: The battery charger algorithm profile is programmed for Trojan flooded (wet) lead acid batteries 160-260 AH range (Algorithm position 003 - factory default). Program the charger algorithm profile according to specific battery type as described below to prevent battery damage.

1. Disconnect the charger power cable from the wall outlet or the charger. Wait 30 seconds for the input relay to open.



2. While reconnecting AC input, press and hold the Select Charge Profile Button for approximately 10 seconds, through the light check function, until the Error Indicator is illuminated (amber) and Battery Charging Indicator starts flashing (green).



3. Press and release the Select Charge Profile Button to advance through the charge profiles. The selected charging profile will be displayed up to three times.

NOTE: Process will time out and profile will remain unchanged if there is 15 seconds of inactivity. A profile number is allowed to display three times.



4. When the new charging profile is displayed, press and hold the Select Charge Profile button for 10 seconds to confirm selection and exit Profile Selection Mode. When the charge profile is confirmed, the Error Indicator and Battery Charging Indicator lights will turn off and the blue AC Power Indicator will remain illuminated. Release the Select Charge Profile button.
5. Press the Select Charge Profile Button to ensure the new profile is selected.


Algorithm Profile ID	Battery Description
003	Trojan flooded batteries 160-260 AH range
021	TAB/ENERSYS flooded batteries 180-260AH Range
028	DEKA GEL batteries 180-200 AH range
043	DISCOVER AGM batteries 200-400 AH range
051	SONNENSCHN GEL batteries 200-400 AH range
168	TPPL, 12XFC48/12XFC58/12XFC60

Changing the Off-Board Battery Charger Setting instructions and photos taken from the Delta-Q IC650 Charger Manual.

© Delta-Q Technologies Corp. (PN: 710-0138 Rev 3
Date: 14/07/2014)

CLEANING SYSTEMS

REMOVE / INSTALL THE TRANSAXLE ASSEMBLY

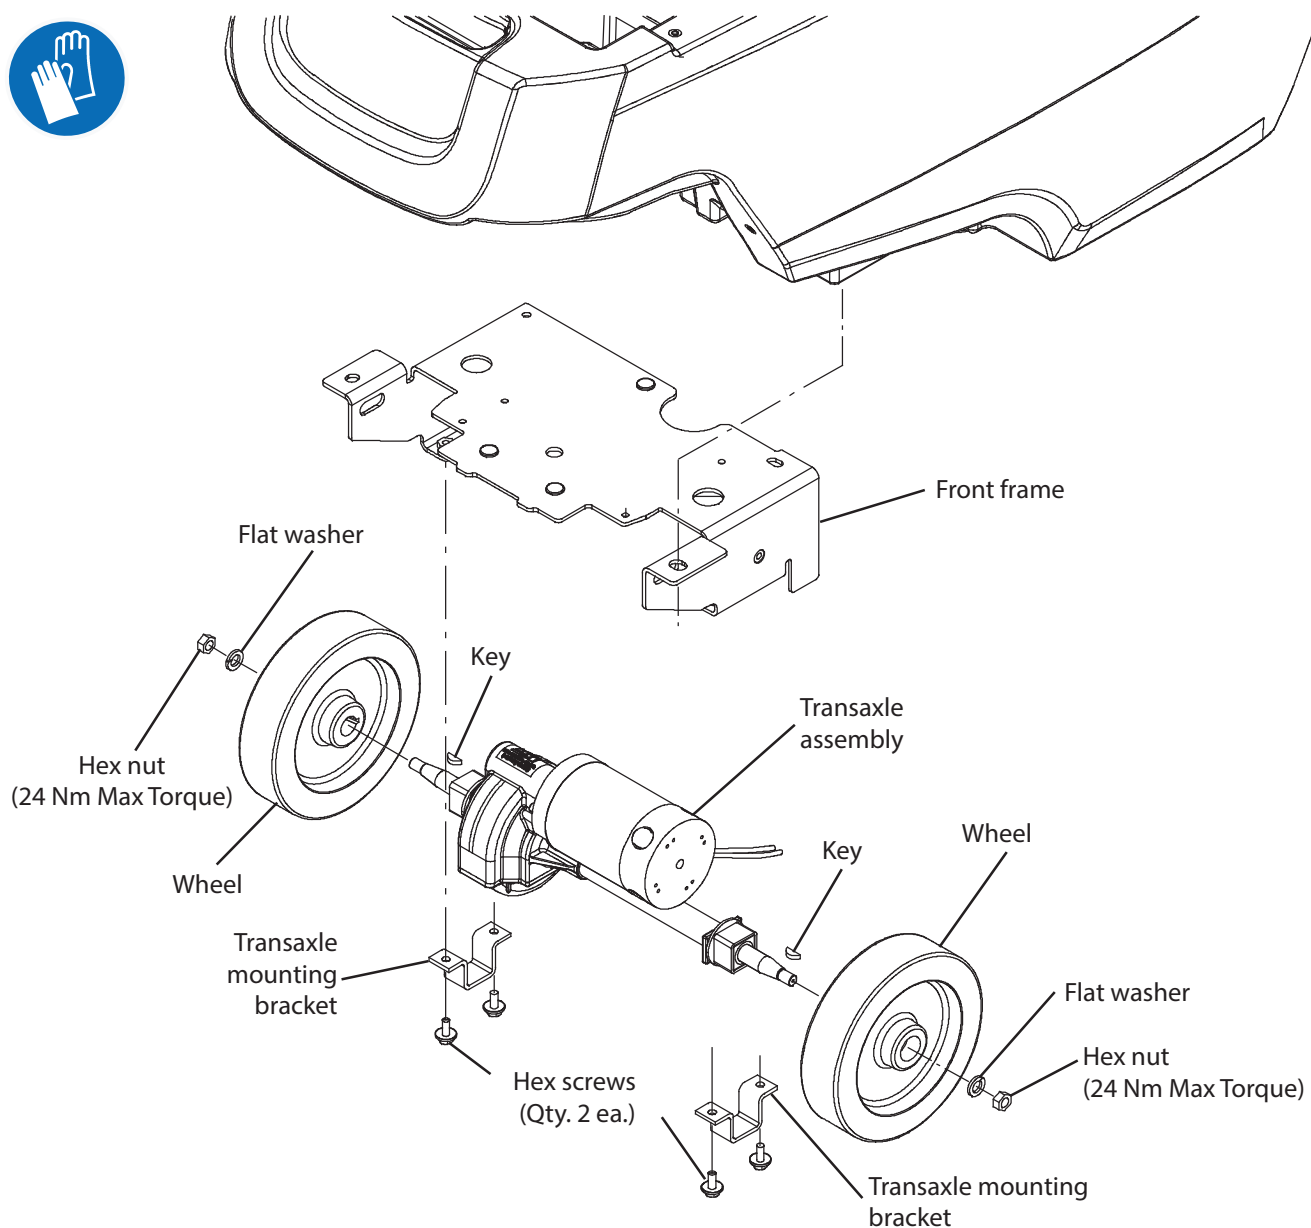

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the solution tank and the recovery tank.
2. Turn the key to the OFF position.

3. Disconnect the battery cable from the machine.
4. Remove the batteries from the machine.


FOR SAFETY: When servicing machine, avoid contact with battery acid, keep all metal objects off batteries, and use a hoist or adequate assistance when lifting batteries.

5. Remove the rear squeegee assembly from the machine.

6. Position a protective blanket next to the side of the machine that will be tipped onto the floor.

NOTE: ***Do Not** allow the machine to drop when tipping it onto the protective blanket. The scrub head and other components could be damaged if machine is allowed to drop. If necessary, remove the scrub head from the machine before tipping the machine onto its side.*

7. Carefully tip the machine onto the protective blanket.
8. Disconnect hoses as necessary to access the transaxle assembly.
9. Cut the wire tie from the main wire harness / transaxle connection and disconnect the main wire harness from the transaxle assembly.

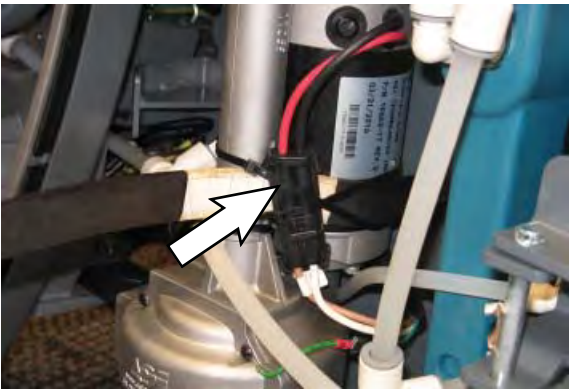

10. Remove both transaxle mounting brackets securing the transaxle assembly / wheels to the machine. Set the transaxle mounting brackets, flat washers, and hex screws aside.



11. If replacing the transaxle assembly only: Remove both wheels from the transaxle motor. Set the wheels, both keys, flat washers, and hex nuts aside. Discard the removed transaxle.
12. If installing a new transaxle assembly only: Install the wheels onto the new transaxle assembly.
13. Install the new transaxle assembly / reinstall removed transaxle assembly in the reverse order of disassembly.

REMOVING / INSTALLING THE DRIVE MOTOR CARBON BRUSHES


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the solution tank and the recovery tank.
2. Turn the key to the OFF position.
3. Disconnect the battery cable from the machine.
4. Remove the batteries from the machine.

FOR SAFETY: When servicing machine, avoid contact with battery acid, keep all metal objects off batteries, and use a hoist or adequate assistance when lifting batteries.

5. Remove the rear squeegee from the machine.
6. Position a protective blanket next to the side of the machine that will be tipped onto the floor.
7. Carefully tip the machine onto the protective blanket.
8. Remove the access cover from the drive motor.

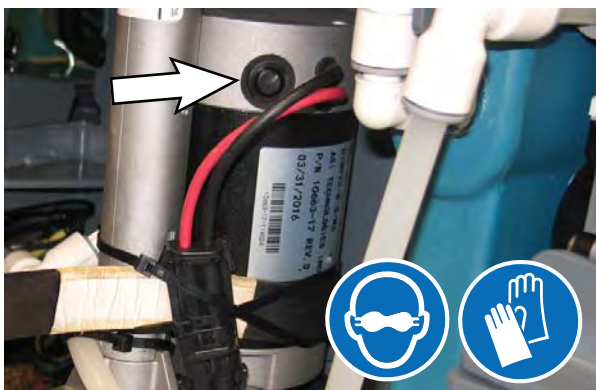


9. Remove the hardware securing the carbon brush in the drive motor.
10. Remove the carbon brush from the drive motor.

11. Use compressed air to clean any dust from inside the drive motor.
12. Repeat previous steps to remove the remaining carbon brushes from the drive motor.

NOTE: Carbon brushes should be replaced as sets.

13. Reinstall the removed carbon brushes / install the new carbon brushes into the drive motor in the reverse order of removal.

REMOVE / INSTALL THE CYLINDRICAL SCRUB HEAD ASSEMBLY

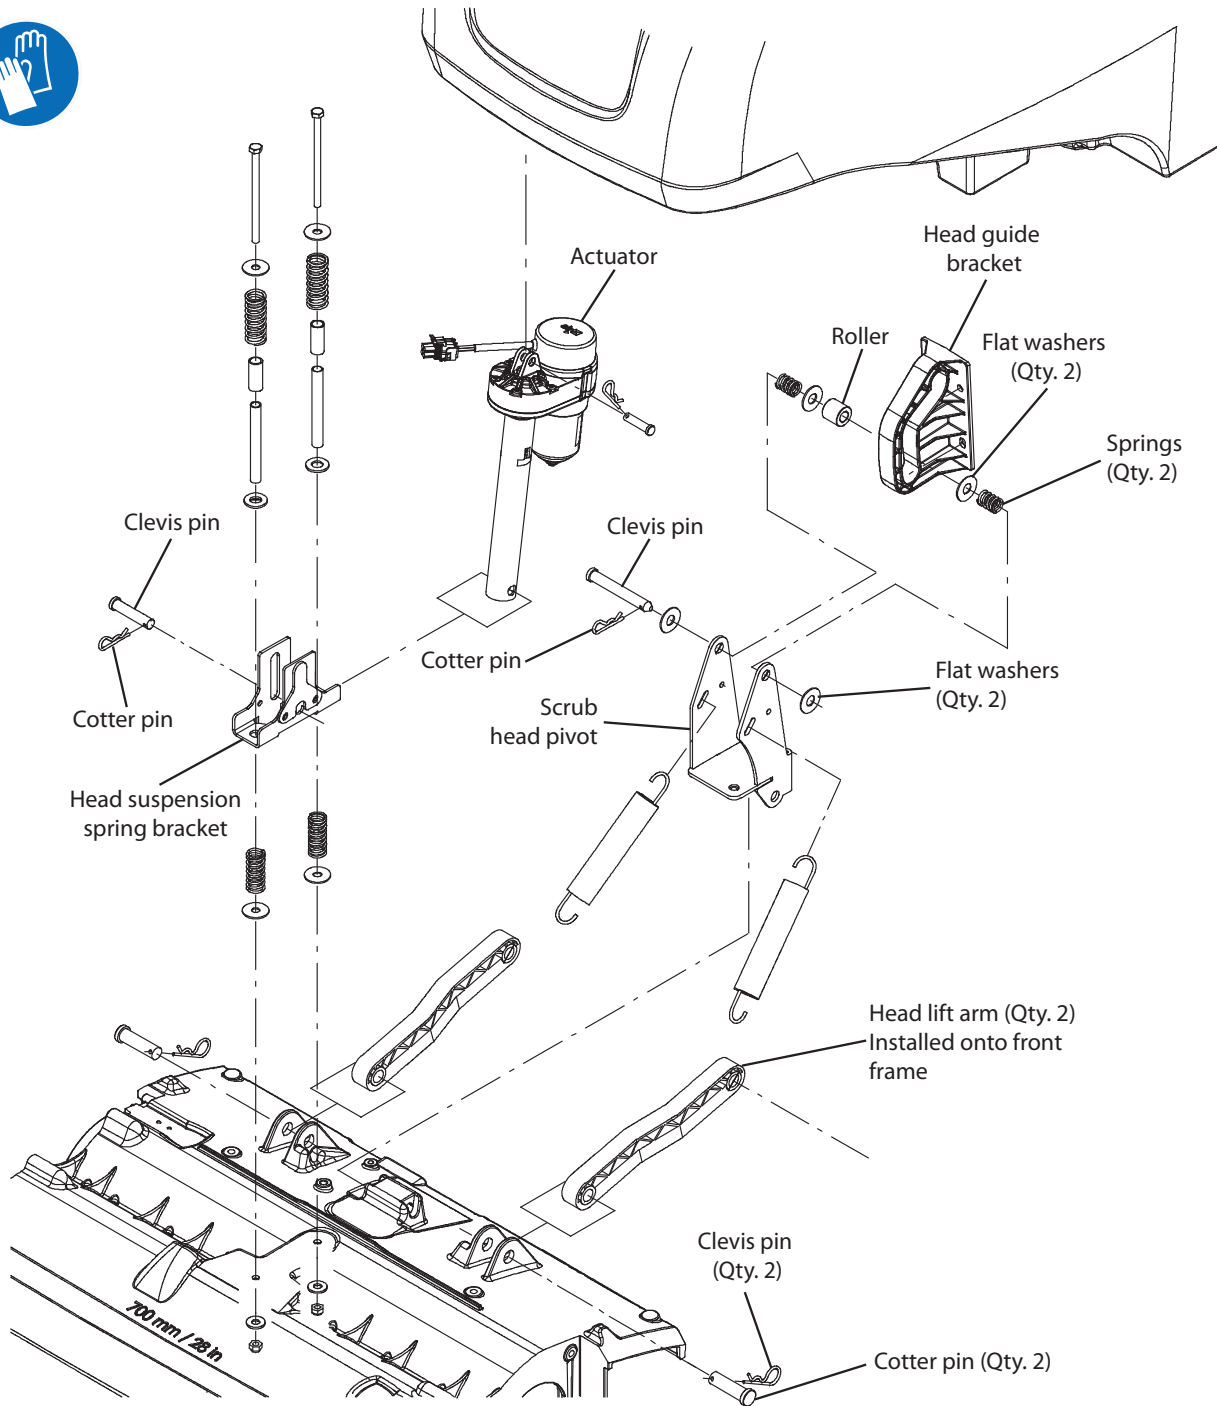

1. Completely empty both the solution tank and the recovery tank.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

2. Turn the key to the OFF position and remove the key.


3. Remove debris tray from the scrub head. Set the debris tray aside.

4. Remove scrub brushes from the scrub head. Set the scrub brushes aside.


5. Turn ON the machine, completely lower the scrub head to the floor, turn OFF the machine, and remove the key.
6. Disconnect the battery cable from the machine.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

7. Remove the front scrub head cover from the machine.

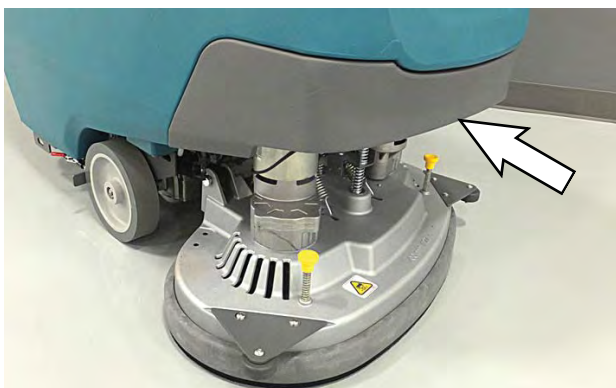


8. Cut the cable ties from the main wire harness / brush motor connection and disconnect the main wire harness from the brush motors.
9. Disconnect all solution supply hoses from the scrub head.
10. Cut all wire ties securing the main wire harness to the scrub head and disconnect main wire harness connections from the brush drive motors.
11. Remove the cotter pin and clevis pin securing the actuator to the head suspension spring bracket.

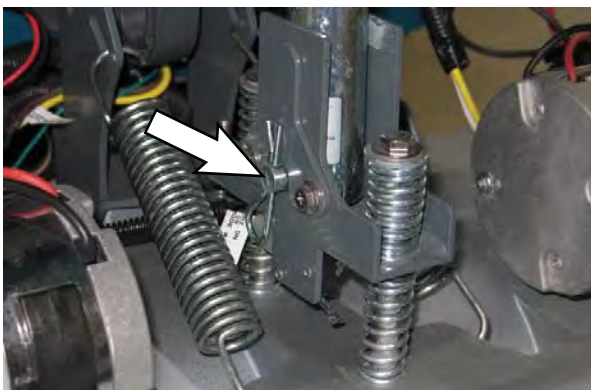

12. Remove the cotter pins and clevis pins securing the head lift arms to the scrub head assembly.



13. Remove the clevis pin and cotter pin securing the scrub head pivot to the head guide bracket.

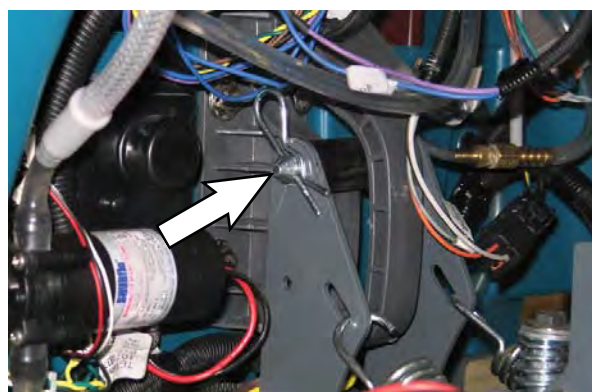

14. Reinstall the removed scrub head / install the new scrub head onto the machine in the reverse order of removal.
15. If removed scrub head was replaced with new orbital scrub head, reconfigure the machine for the orbital scrub head. See RECONFIGURING THE MACHINE AFTER NEW HARDWARE / OPTION INSTALLATION in this section of the manual.

CHECKING / ADJUSTING THE CYLINDRICAL SCRUB BRUSH PATTERN

NOTE: This procedure must be completed using a new set of brushes. Performing procedure with worn brushes may result in uneven brush wear and / or shortened brush life.


1. Apply chalk to a flat, level surface.

NOTE: The main wire harness must be disconnected from the transaxle motor so the machine remains stationary during the brush pattern test.


2. Turn off ec-H2O system (if equipped).
3. Turn off the solution flow.
4. Adjust the speed dial to the lowest setting.
5. Position the scrubber so the brushes are over the chalked area.
6. Lower the scrub head into the chalked area on the floor.
7. Place the directional lever into the reverse position.
8. Firmly hold the machine so it does not move and squeeze the bail handle to activate the scrub brushes. Hold the bail handle for 20 seconds and then release the bail handle.

Note: Parking brake can be used to hold machine in place if machine is equipped with the optional parking brake.

9. Raise the scrub head and pull the machine away from the pattern test area.
10. Observe the brush pattern. If the brush pattern is the same width across the entire length of each brush and both brushes are the same width, no adjustment is necessary.

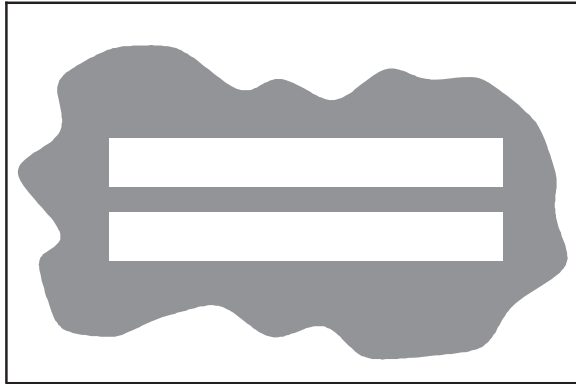

11. If the brush patterns are tapered, proceed to the following steps to adjust the patterns.

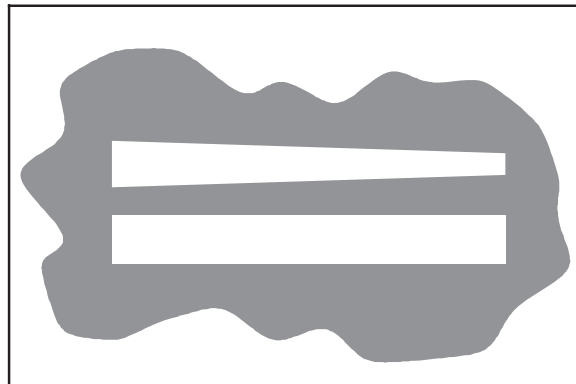

12. Unfasten yellow latch and remove the idler plate assembly from the scrub head.



13. Remove the skirt cover from the idler plate.



14. Adjust the brush taper. Turn the idler plug clockwise to increase the taper at that end of the brush and counterclockwise to decrease the taper at that end of the brush.




15. Reinstall the skirt cover onto the idler plate and reinstall the idler plate assembly onto the scrub head.
16. If necessary, repeat step 12 through step 15 to adjust the taper for the other brush (idler plate is located on the other side of the scrub head).




17. Reapply chalk and repeat step 5 through step 16 as necessary.

18. If the brushes are not the same width front-to-rear, proceed to the following steps.

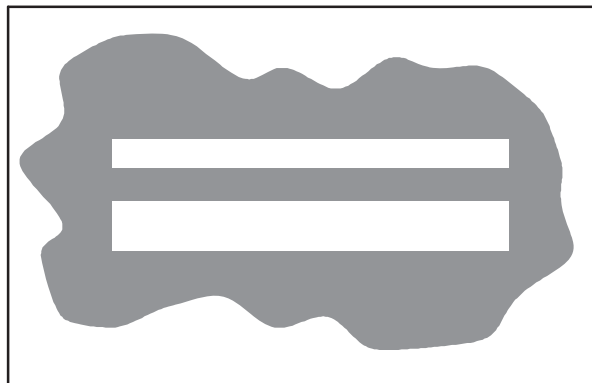

19. Loosen the hex screw securing the leveler screw into place on the scrub head pivot.

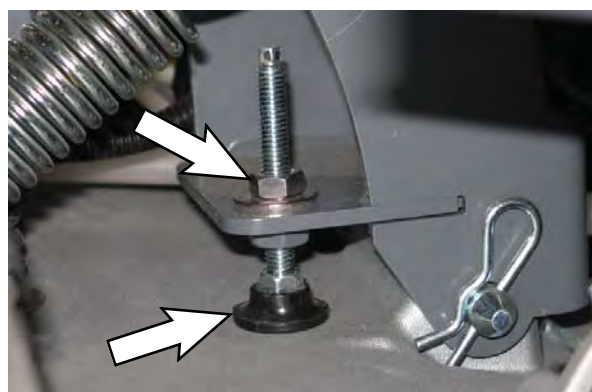


20. Adjust the leveler screw up to decrease the rear brush width and down to increase the rear brush width.
21. Tighten the previously loosened hex screw.
22. Recheck the brush width. Repeat step 19 through step 22 as necessary.

REMOVING / INSTALLING THE CYLINDRICAL SCRUB HEAD MOTOR CARBON BRUSHES


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.
3. Loosen and remove the latch securing the retaining band to the brush motor.

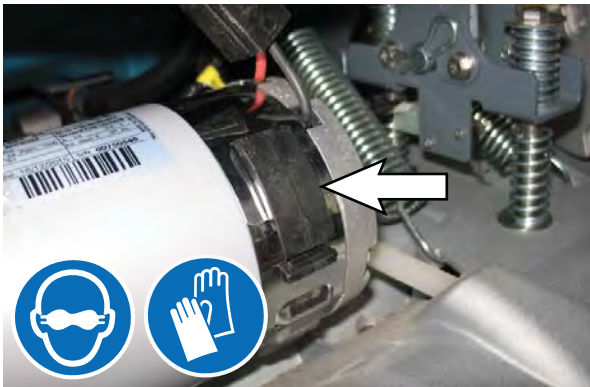

4. Carefully pull the carbon brush from the cylindrical brush motor.

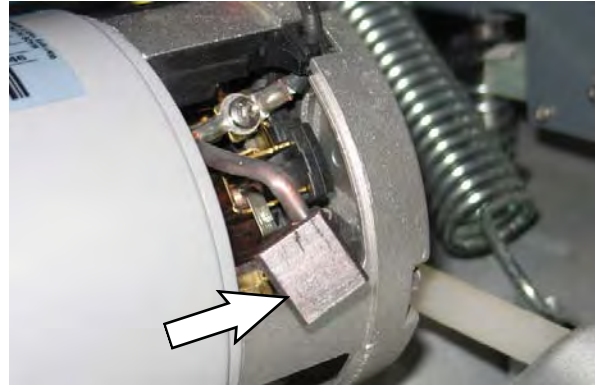

5. Remove the pan screw securing the carbon brush assembly in the cylindrical brush motor and remove the carbon brush assembly from the machine.




6. Use compressed air to clean any dust from inside the motor.
7. Repeat previous steps to remove the carbon brush located on the other side of the cylindrical brush motor.

NOTE: Carbon brushes should be replaced as sets.

8. Reinstall the removed carbon brushes / install the new carbon brushes into the cylindrical brush motor in the reverse order of removal.

REMOVE / INSTALL THE DISK SCRUB HEAD ASSEMBLY

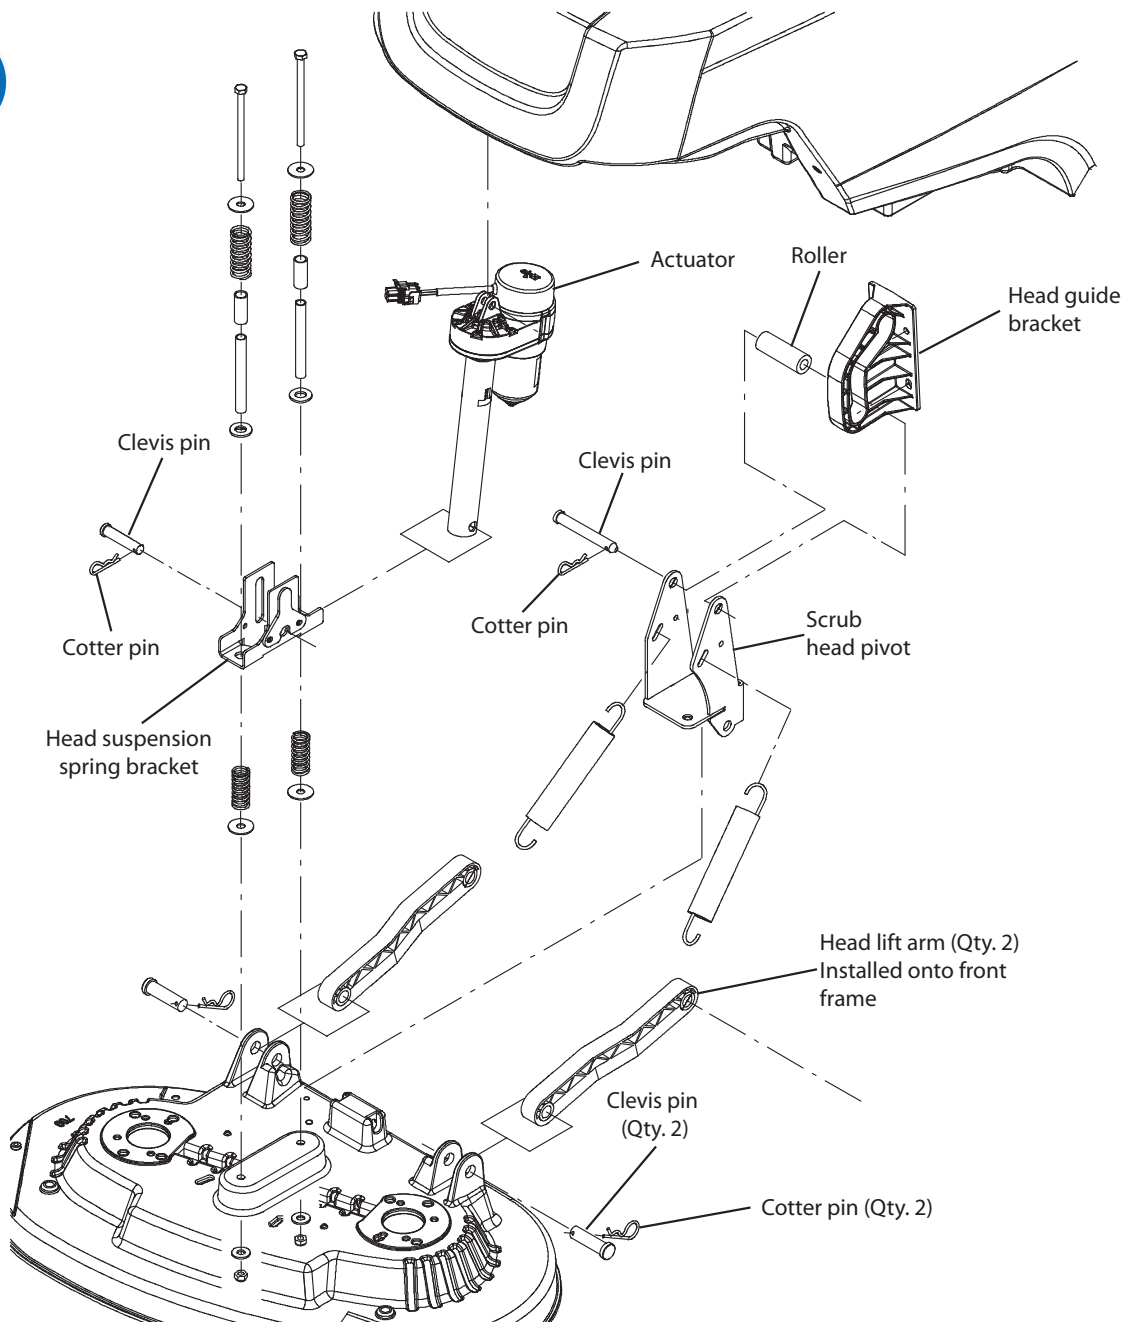

1. Completely empty both the solution tank and the recovery tank.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.


2. Turn the key to the OFF position and remove the key.
3. Remove scrub brushes from the scrub head. Set the scrub brushes aside.

4. Turn ON the machine, completely lower the scrub head to the floor, turn OFF the machine, and remove the key.


5. Disconnect the battery cable from the machine.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.


6. Remove the front scrub head cover from the machine.

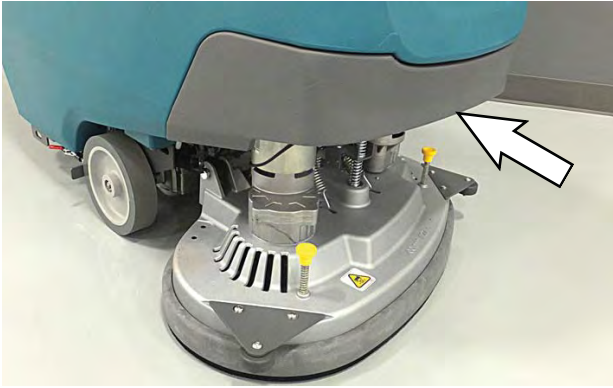

7. Cut the cable ties from the main wire harness / brush motor connection and disconnect the main wire harness from the brush motors.
8. Disconnect all solution supply hoses from the scrub head.
9. Remove the cotter pin and clevis pin securing the actuator to the head suspension spring bracket.

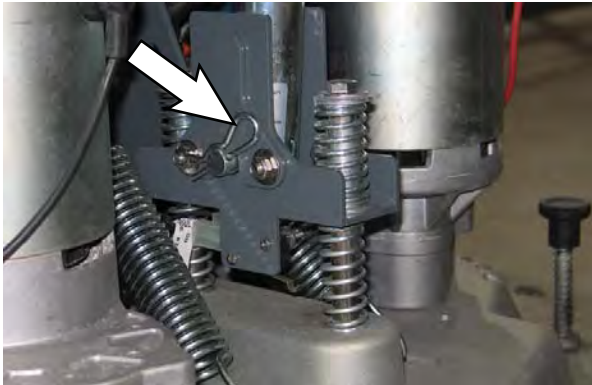

10. Remove the cotter pins and clevis pins securing the head lift arms to the scrub head assembly.

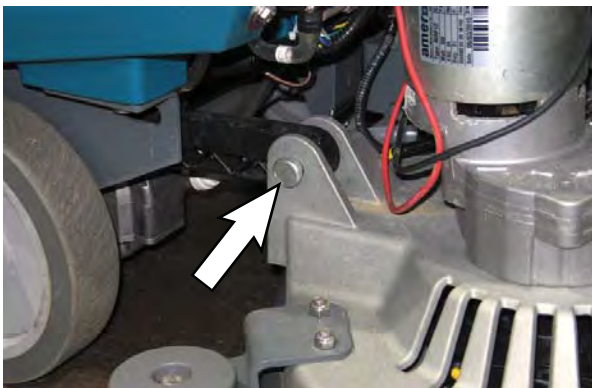


11. Remove the clevis pin and cotter pin securing the scrub head pivot to the head guide bracket.
12. Reinstall the removed scrub head / install the new scrub head onto the machine in the reverse order of removal.
13. If removed scrub head was replaced with an orbital scrub head, reconfigure the machine for the orbital scrub head. See RECONFIGURING THE MACHINE AFTER NEW HARDWARE / OPTION INSTALLATION in this section of the manual.

REMOVING / INSTALLING THE DISK SCRUB HEAD MOTOR CARBON BRUSHES


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.
3. Remove the access plug from the motor and slide the terminal boot from the terminal.

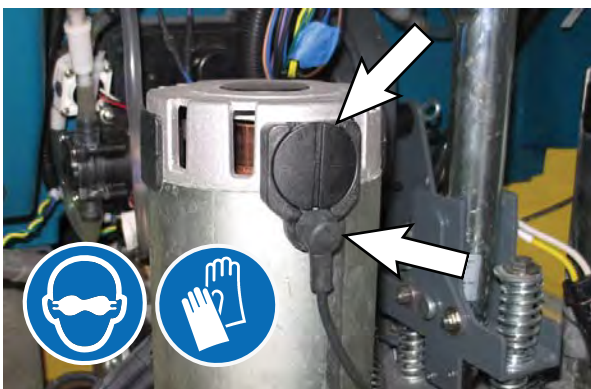

4. Remove the hex nut securing the cable to the brush motor.

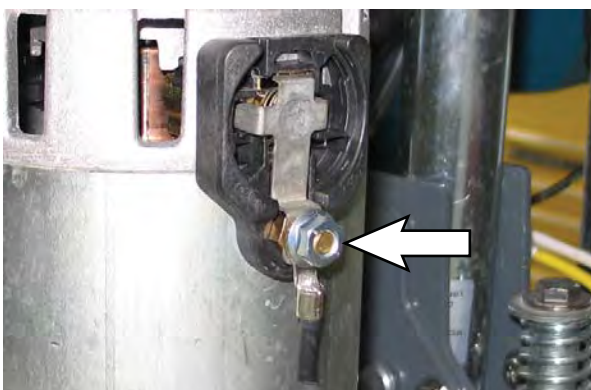

5. Carefully pull the carbon brush assembly from the brush motor.




6. Use compressed air to clean any dust from inside the motor.
7. Repeat previous steps to remove the carbon brush located on the other side of the disk brush motor.

NOTE: Carbon brushes should be replaced as sets.

8. Reinstall the removed carbon brushes / install the new carbon brushes into the disk brush motor in the reverse order of removal.

REMOVE / INSTALL THE ORBITAL SCRUB HEAD ASSEMBLY

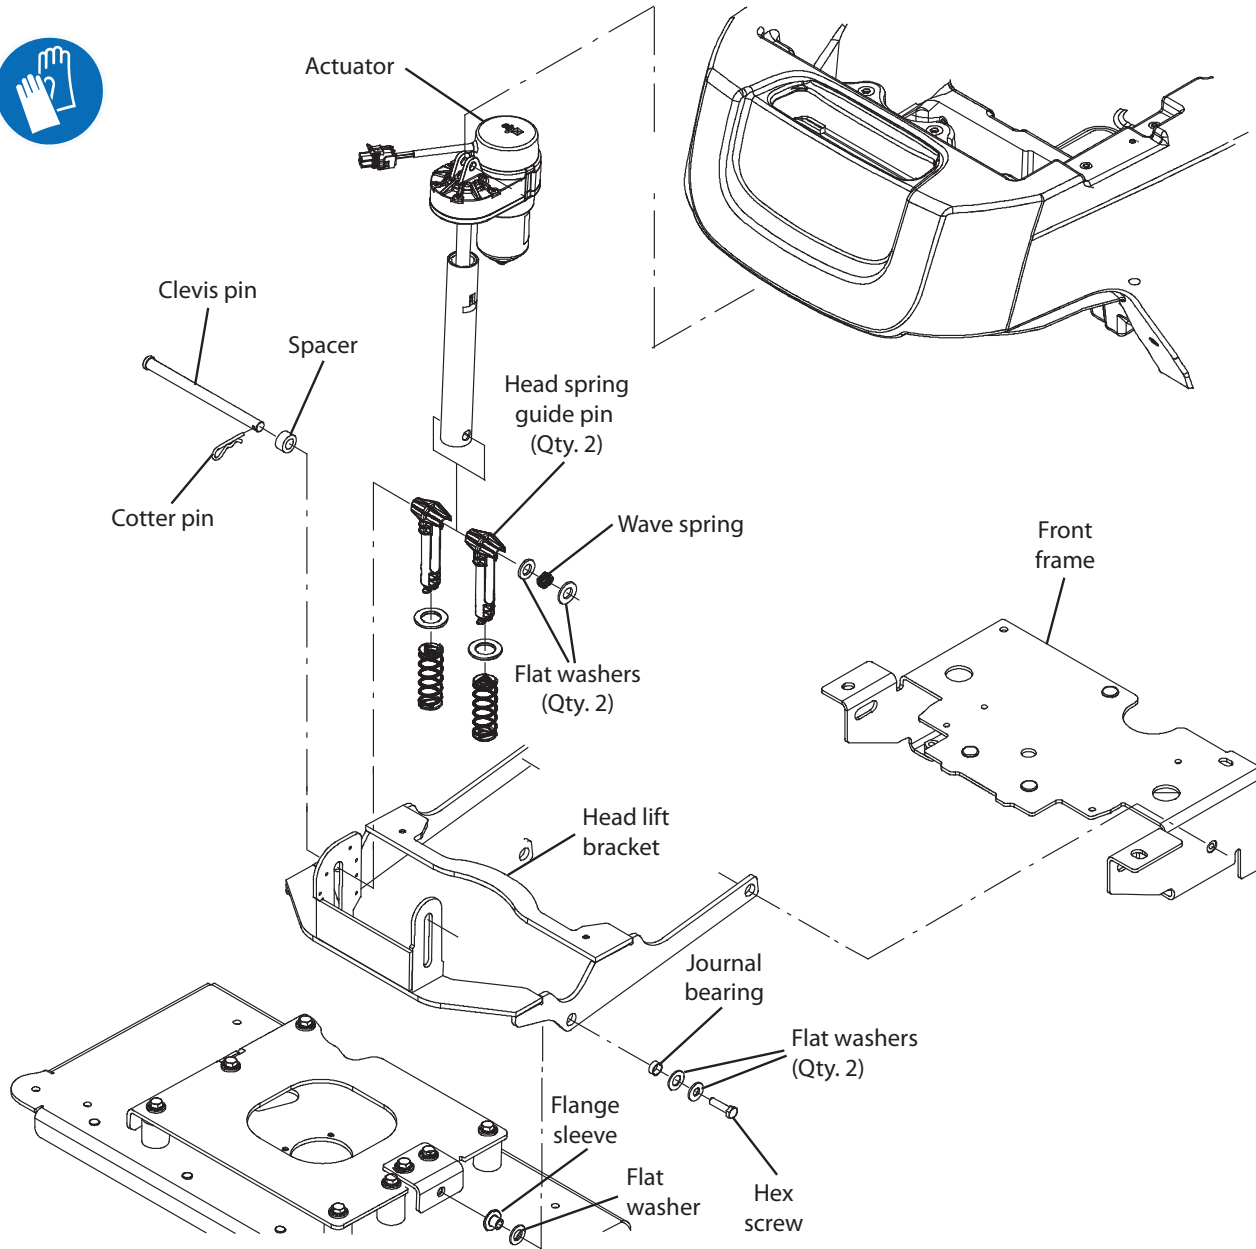

1. Completely empty both the solution tank and the recovery tank.

4. Remove the front scrub head cover from the machine.

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

2. Turn the key to the OFF position and remove the key.

3. Disconnect the battery cable from the machine.


FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.



5. Cut the cable ties from the main wire harness / brush motor connection and disconnect the main wire harness from the brush motors.
6. Disconnect all solution supply hoses from the scrub head.
7. Remove the cotter pin and clevis pin securing the actuator to the head suspension spring bracket.



8. Remove the hex screws and flat washers securing the head lift bracket to the scrub head.

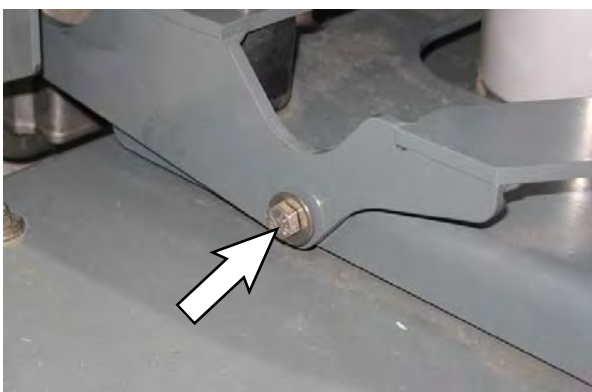

9. Reconnect the battery cable to the machine.
10. Turn on the machine, allow the scrub head to completely raise, and turn off the machine.
11. Disconnect the battery cable from the machine.
12. Remove the batteries from the machine.

FOR SAFETY: When servicing machine, avoid contact with battery acid, keep all metal objects off batteries, and use a hoist or adequate assistance when lifting batteries.

13. Lift the machine from the scrub head.
14. Proceed to REMOVE / INSTALL THE LOWER ORBITAL HEAD ISOLATORS if replacing the lower isolators.
15. Reinstall the removed scrub head / install the new scrub head onto the machine in the reverse order of removal.

REMOVING / INSTALLING THE ORBITAL SCRUB HEAD MOTOR CARBON BRUSHES


OR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.
3. Remove the front scrub head cover from the machine.
4. Remove the cap from the motor.



5. Remove the pan screw and spring clip securing the carbon inside the motor and carefully pull the carbon brush assembly from the brush motor.

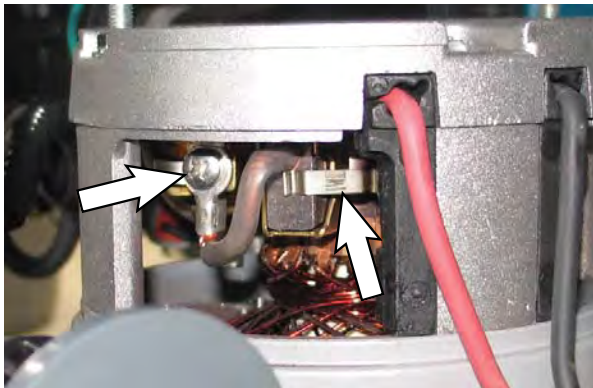


6. Use compressed air to clean any dust from inside the motor.
7. Repeat previous steps to remove the carbon brush located on the other side of the disk brush motor.

NOTE: Carbon brushes should be replaced as sets.

8. Reinstall the removed carbon brushes / install the new carbon brushes into the disk brush motor in the reverse order of removal.


REMOVE / INSTALL THE LOWER ORBITAL HEAD ISOLATORS

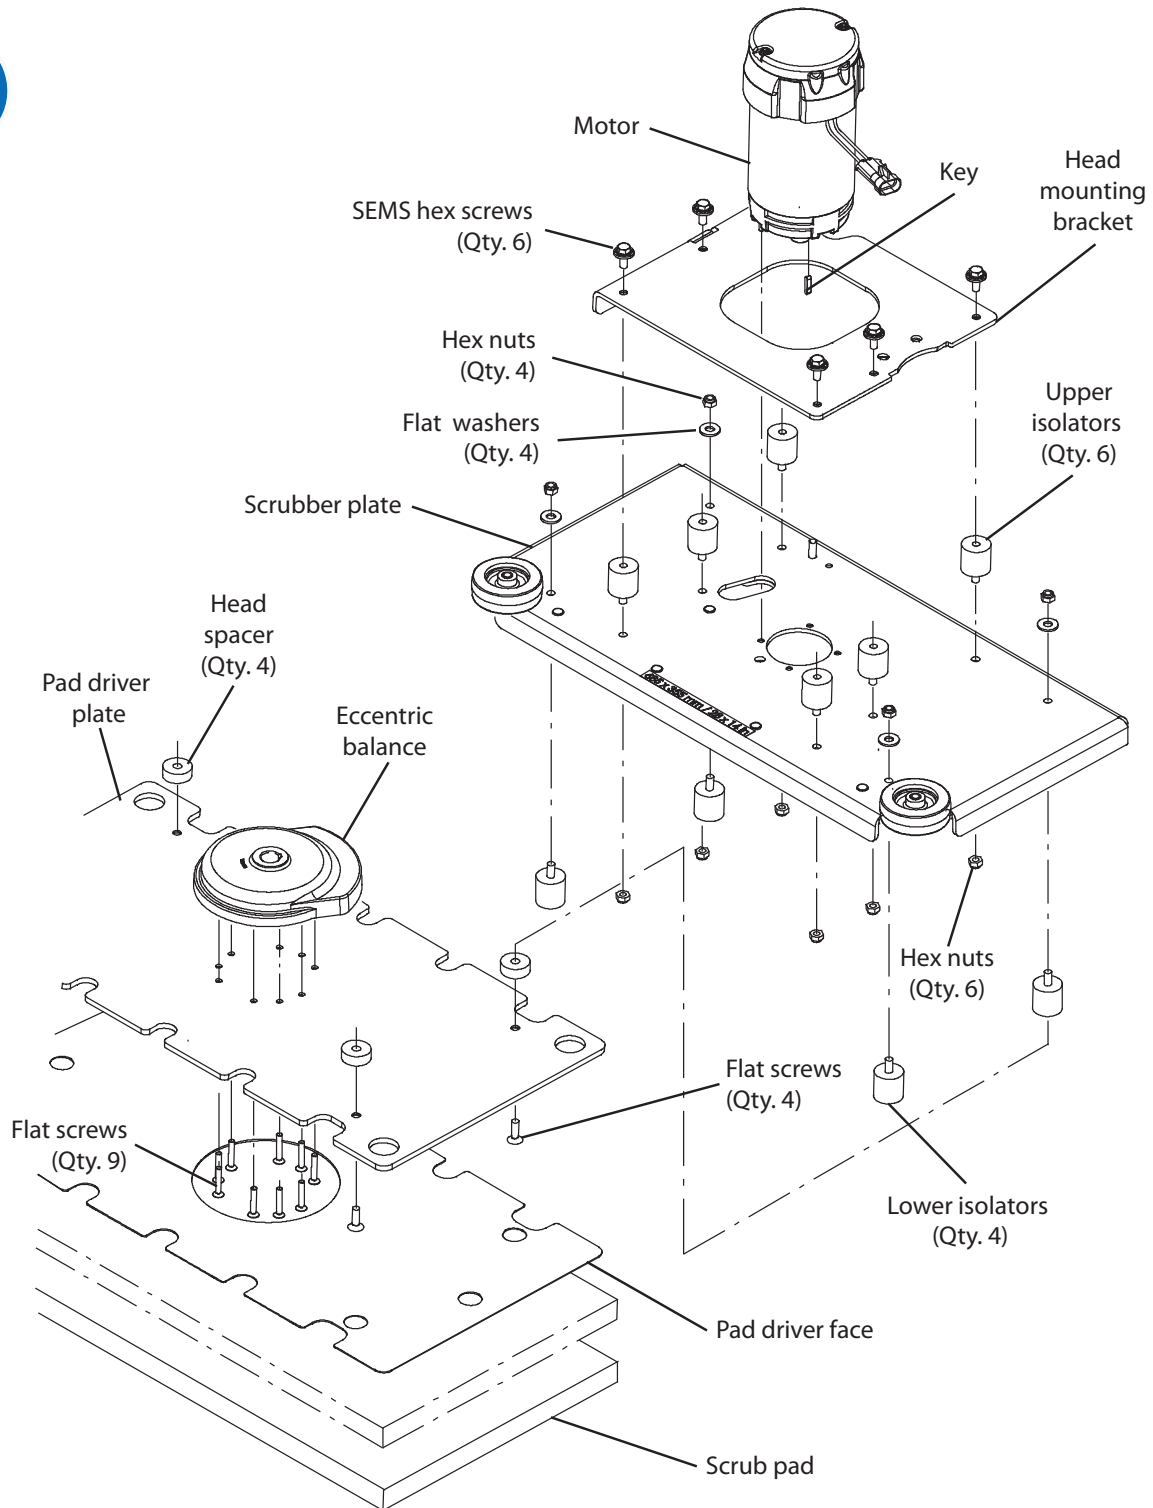

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

1. Remove the orbital scrub head assembly from the machine. See *REMOVE / INSTALL THE ORBITAL SCRUB HEAD ASSEMBLY* in this section of the *SERVICE MANUAL*.
2. Place the scrub head on a work bench.
3. Loosen the nyloc nuts securing the lower isolators to the orbital scrub head assembly.
4. Turn the orbital scrub head assembly upside down and remove the pads. Set the pads aside.
5. Remove hardware securing the lower plate to the lower isolators.
6. Loosen the set screw securing the concentric motor weight to the motor shaft.
7. Remove the lower plate and the lower isolators.
8. Install the lower orbital head isolators in the reverse order in which they were removed.


REMOVING / INSTALLING THE VACUUM FAN

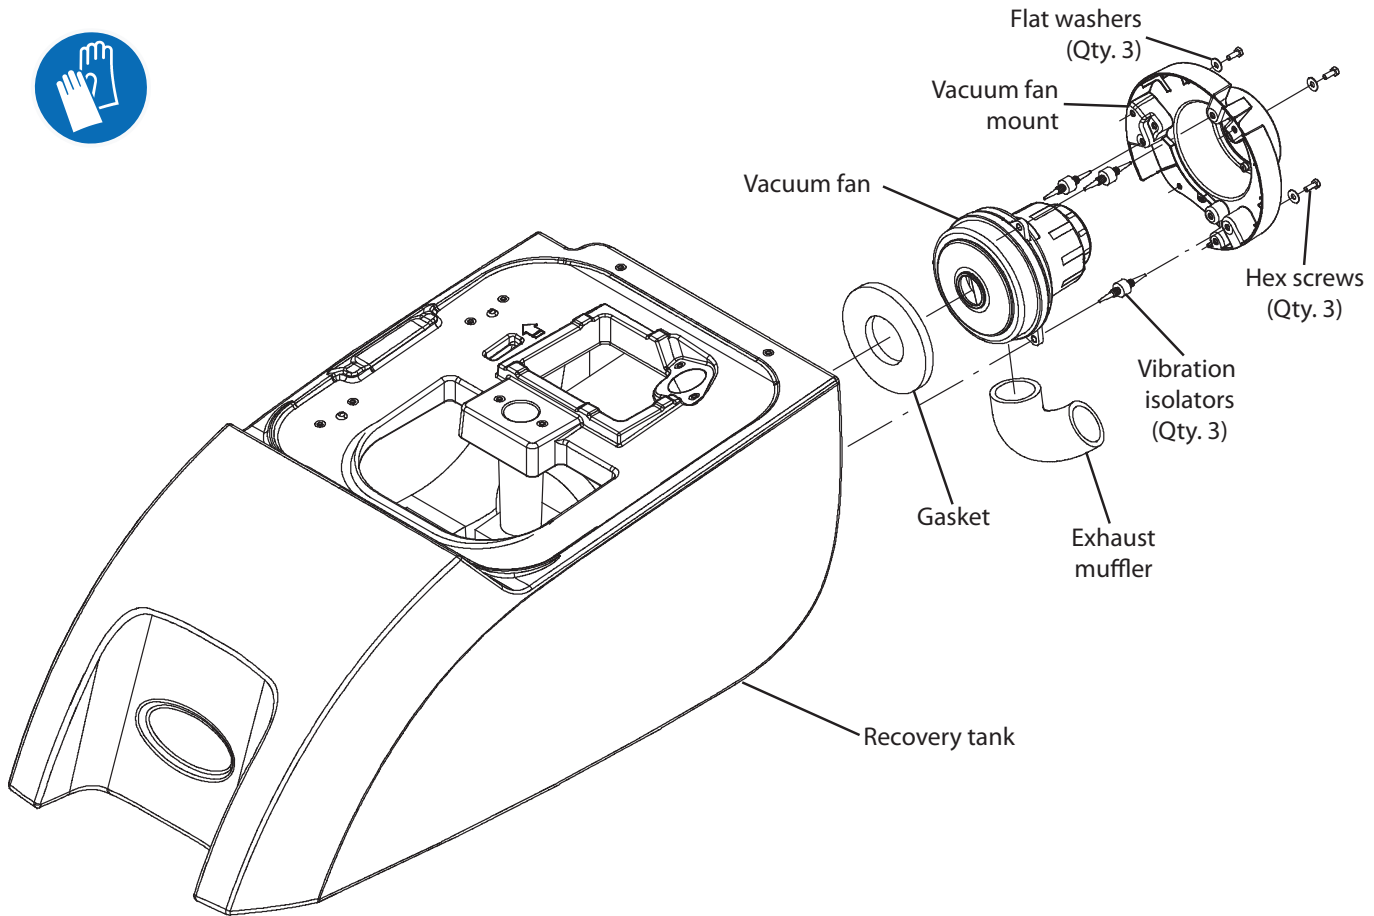

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the recovery tank.
2. Turn the key to the OFF position.
3. Disconnect the battery cable from the machine.
4. Lift the recovery tank completely open.
5. Cut the zip tie securing the main wire connections to the vacuum fan and disconnect the main wire harness from the vacuum fan.

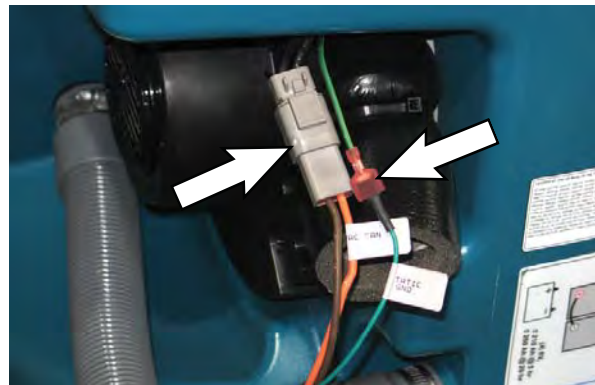

6. Remove hardware securing the vacuum fan to the machine.



7. Remove the vacuum fan assembly from the machine.



8. Cut the cable tie securing the vacuum fan / exhaust muffler to the vacuum fan mount.



9. Separate the vacuum fan from the vacuum fan mount bracket.
10. Install the new vacuum fan onto the mount bracket. Be sure the vibration isolators are completely inserted into the vacuum fan.



11. Install new vacuum fan assembly / reinstall the removed vacuum fan assembly in the reverse order of removal.

REMOVING / REPLACING THE VACUUM FAN CARBON BRUSHES

1. Remove the vacuum fan from the machine. See REMOVING / INSTALLING THE VACUUM FAN in this section manual.
2. Remove hardware securing the vacuum fan cover assembly to the motor.



- Loosen the carbon brush mounting hardware.



- Lift up to release and remove carbon brushes.




NOTE: Carbon brushes should be replaced as sets.

INSTALLING CARBON BRUSHES


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, set parking brake, and remove key.

- Inspect carbon brushes. Replace carbon brushes if they are stuck or are less than 10 mm (0.375 in) in length.

NOTE: Carbon brushes should be replaced as sets.

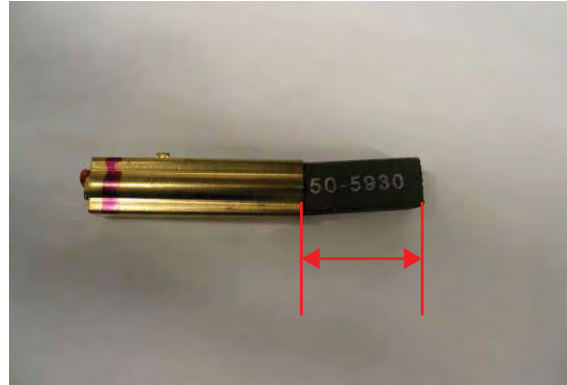


- Use a stone to clean the commutator and then use compressed air to clean any dust from inside the motor.

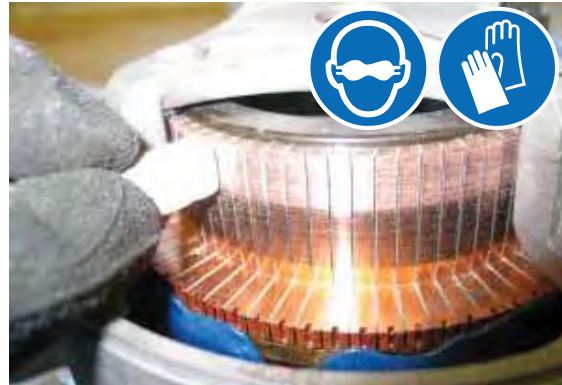

- Reinstall the vacuum fan onto the machine. See REMOVING / INSTALLING THE VACUUM FAN in this section of manual.

REMOVING / INSTALLING THE WATER SOLENOID VALVE

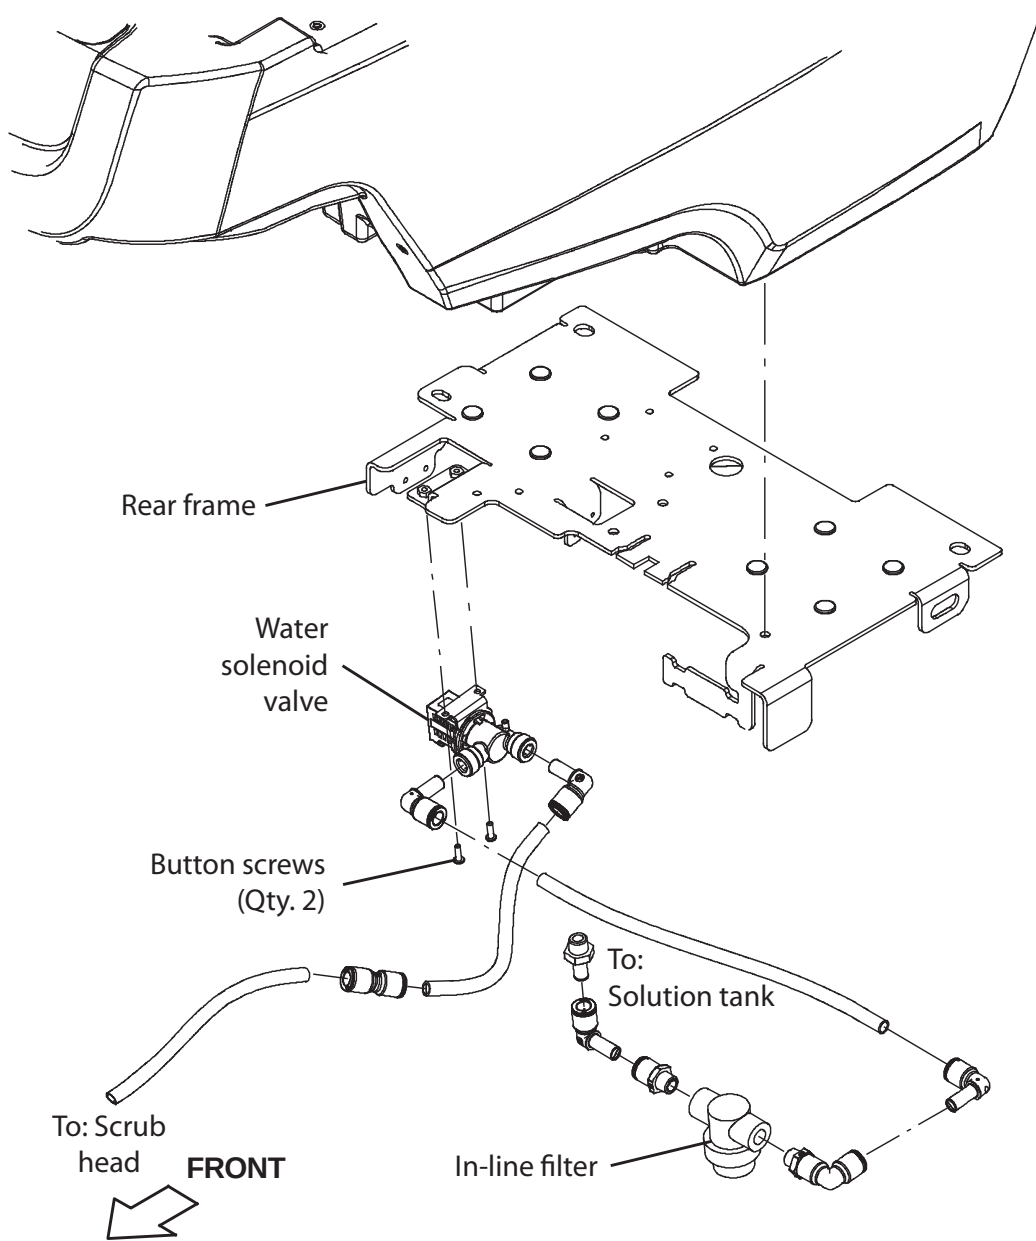

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain both the recovery tank and the solution tank.
2. Turn the key to the OFF position.

3. Disconnect the battery cable from the machine.

4. Remove the batteries from the machine and set the batteries aside.


FOR SAFETY: When servicing machine, avoid contact with battery acid, keep all metal objects off batteries, and use a hoist or adequate assistance when lifting batteries.

5. Remove the rear squeegee assembly from the machine. Set the rear squeegee assembly aside and hardware aside.


6. Position a protective blanket next to the side of the machine that will be tipped onto the floor.

NOTE: Do Not allow the machine to drop when tipping it onto the protective blanket. The scrub head and other components could be damaged if machine is allowed to drop. If necessary, remove the scrub head from the machine before tipping the machine onto its side.

7. Carefully tip the machine onto the protective blanket.
8. Disconnect hoses as necessary to access the transaxle assembly.
9. Disconnect all hoses from the water solenoid valve.

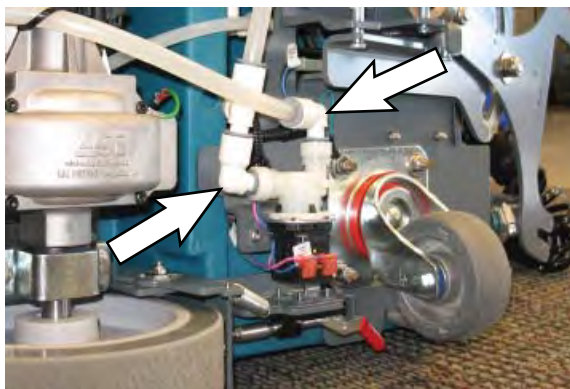

10. Disconnect the main wire harness from the water solenoid valve.

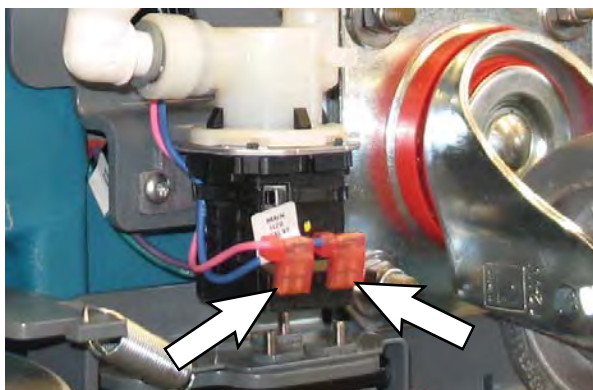

11. Remove the water solenoid valve from the machine.
12. Reinstall the interface module / install the new water solenoid valve in reverse order of disassembly.

CONNECTING HOSES TO PTC (PUSH-TO-CONNECT) FITTINGS



1. Cut the tube square. The outer diameter of the tubing must be free of score marks, burrs, or sharp edges.



2. Insert tube into the fitting. The fitting will grip the hose before it seals.



3. Push into the tube stop. The stainless steel teeth inside the collet firmly hold the tube in position and the o-ring provides a permanent leak-proof seal.




4. Pull on the fitting to ensure the hose connection is secure.



5. Test the fitting / hose connections for leaks prior to leaving the site.

DISCONNECT HOSES FROM PTC (PUSH-TO-CONNECT) FITTINGS


1. Push the collet squarely in against face of fitting to release the hose from the fitting. Continue to hold the collet held in against the fitting and pull the hose from the fitting.

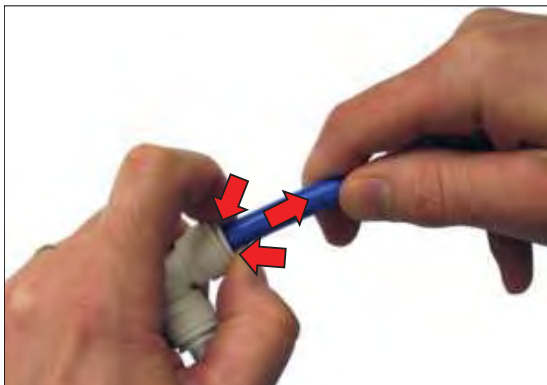

NOTE: Be sure there is no pressure in the system and the system is emptied of all solution before disconnecting hose(s) from the fitting.

CONTROL MODULES

REMOVING / INSTALLING THE CONTROL MODULE

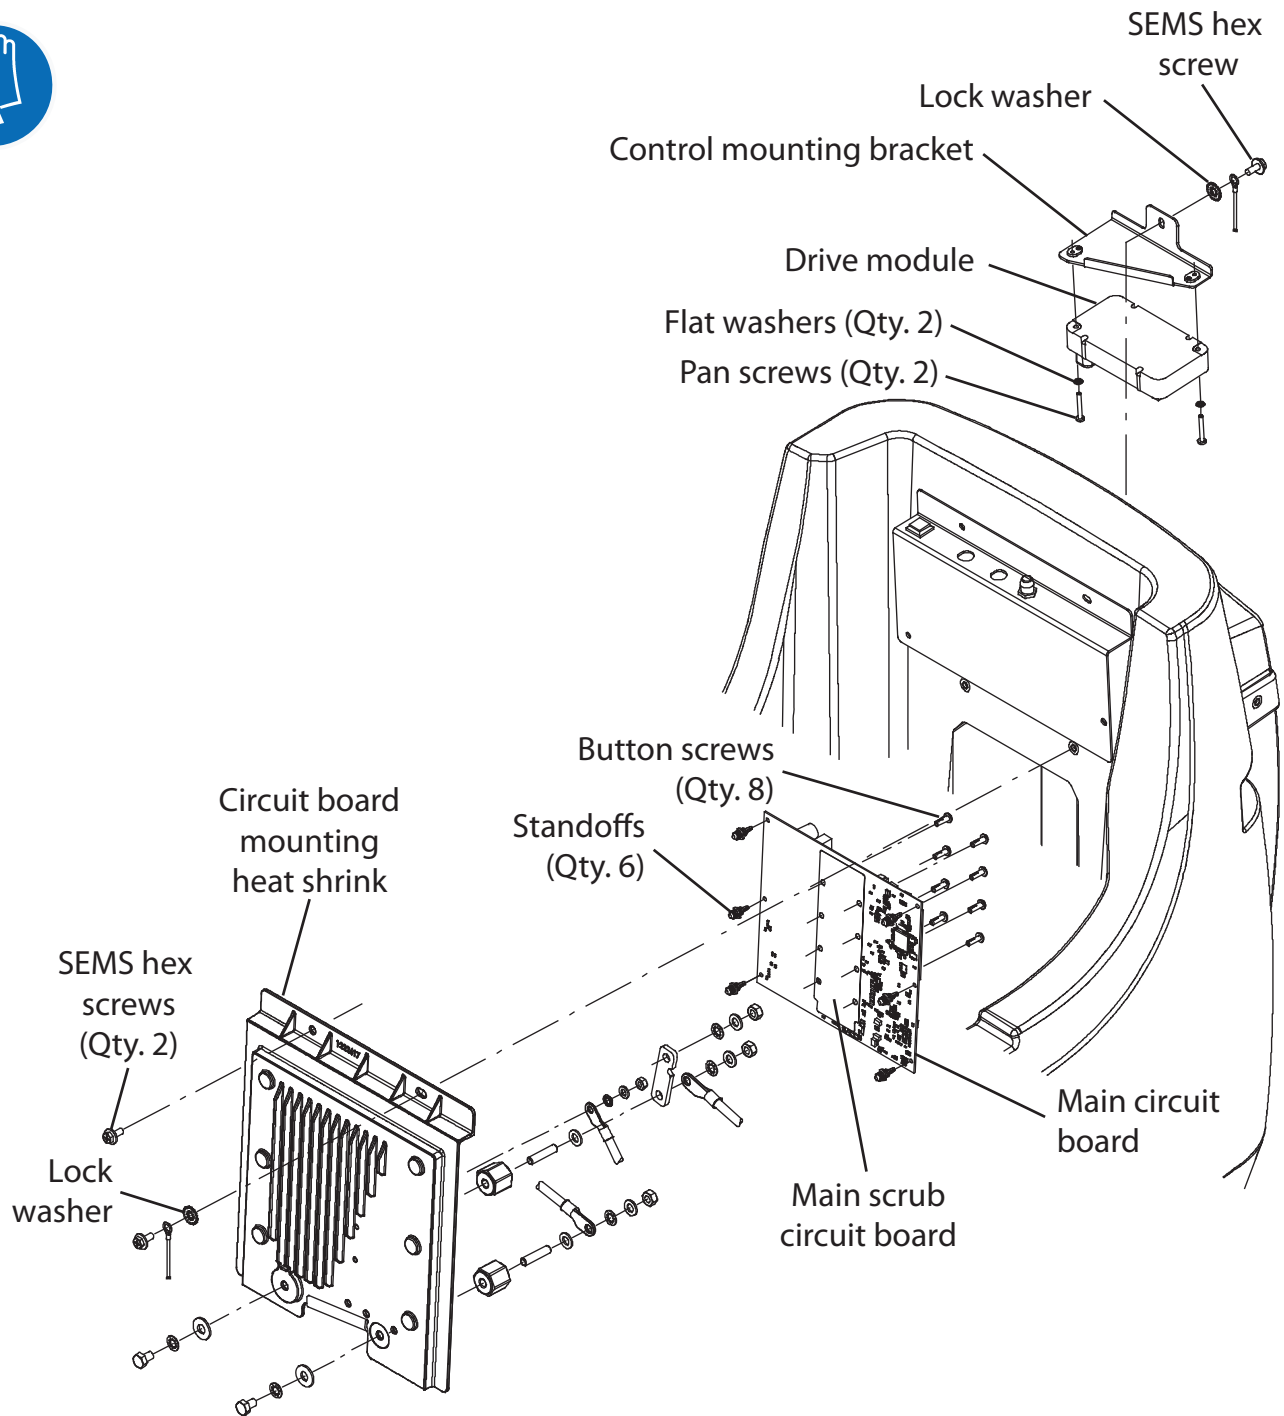

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the recovery tank.
2. Turn the key to the OFF position.
3. Disconnect the battery cable from the machine.

FOR SAFETY: When servicing machine, avoid contact with battery acid, keep all metal objects off batteries, and use a hoist or adequate assistance when lifting batteries.

4. Remove the hardware securing the circuit board mounting heat shrink to the machine.




NOTE: To avoid damaging electronic components, a static ground strap must be worn at all times while handling circuit boards / control modules. Attach the other end of the static ground strap to the machine chassis.

5. Carefully pull the circuit board mounting heat shrink / circuit board away from the machine.



6. Disconnect all cables connections from the circuit board.
7. Remove all hardware securing the circuit board to the circuit board mounting heat shrink and remove the circuit board from the circuit board mounting heat shrink.
8. Reinstall the control module / install the new control module in reverse order of disassembly.

REMOVING / INSTALLING THE DRIVE MODULE

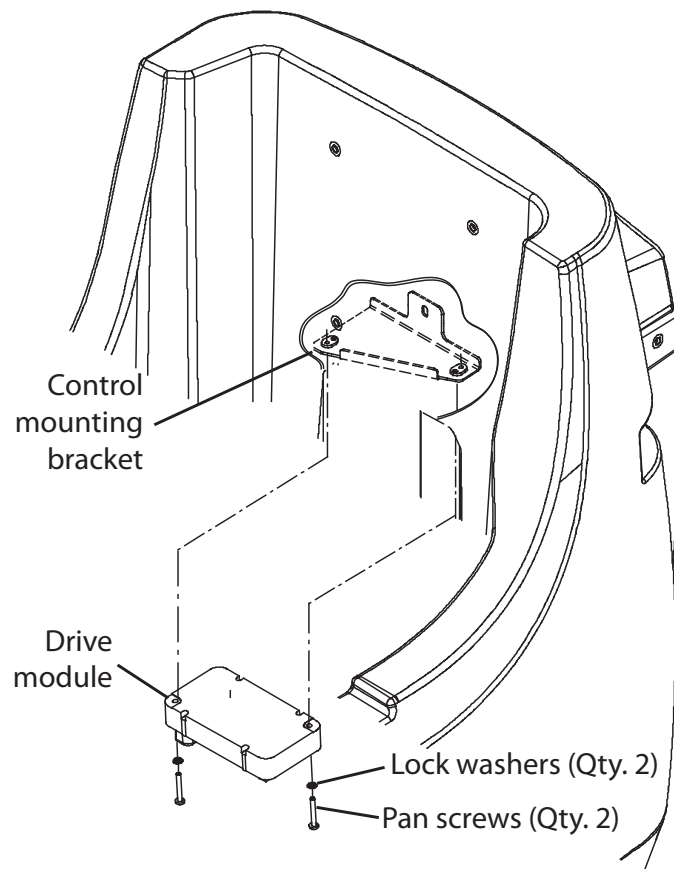

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the recovery tank.
1. Turn the key to the OFF position.
2. Disconnect the battery cables.

3. Remove the hardware securing the circuit board mounting heat shrink to the machine.




4. Carefully pull the circuit board mounting heat shrink / circuit board away from the machine.



NOTE: To avoid damaging electronic components, a static ground strap must be worn at all times while handling circuit boards / control modules. Attach the other end of the static ground strap to the machine chassis.

5. Disconnect the main wire harness from the drive module.
6. Remove the drive module from the machine.
7. Reinstall the drive module / install the new drive module in reverse order of disassembly.
8. If a new drive module was installed, the new drive module must be programmed for the machine onto which it was installed. See PROGRAMMING THE DRIVE MODULE in this section of the manual.

REMOVING / INSTALLING THE INTERFACE MODULE

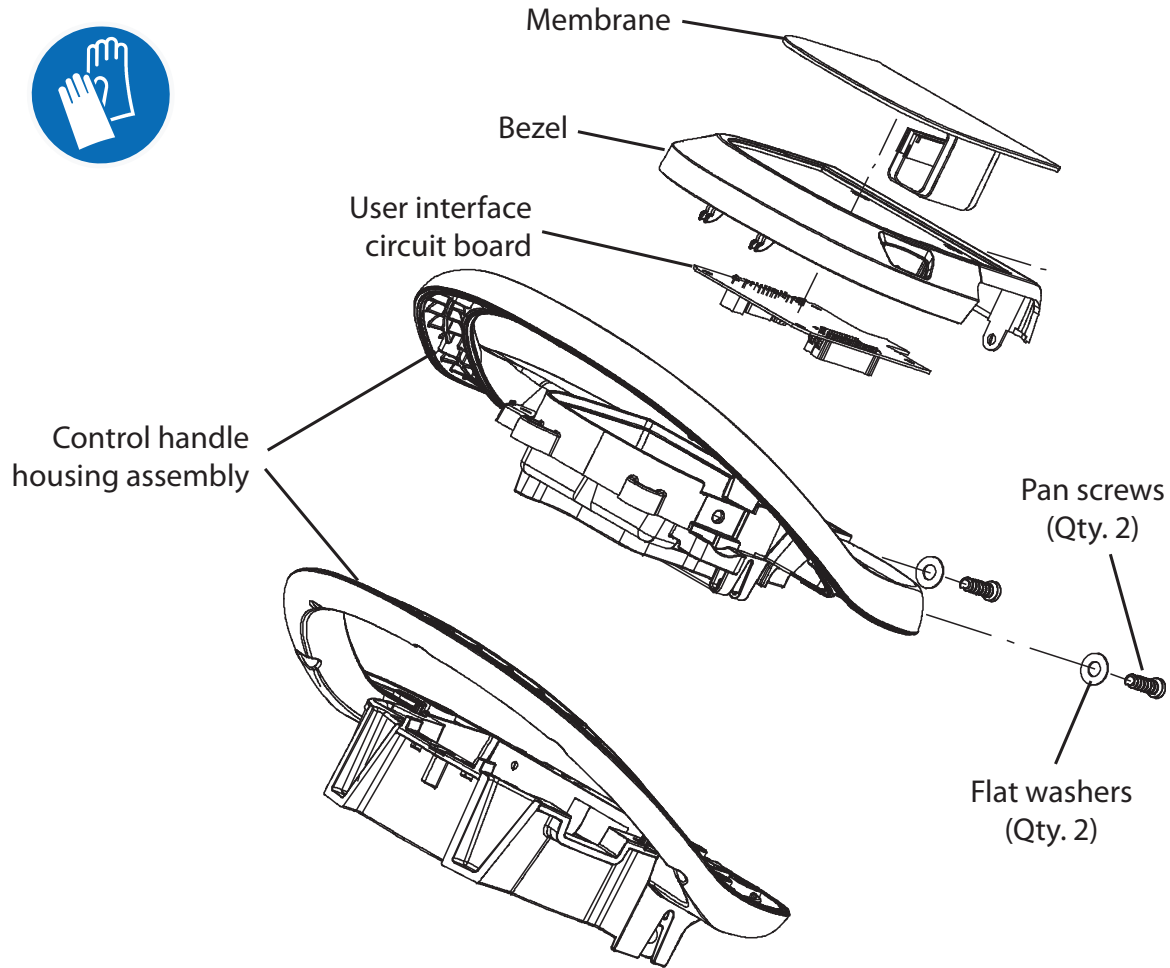


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.

NOTE: To avoid damaging electronic components, a static ground strap must be worn at all times while handling circuit boards / control modules. Attach the other end of the static ground strap to the machine chassis.

3. Remove the pan screws securing the control column cover to the machine and carefully lower the rear access cover.

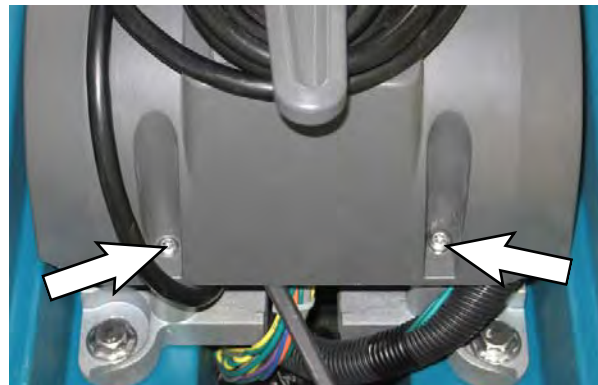

4. Remove the hardware securing the instrument panel to the console.




5. Lift up on the bottom of the panel and slide downward to remove.



6. Disconnect all electrical connections from the interface module.
7. Remove the interface module from the machine.
8. Reinstall the interface module / install the new interface module in reverse order of disassembly.
9. If a new interface module was installed, the new interface module must be programmed for the machine onto which it was installed. See PROGRAMMING A NEW INTERFACE MODULE in this section of the manual.


REMOVING / INSTALLING THE BAIL SWITCH, SPEED POTENTIOMETER, OR DIRECTIONAL SWITCH

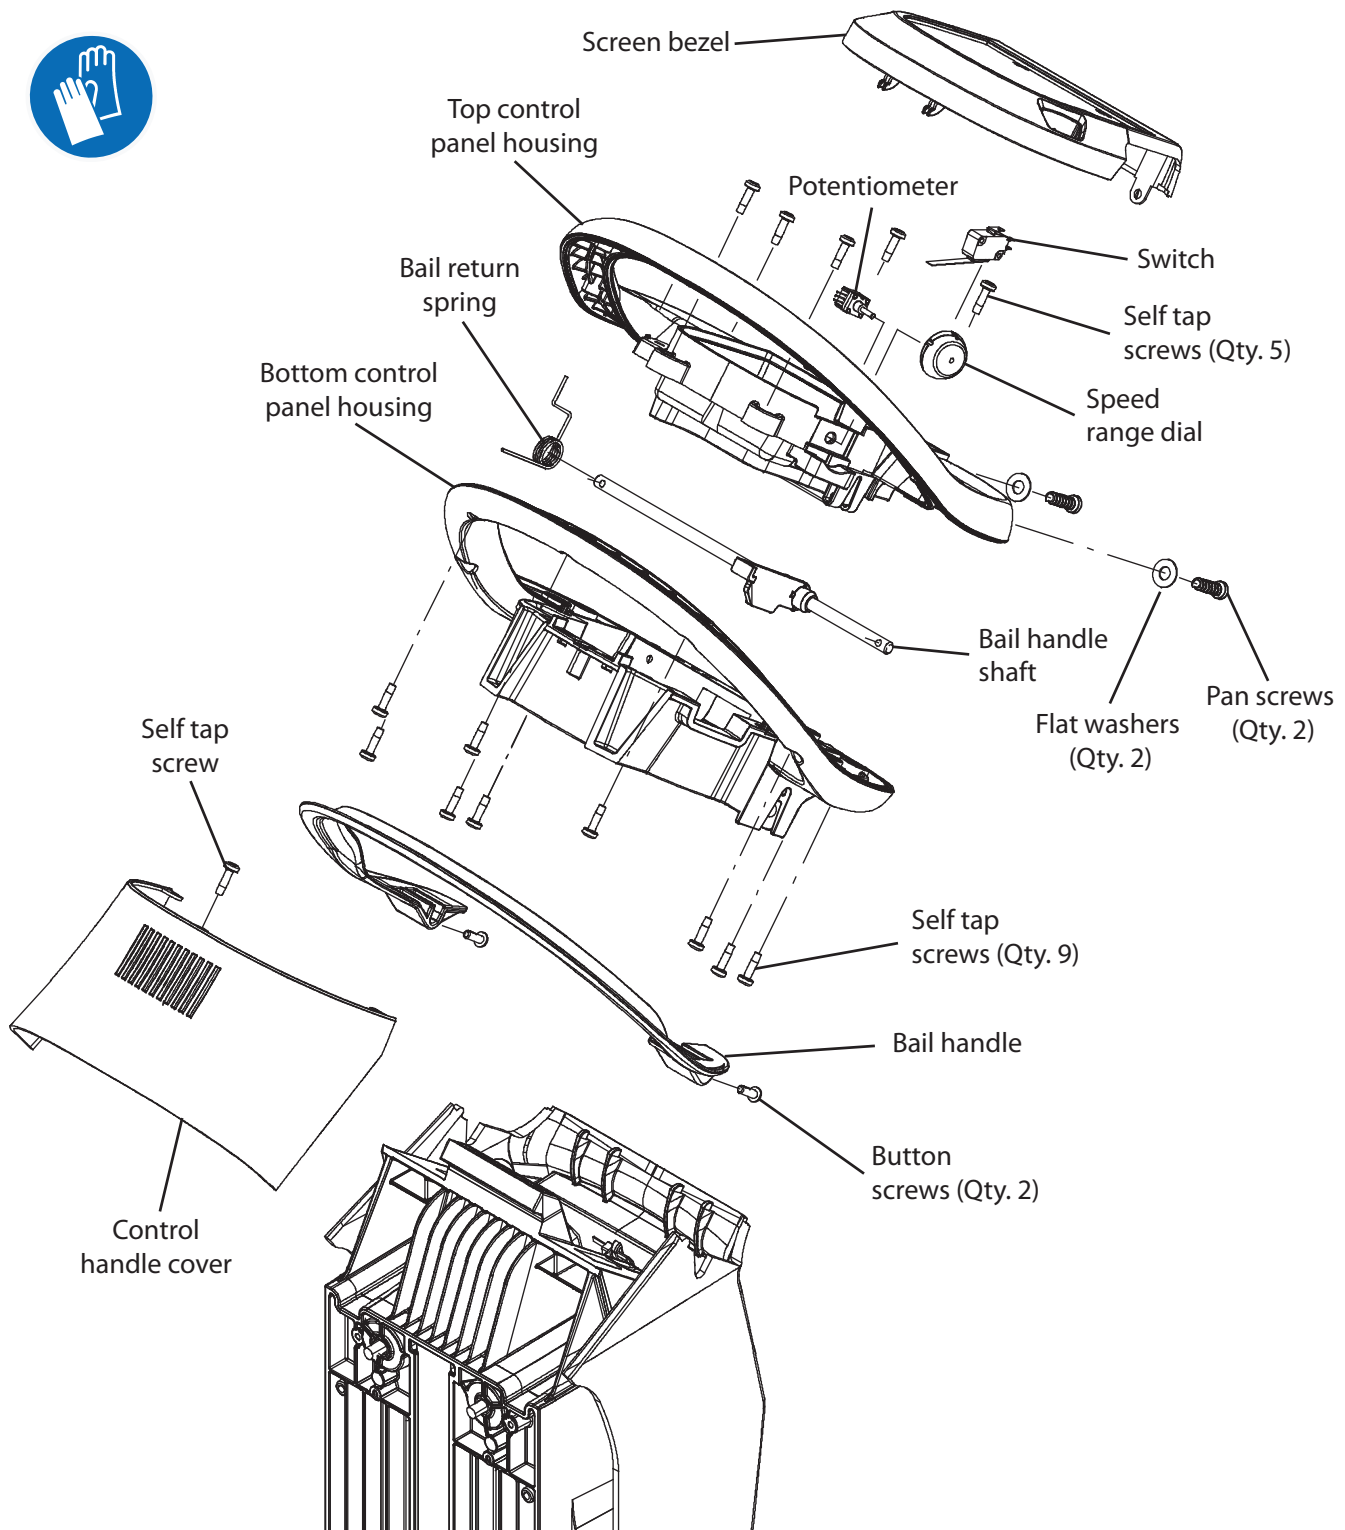

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.
3. Remove the pan screws securing the control column cover to the machine and carefully lower the control column cover.

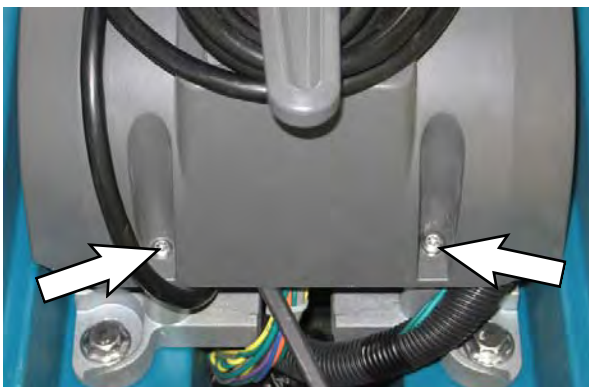

4. Remove the pan screws and flat washers securing the instrument panel to the console.



5. Carefully separate the touch panel from the console.
6. Disconnect all wire harness / electrical connections from the instrument panel. Set the instrument panel aside.

7. Remove the cover from the console.



8. Remove the pan screws securing the operator console to the machine.



9. Lift up and forward to remove the operator console from the machine.



12. Remove the self tap screws from the front of the operator console.



10. Remove the speed range dial and set aside. If replacing the potentiometer or directional switch, remove the nut securing the potentiometer or directional switch.



13. Remove the self tap screws from rear of the operator console and separate the console assembly.



11. Remove the bail handle from the bottom control housing.




14. Release the bail return spring, rotate the bail handle shaft toward the bottom of the operator console, and slide the bail handle shaft to the side to remove.



15. Remove the bail switch.
16. Reinstall the bail switch, speed potentiometer, and / or directional switch in the reverse order of disassembly.

REMOVING / INSTALLING THE ON-BOARD BATTERY CHARGER

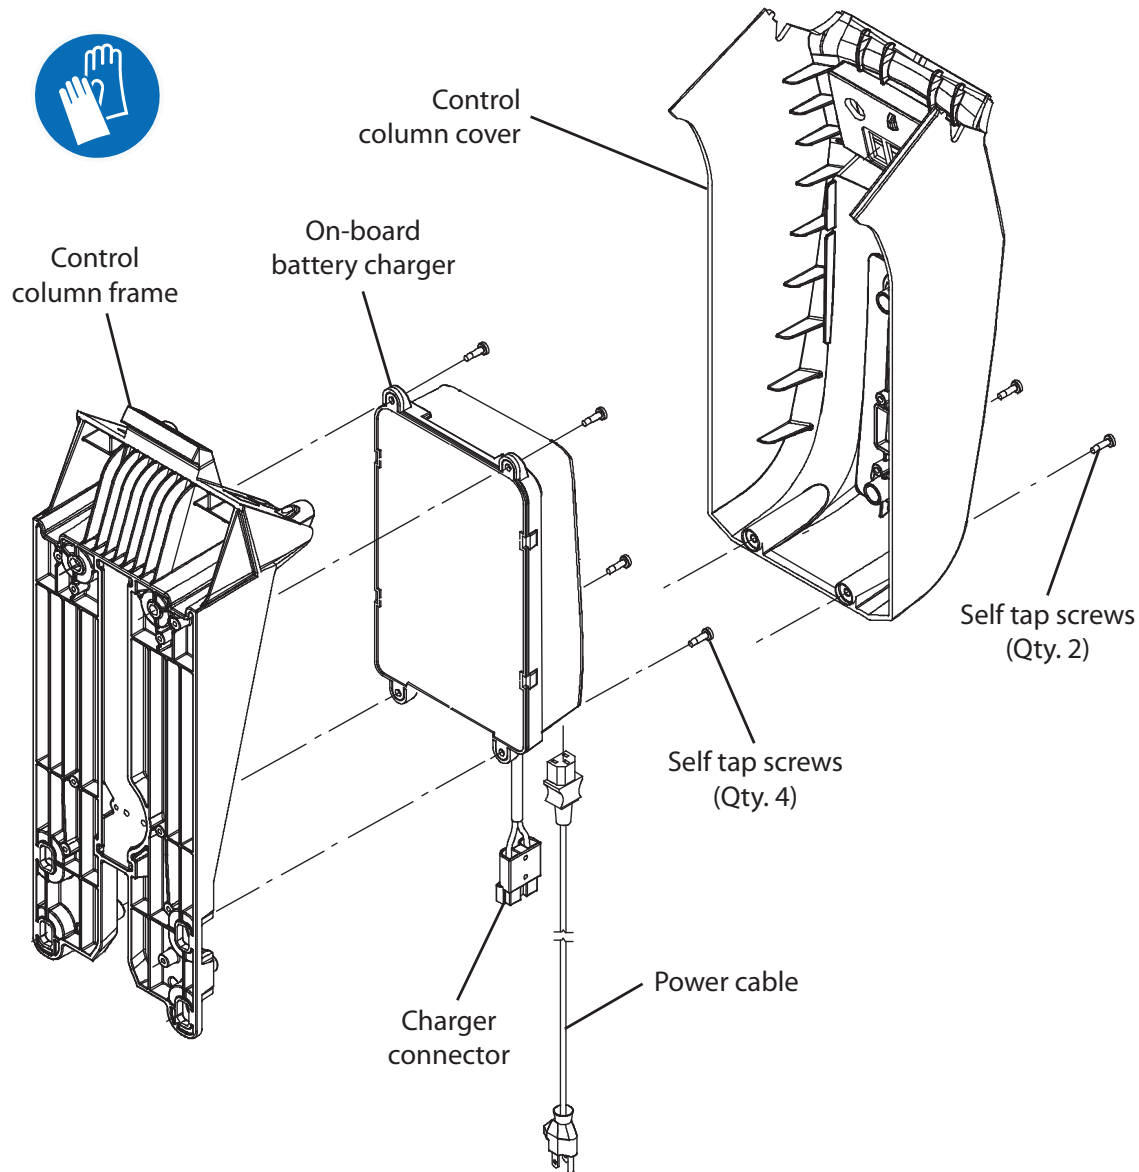


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.


3. Remove the self tap pan screws securing the control column cover to the machine and carefully lower the rear access cover.

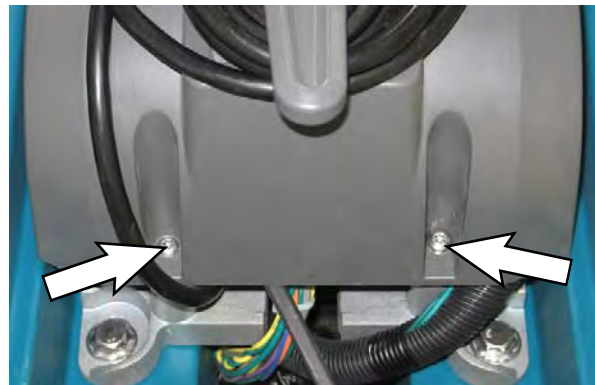

4. Disconnect all cables from the on-board battery charger.



5. Remove the on-board battery charger from the machine.

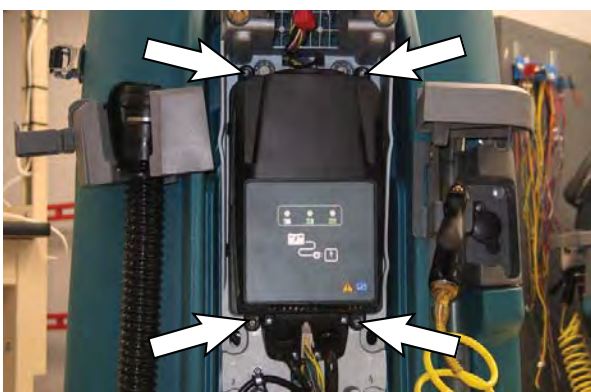

6. Reinstall the on-board battery / install the new on-board battery in reverse order of disassembly.


NOTE: The on-board charger can be programmed for multiple battery configurations. This configuration data is stored in the interface module and will automatically configure a replacement battery charger once installed and following a power-up cycle. Reprogramming is required if the interface module has been replaced, or if a different type of battery is used (other than factory-installed equipment). (See SERVICE DIAGNOSTICS TOOL section in this manual)

Models equipped with the PRO-Panel LCD Touch Panel can be configured through the touch panel. All other models must be configured through separate configuration software via a mini-USB programming port on the back of the operator console. (See SERVICE DIAGNOSTICS TOOL in this section of the manual)


OPTIONS

ABW (AUTOMATIC BATTERY WATERING) SYSTEM MAINTENANCE

TROJAN® BATTERY OPTION

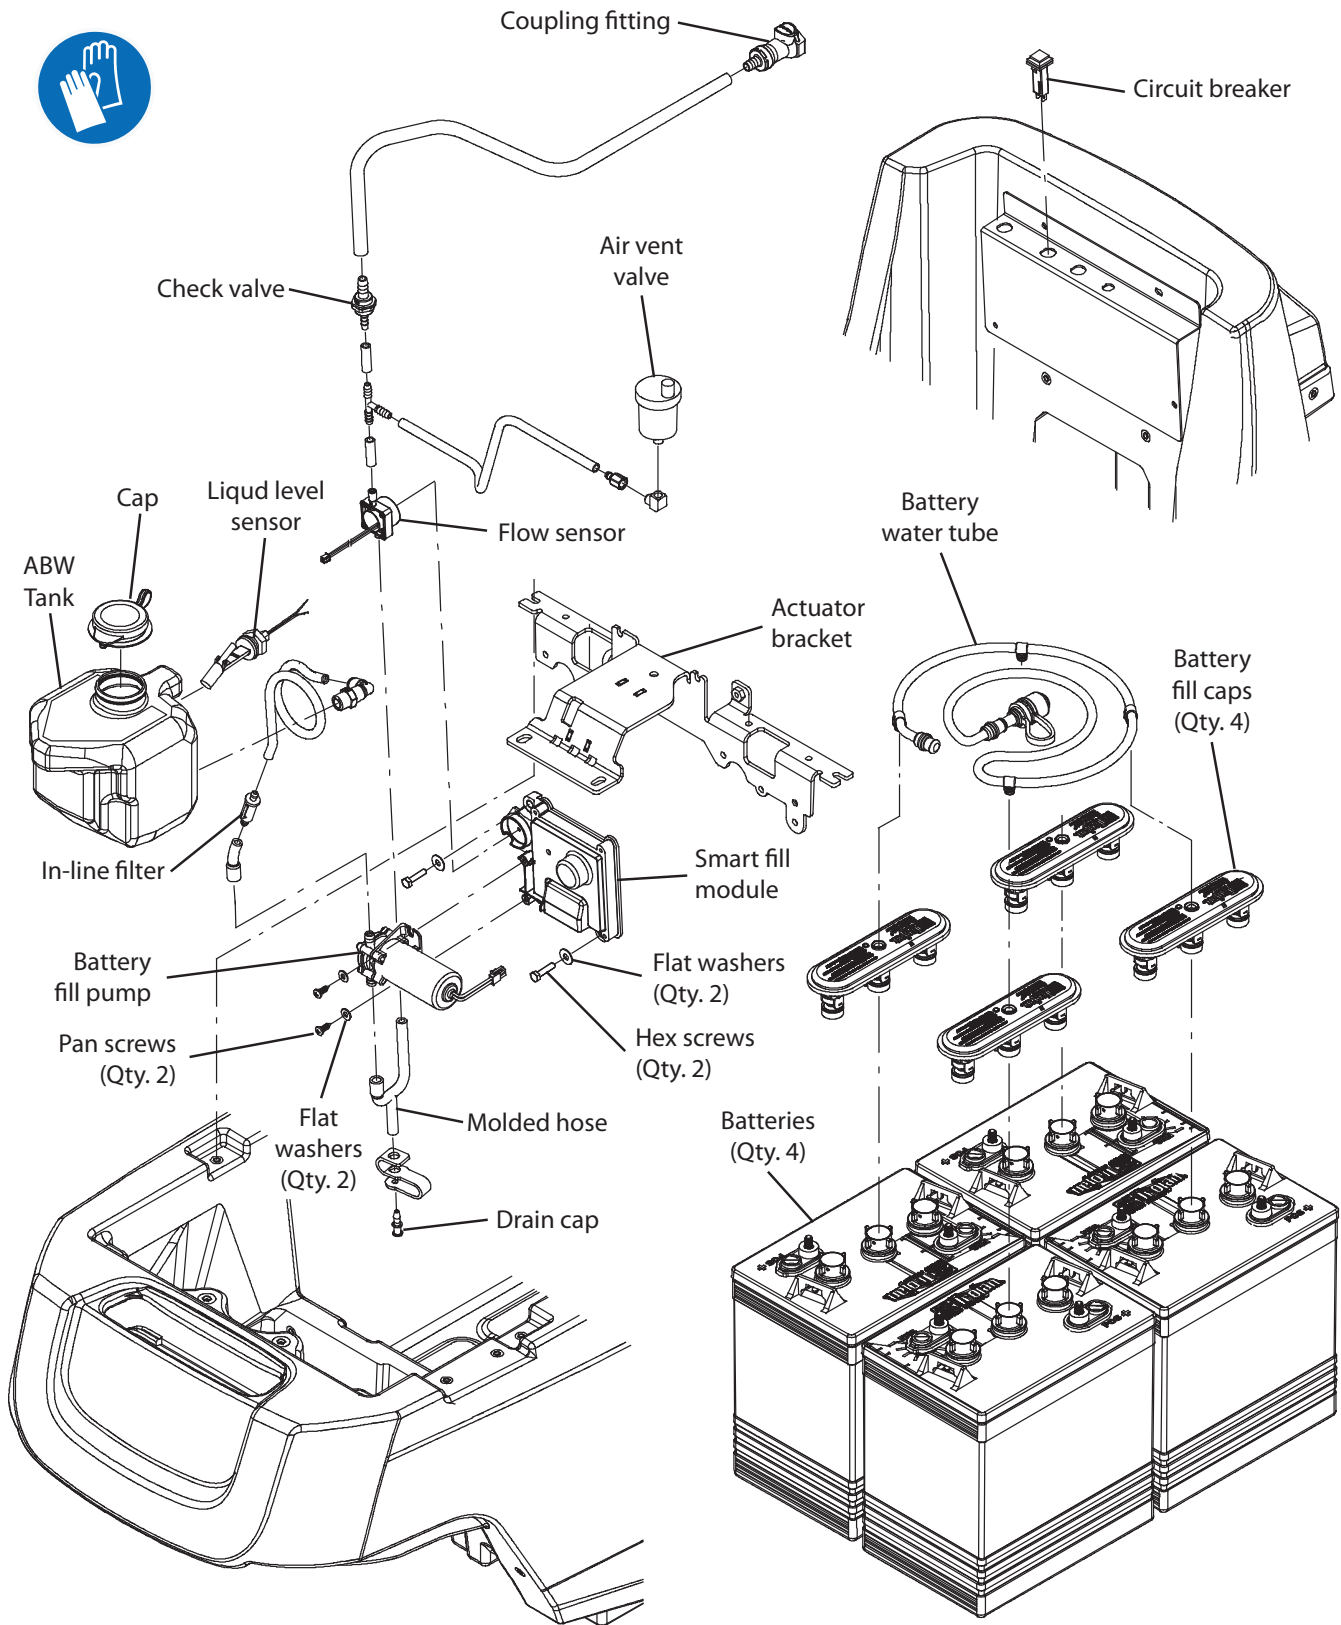

TAB BATTERY OPTION

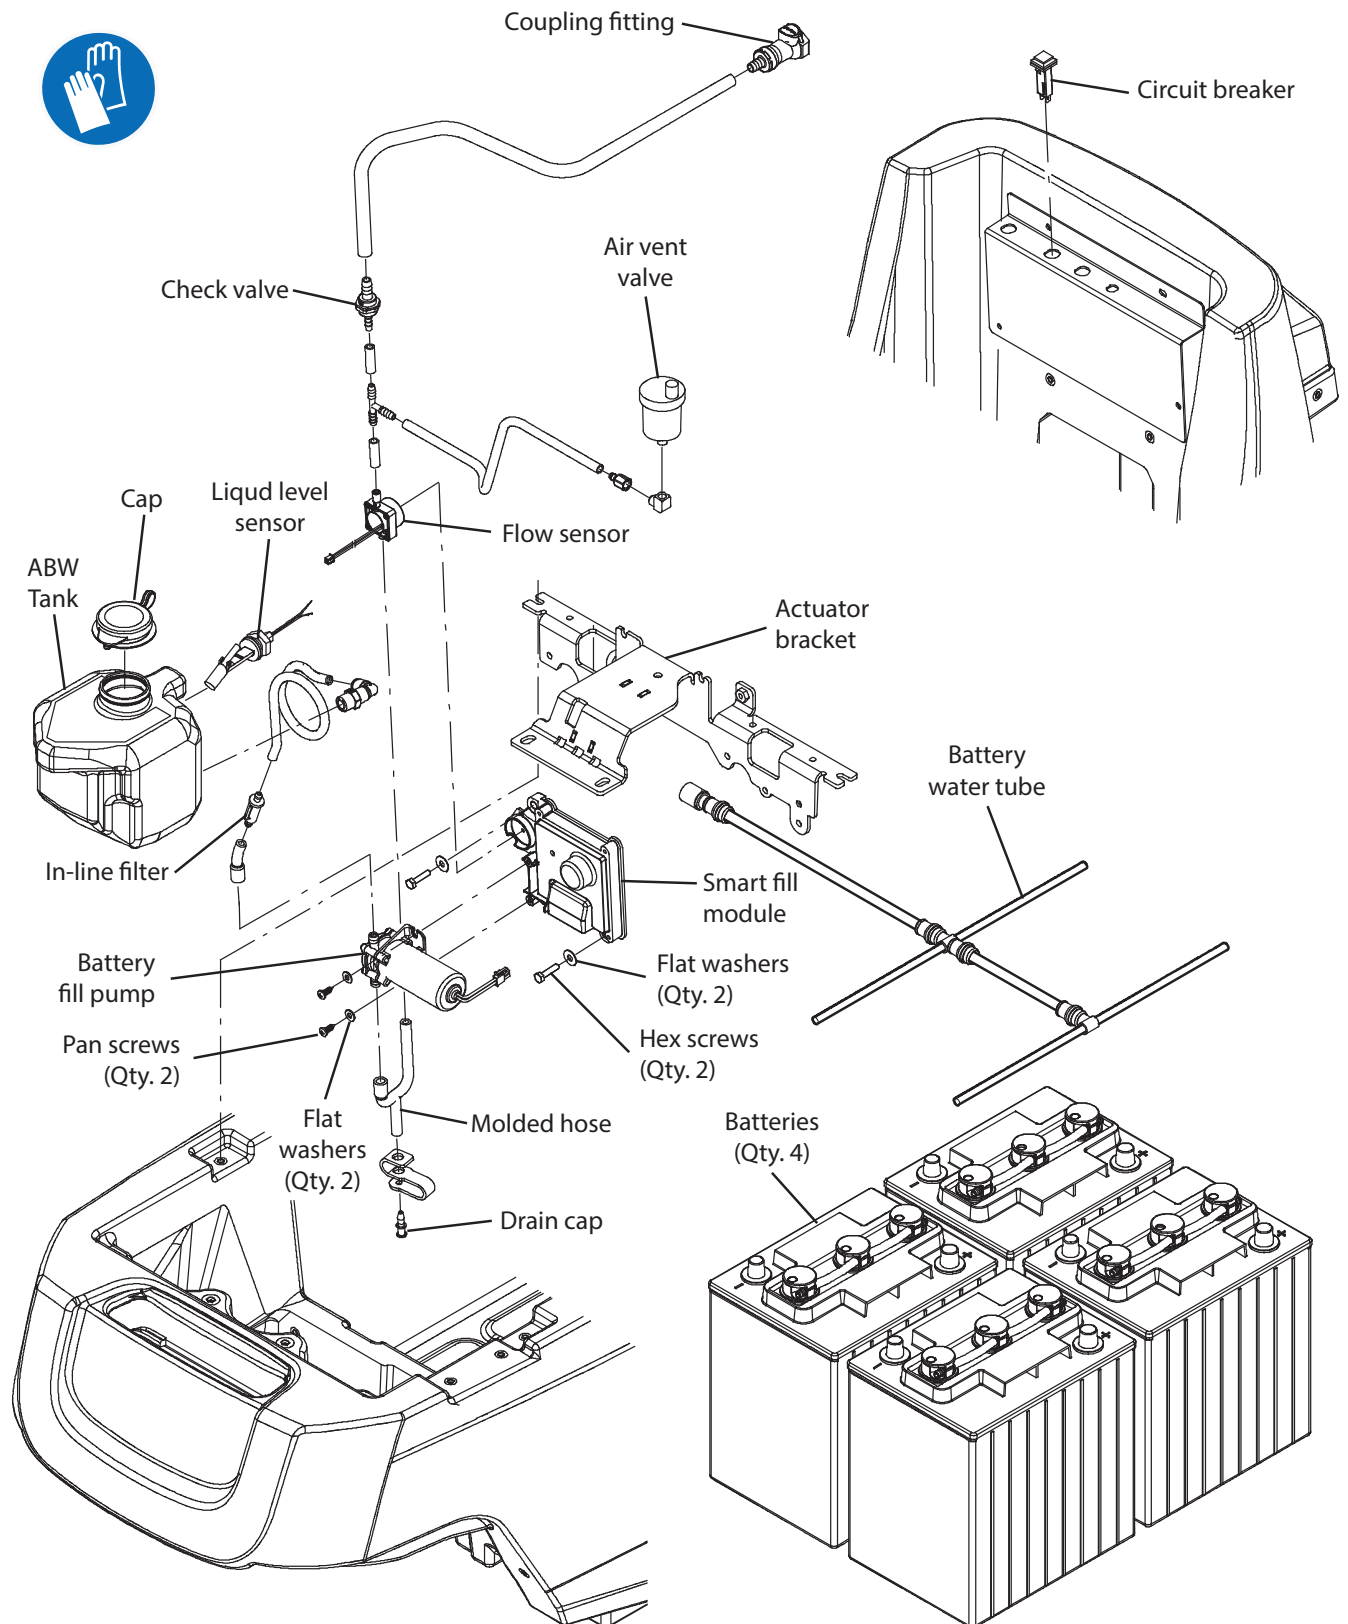

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

ABW PUMP NOT PRIMING (AIR IN THE SYSTEM)

1. Turn the key to the OFF position.
2. Disconnect the hoses at the quick disconnect connector.




3. Turn the key to the ON position.
4. Observe for water to begin pumping out from the hoses.
5. If water is pumping from the hoses, turn the key to the OFF position, reconnect the hoses, turn key to ON position, and observe panel for a fault code.


If there is no fault code, the machine is again ready for use.

If there is a fault code, proceed to the following steps to eliminate air from the ABW system.

6. Remove the drain cap from the molded hose to purge air from the system. Allow the water to drain until there is a steady stream. The drain cap is located behind the front scrub head cover and directly below the ABW tank.

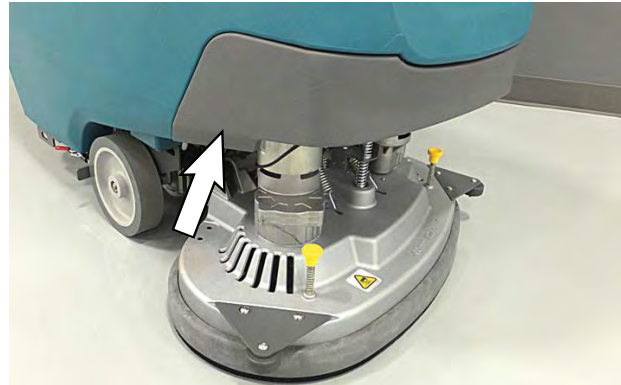

7. Reinstall the drain cap onto the molded hose.
8. Add distilled water to the battery watering system tank.

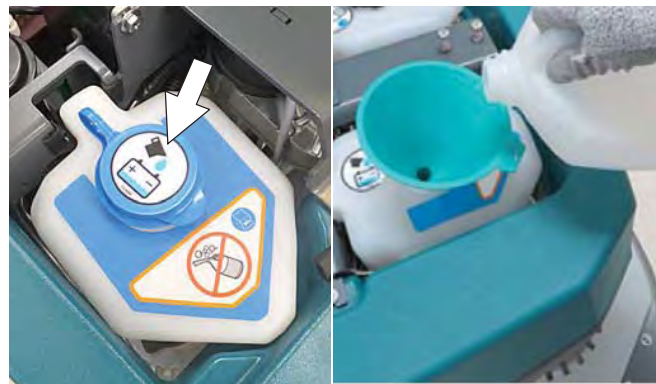


9. Verify pump is functioning and the fault is cleared.


NOTE: If necessary, can also perform freeze protection procedure to start over with an empty tank. See **FREEZE PROTECTION** in **MAINTENANCE** section of this manual.

ABW PUMP IS TIMING OUT (1 MINUTE)

1. Turn the key to the OFF position.
2. Check for water / electrolyte residue on top of batteries and in the battery tray.
3. Identify the source of the leaks. Check all ABW system hoses, connections, fittings, and battery caps for leaks / damage. Ensure battery caps are properly tightened.
7. Turn the key to the ON position.
8. Verify the ABW pump is functioning and the fault is cleared.

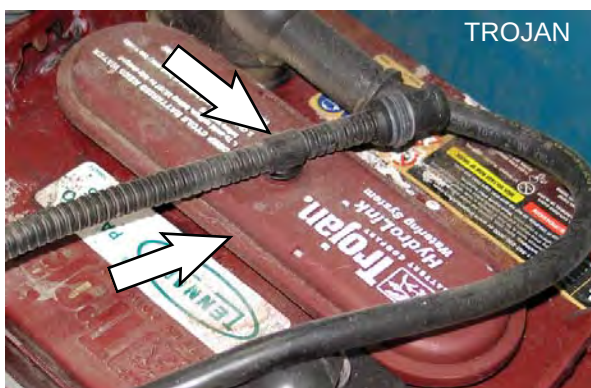

4. Replace damaged / worn fittings, hoses, and battery caps as necessary.
5. Clean all water / electrolyte from the tops of the batteries and from inside battery tray.
6. Add distilled water to the battery watering system tank.

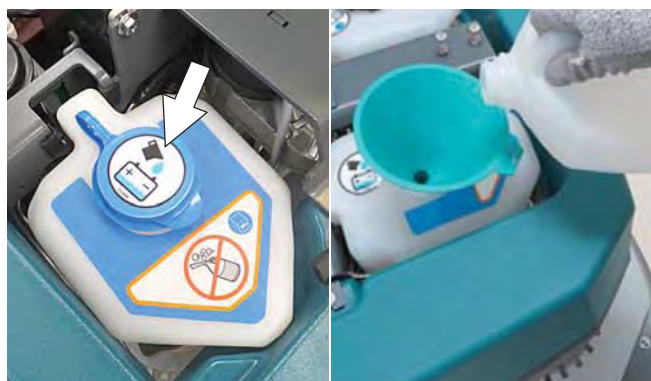


ABW OVERFILLS THE BATTERIES

1. Turn the key to the OFF position.
2. Inspect the tops of the batteries and battery tray for water / electrolyte residue.
3. Ensure all battery vent caps are snugly tightened.



4. Replace the vent cap if it still leaks after tightening.
5. Clean all water / electrolyte from the tops of the batteries and from inside battery tray.
6. Add distilled water to the battery watering system tank.

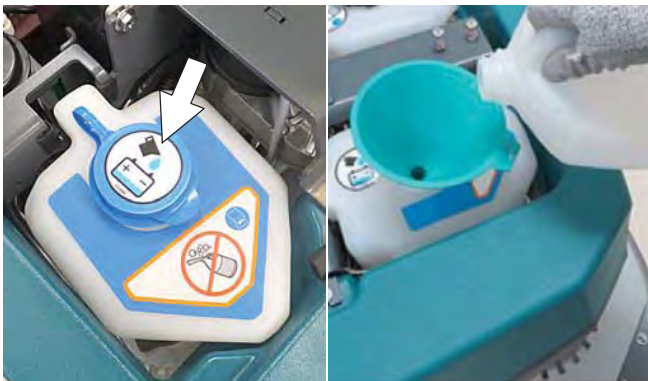

7. Turn the key to the ON position.
8. Verify ABW pump is functioning properly and the fault is cleared.

REPLACING THE ABW LIQUID LEVEL SENSOR

1. Turn the key to the OFF position.
2. Carefully lift the tank from the machine.



3. If necessary empty the solution from the tank.
4. Disconnect the main wire harness from the liquid level sensor.




5. Remove the liquid level sensor from the tank.




6. Reinstall the liquid level sensor in reverse order of disassembly.

7. Add distilled water to the battery watering system tank.

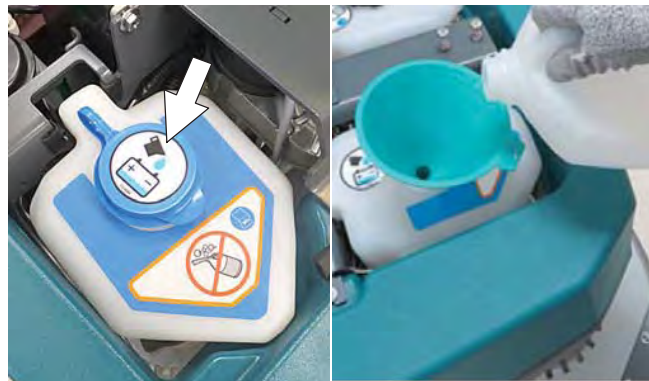

8. Turn the key to the ON position.
9. Verify the fault is cleared.

REMOVING / INSTALLING THE ec-H2O PUMP
(OPTION)

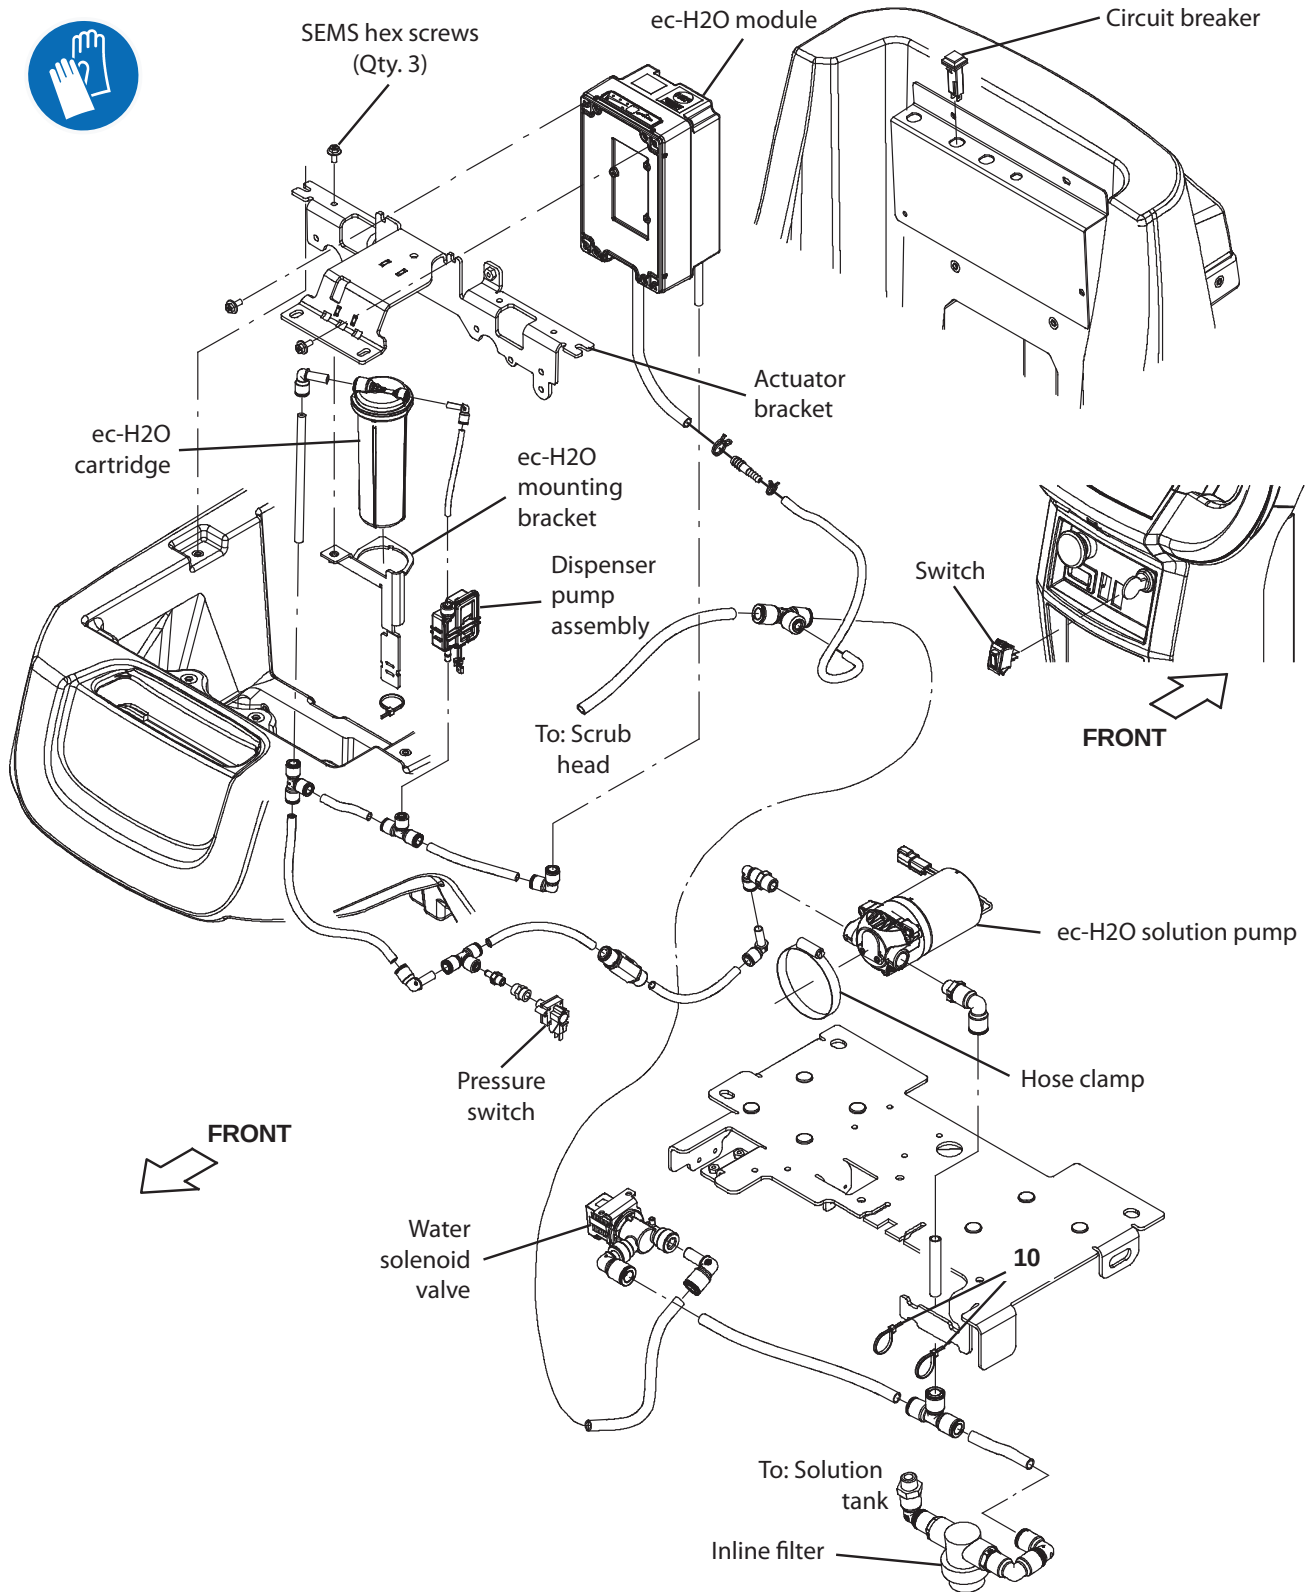

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the solution tank and the recovery tank.
2. Turn the key to the OFF position.
3. Disconnect the battery cable from the machine.
4. Remove the batteries from the machine.

FOR SAFETY: When servicing machine, avoid contact with battery acid, keep all metal objects off batteries, and use a hoist or adequate assistance when lifting batteries.

5. Remove the rear squeegee assembly from the machine.
6. Position a protective blanket next to the side of the machine that will be tipped onto the floor.
7. Carefully tip the machine onto the protective blanket.
8. Remove the hex screws securing the rear frame to the machine.




9. Carefully pull the rear frame from the machine.



10. Disconnect the main wire harness from the pump.
11. Disconnect all hoses from the pump.
12. Loosen the hose clamp and remove the pump from the rear frame.
13. Reinstall the pump in the reverse order of disassembly.

SE (SEVERE ENVIRONMENT) GROUP (OPTION)

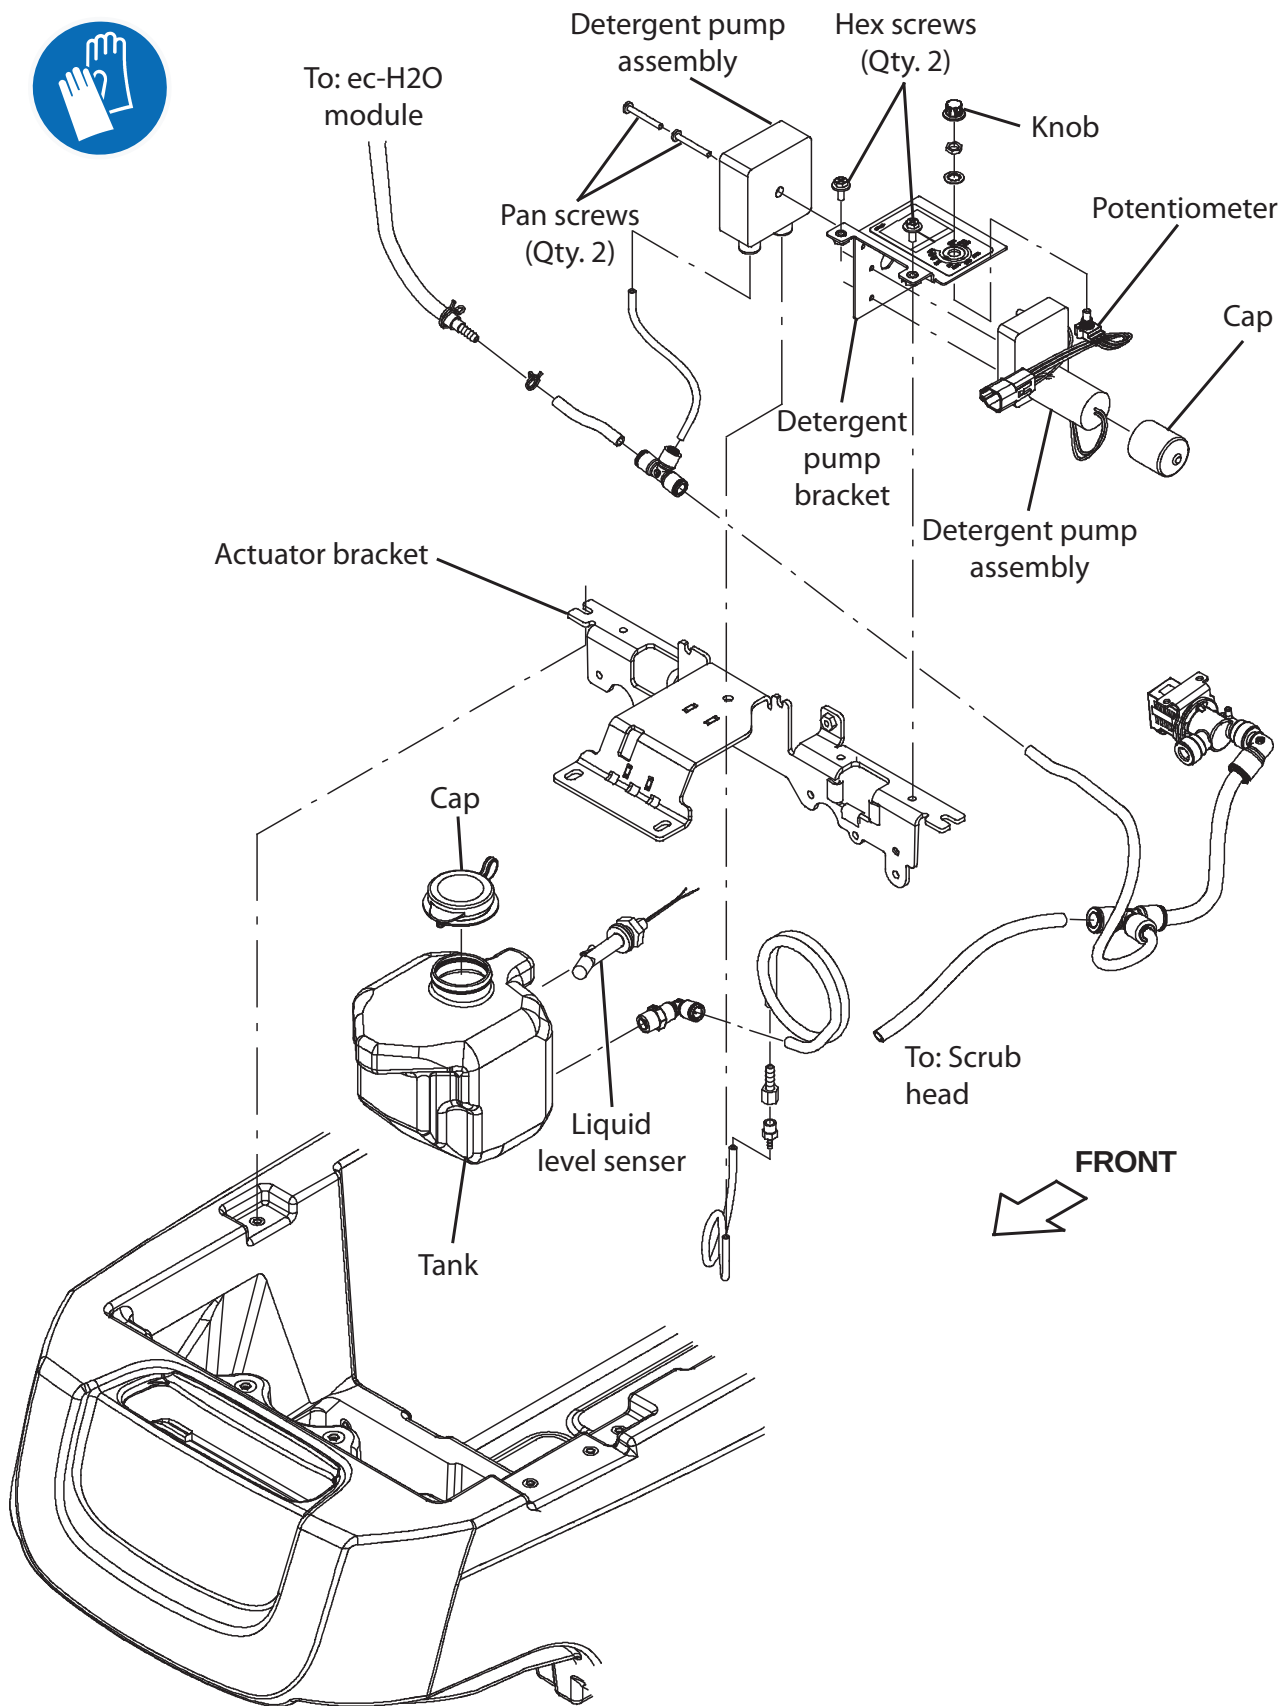

FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Turn the key to the OFF position.
2. Disconnect the battery cable from the machine.
3. Remove the hex screws securing the detergent pump bracket / detergent pump assembly to the actuator bracket.



4. Carefully remove the detergent pump bracket / detergent pump assembly from the machine.



5. If replacing detergent pump assembly, remove the pan screws securing the detergent pump assembly to the detergent pump bracket.
6. Install new detergent pump assembly onto the detergent pump bracket.
7. Reassemble / reinstall the detergent pump bracket / detergent pump assembly in reverse order of disassembly.

8. If replacing liquid level sensor, carefully lift the tank from the machine.



9. If necessary empty the solution from the tank.

10. Disconnect the main wire harness from the liquid level sensor.




11. Remove the liquid level sensor from the tank.



12. Reinstall the liquid level sensor in reverse order of disassembly.
13. Refill the tank.

REMOVING / INSTALLING THE RECOVERY TANK
RINSE PUMP (OPTION)

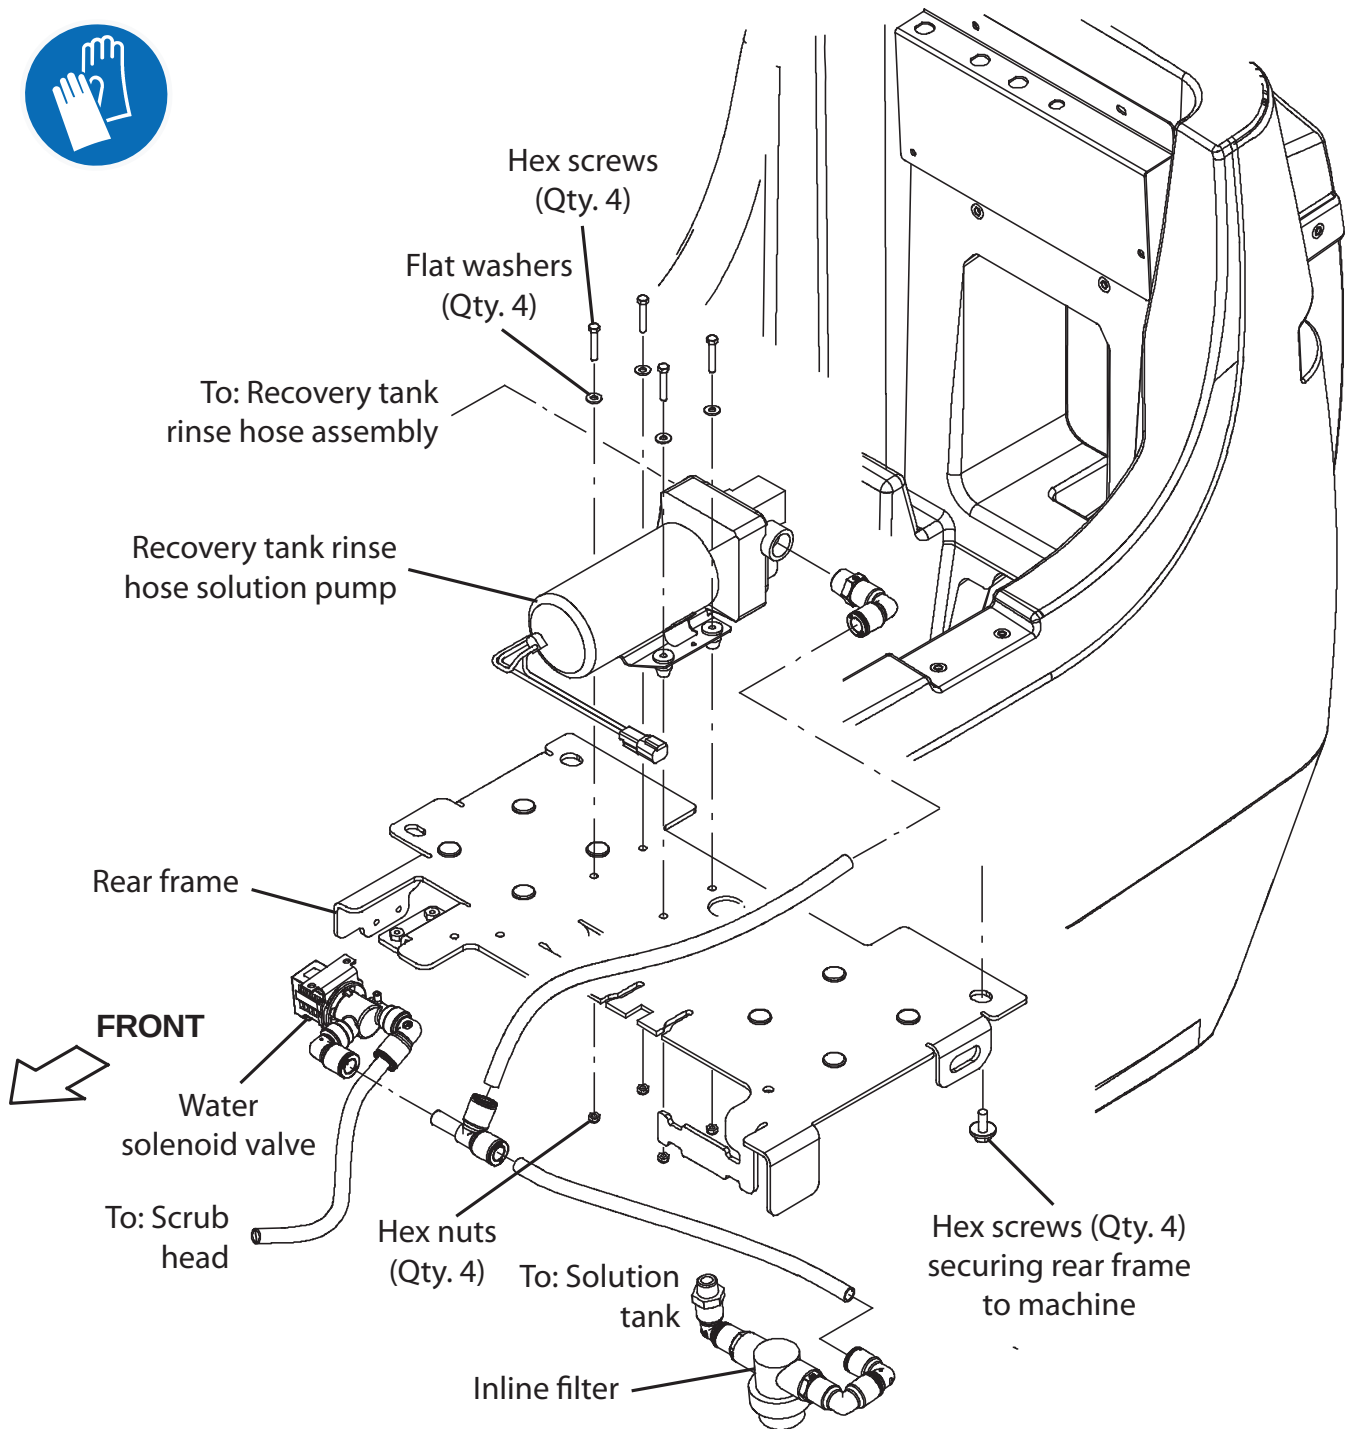


FOR SAFETY: Before leaving or servicing machine, stop on level surface, turn off machine, remove key, and set parking brake if equipped.

FOR SAFETY: When servicing machine, Disconnect battery connection and charger cord before working on machine.

1. Completely drain the solution tank and the recovery tank.
2. Turn the key to the OFF position.
3. Disconnect the battery cable from the machine.
4. Remove the rear squeegee assembly from the machine.
5. Completely lower the squeegee pivot bracket to access all hardware securing the recovery tank rinse pump to the rear frame.



6. Remove the hardware securing the recovery tank rinse pump to the rear frame.

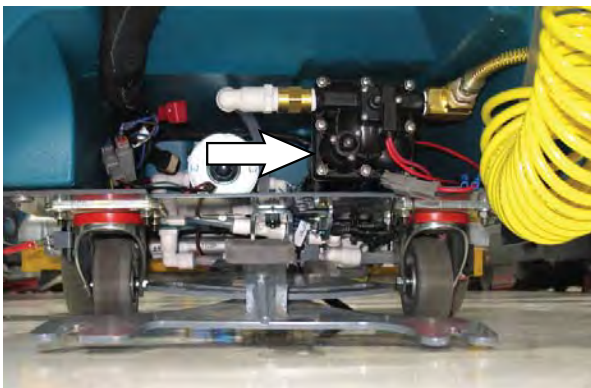

7. Disconnect all hoses from the recovery tank rinse pump.
8. Disconnect the main wire harness from the recovery tank rinse pump.
9. Remove the recovery tank rinse pump from the machine.
10. Reinstall the recovery tank rinse pump in reverse order of disassembly.

